



# INSTALLATION INSTRUCTIONS

## Street Fire HEI Module PN 5596


**Important:** Read these instructions before attempting the installation.

### Parts Included:

1 - Module                      1 - Heat Sink Compound

**WARNING:** Before installing the Module, disconnect the battery cables. When disconnecting the battery cables, always remove the Negative (-) cable first and install it last.

1. Disconnect the wiring from the distributor cap.
2. Remove the distributor cap without disconnecting any of the spark plug wires.
3. Remove the rotor.
4. Disconnect the wiring from the Module.
5. Remove the two screws and lift the Module out.
6. Apply a liberal amount of heat sink to the new Module and position it in the housing and install the retaining screws.
7. Reinstall the connectors, rotor and cap.

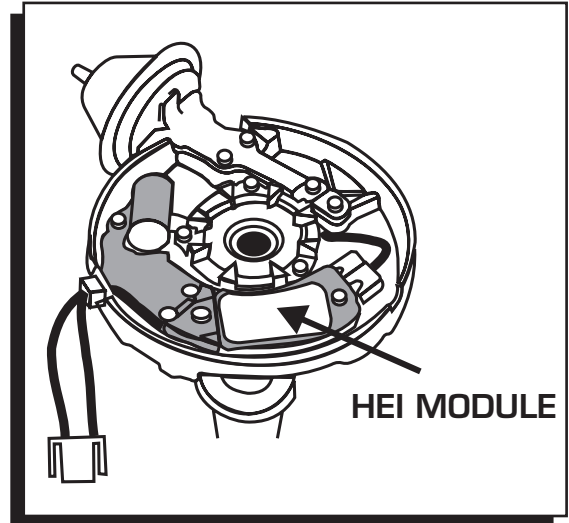

**Figure 1** Replacing the Module.