
Instruction Sheet Front Radius Rod Bushing


Suits: VE Commodore

N.B: This instruction sheet should be used in conjunction with the workshop manual

- 1. Raise the front of the vehicle and place on chassis stands.
- **2.** Remove the front wheels and front radius rod to chassis retaining bolt.
- **3.** Remove OE wheel aligning shims and discard. Remove OE plastic clip and discard (refer to Fig. 1)
- **4.** Fit supplied castor lock washers to both sides of chassis clevis (from outside of clevis).
- 5. Install new bushing to arm (refer image below).
- 6. Grease ID of bushing and re fit arm to vehicle.
- **7.** Fit the <u>supplied</u> locking nut to the OE bolt and tension to manufacturers specifications.
- 8. Refit front wheels, lower vehicle and road test.

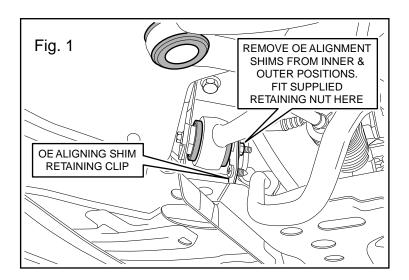

Voiding Orientation

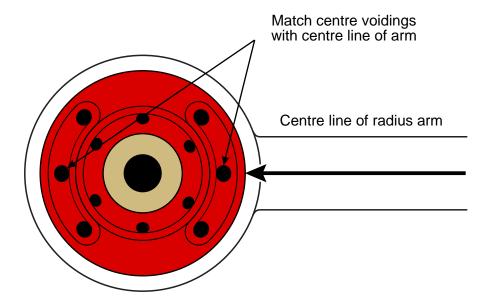

NOTE: It is recommended that a wheel alignment be performed directly after fitment.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.