 


AUXILIARY HEATER AH454/12 VOLT

Heater • Mounting Brackets • Instruction Sheet • Installation Kit

INSTALLATION KIT INCLUDES:

INSTALLATION DIAGRAM:
















Grommets

Clamps

(1) Rocker Switch Screws



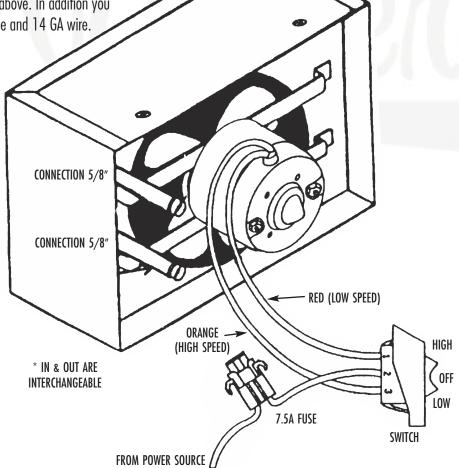

INSTALLATION INSTRUCTIONS:

- 1. This versatile heater may be mounted either horizontally or vertically. Typical locations include floor, wall or under dash.
- 2. Route the heater hose to the engine compartment, using grommets through the fire wall, cut the existing hose, add and clamp the Y splicer then run the new hose and clamp to the heater. Avoid any sharp bends which may kink the hose and restrict proper flow. Run Y splicer with the coolant flow. (See splicer diagram.)
- 3. Mount the switch panel in a convenient under dash location. Route power supply wire from fuse block to switch, including the inline 7.5A amp fuse. Connect the red and orange wires from the heater to the switch, extending them where necessary. And finally, ground the heater case to the chassis of the vehicle. (See the connection diagram below.)

