

# AUXILIARY HEATER AH500/12 VOLT

## **CONTENTS:**

 
Heater • Mounting Brackets • Instruction Sheet • Installation Kit

## **INSTALLATION KIT INCLUDES:**



 


 
Grommets












(1) 7.5A Inline Fuse

### **INSTALLATION DIAGRAM:**

Materials required to install this heater are available in the kit shown above. In addition you will need 5/8" heater hose and 14 GA wire.

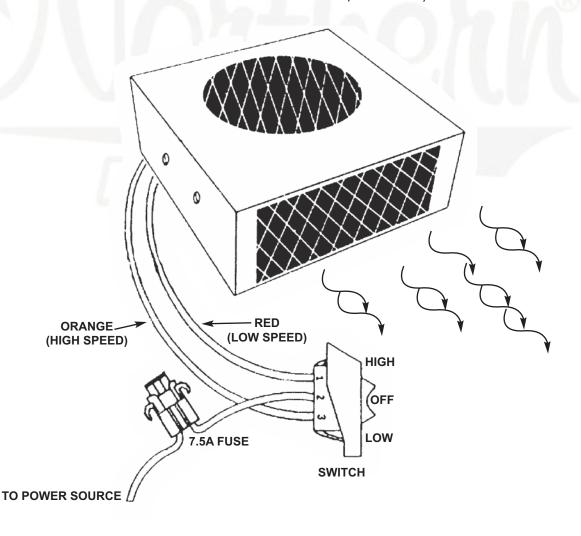

### **INSTALLATION INSTRUCTIONS:**

- 1. This versatile heater may be mounted either horizontally or vertically. Typical locations include floor, wall or under dash.
- 2. Route the heater hose to the engine compartment, using grommets through the fire wall, cut the existing hose, add and clamp the Y splicer then run the new hose to the heater, remove cover and clamp to the heater core. Avoid any sharp bends which may kink the hose and restrict proper flow. (See splicer diagram.)
- 3. Mount the switch panel in a convenient under dash location. Route power supply wire from fuse block to rocker switch, including the inline 7.5A amp fuse. Connect the red and orange wires from the heater to the switch, extending them where necessary. And finally, ground the heater case to the chassis of the vehicle. We recommend all electrical connections are terminated or soldered and taped. (See the connection diagram below.)

