

OEM[®]

Tools for Professionals

Adjustable Heavy Duty Pitman Arm Puller

- Services cars and light trucks $\frac{3}{4}$ ton.
Can be used for other applications such as bearing, collar, and gear removal.

Forged adjustable jaws

Two clamp bolts lock jaws together

Not for impact wrench use

27170

INSTRUCTIONS

1. Remove fastener nut from Pitman Arm shaft
2. Adjust the jaws and pressure screw to fit evenly for pulling
3. Do not use impact wrench on pressure screw
4. After adjusting pressure screw on Pitman Arm shaft, tighten one or two turns more to apply pressure on shaft
5. Use large hammer to strike pressure screw so Pitman Arm will loosen from shaft
6. If Pitman Arm is still on shaft, tighten pressure screw another turn before striking with hammer

Caution: Always wear safety glasses