

# HEADLIGHT HALO INSTALLATION GUIDE

TOOLS:









STEP # I: IN ORDER TO OPEN THE LIGHT WE WILL FIRST NEED TO HEAT THE HOUSING. IF USING A HEAT GUN BEGIN BY HEATING THE SEAL EVENTY WHILE CONSTANTLY MOVING THE HEAT GUN. IF USING AN OVEN: PREHEAT TO 225°F AND PLACE THE LIGHT IN THE OVEN FOR IO MINUTES.



- PRE-HEAT THE OVEN TO 225°F (OR 100°C)
- CENTER LIGHT IN OVEN FOR EVEN HEATING
- SET TIMER FOR IO MIN (GAS OR ELECTRIC)

WARNING
HEADLIGHT WILL BE \*HOT\*
USECAUTION WHEN HANDLING

B) Eventually the lens will begin to part with the housing. Be gentle and take your time here.

### OPENING THE HEADLIGHT

A) Using a flathead screwdriver, begin lifting the lens from the housing. Slowly work your way around the light several times.




C) If the lens does not separate re-heat the light for 5 minutes and try again

## INSTALL THE RINGS:



A) Begin by removing the 3M tape backing and fitting the ring to the headlight housing

B) Turn the healdight housing over and check the fitment from the back. The ring should sit flush with the housing.

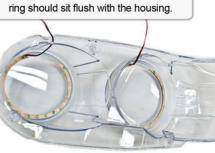

C) Optional: Use additional adhesive to hold the ring in place on the housing.

#### TEST THE RINGS:

A) You can test the rings using your vehicle's battery or use a **12V** drill battery.

- Connect the RED wire to "+"
- Connet the BLACK wire to "-"

B) You may test the rings before you install but it is also important to test the rings again before you seal the lens to the headlight.



\*Example of using a drill battery to test the Halo Rings.



LIGHT

#### CONTINUED....

#### **ROUTE THE WIRES:**

A) In order to route the wires out of the headlight, you will need to remove screws from housing with a phillips screwdriver to get to vent material.

- Poke a small hole in the vent membrane material.
- · Pull wire through the hole.





#### REASSEMBLING THE HEADLIGHT:

- · Peel off any of the left over factory gasket seal.
- · Check that there is no dust or debris in the light.
- · Use compressed air to blow out before reassembly.

#### RE-SEALING THE HEADLIGHT:

\*We recommend GE brand "Silicone II" 100% silicone adhesive. this can be found at any Lowes or Home Depot.

A) Apply a liberal amount of silicone into the channel of the headlight that seals the lens onto the housing. Make sure to use an even bead of sealant all the way around the light.



#### **ALMOST DONE!:**

Now clamp the lens to the housing for the recommended time for the silicone to fully set. (See instructions on tube for the recommended cure time)



\*Additional Sealant
If you feel that the seal is not
completely watertight you can add
a "wicking" silicone over the dried seal





Each headlight is different if you do not like using the clamps to hold the light for curing you may also try vise-grips, ratchet straps, or any other means to hold the lens and the housing together.

#### WIRING THE HEADLIGHTS:

Option #1- Connect to the parking lights.

This is great if you have white or amber halos that you want to turn on and off by using the factory headlight switch. (Halos will stay on with the headlights).

Option #2- Wireless Controller.

Visit www.AutomotiveLightStore.com/remotesandswitches.aspx to see the selection of controllers.

Option #3- Toggle Switch.





