

# TOOLS:















 




USING THE HEATING METHOD:
IF USING A HEAT GUN BEGIN BY HEATING THE SEAL EVENLY
WHILE CONSTANTLY MOVING THE HEAT GUN. IF USING AN OVEN:
PREHEAT TO 225°F AND PLACE THE LIGHT IN THE OVEN FOR IO MINUTES.

### **OPENING THE HEADLIGHT:**







B) Begin seperating the headlight lens and projector bezel from the headlight housing using a Phillips Screwdriver. Pry through the sealant until the two pieces begin to seperate. This step may be difficult, take your time.



C) Once the lens is seperated from the housing, remove these (4) Phillips Screws from the back of the projector housing.

## INSTALLING THE HALO RINGS:





D) Now drill a small hole into the bottom of the projector bezel. The hole should be just large enough to route the halo wires.



E) Here is an image showing the wires routing through the back of the projector housing. Be sure to route the wires first before installing the halo.



You may skip to the re-sealing of the headlight step if you are only installing a halo kit.

#### INSTALLING THE CONCEPT DRLS:



G) Remove the (4) seperate the DRL is


G) Remove the (4) Phillips Screws in order to seperate the DRL housing from the headlight.



H) To expose the stock DRL's you must seperate the chrome DRL housing from the black mounting plate. Remove a few phillips screws in order to do so.



I) Once you have seperated these two pieces you can move onto the next step. You may disconnect the stock DRL circuit board, you will not need to re-install this piece.

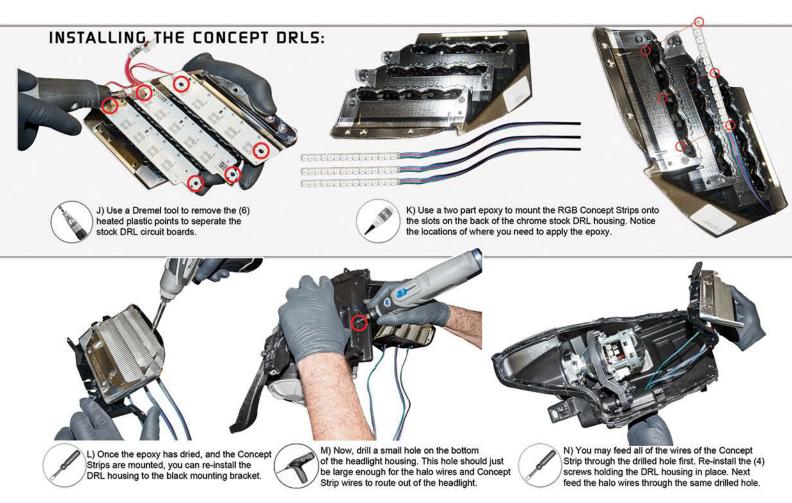

#### **RE-SEALING THE HEADLIGHT:**

- · Make sure there is no dust or debris inside the housing
- · Use compressed air to remove any debris
- · Re-install any parts of the headlight that were removed
- · Make sure no wires are tangled and are routed properly
- · Tighten down all screws that were removed

Using ORACLE Headlight Sealant or an equivalent exterior grade silicone:

- Form a solid bead of silicone in between the headlight lens and the headlight housing.
- Compress the lens and headlight housing together.
- · Wipe away any excess silicone from the headlight.
- · Allow enough time for the silicone to cure.



#### WIRING THE HEADLIGHTS:

Option #1- Connect to the parking lights.

This is great if you have white or amber halos that you want to turn on and off by using the factory headlight switch. (Halos will stay on with the headlights).

Option #2- Wireless Controller.

