

# 7" OCULUS BI-LED HEADLAMPS

## WHAT YOU NEED TO KNOW:

### WIRING INFO:

For best overall control of the Oculus DRL Halo lights- connect the power lead wire to a switch (if you have an existing switch bank, S-Pod, etc). This will allow you to control the LEDs and leave the lights on when your Jeeps is parked. If you do not have a switch and would rather the lights turn on and off automatically use the included Add-A-Circuit to easily and safely tap power from the fuse panel. We recommend to use fuse location "M9" in the under hood fuse box.




### ADD-A-CIRCUIT INFORMATION

The output wire has a blue butt connector that crimps to the wiring harness lead.

This fuse powers the DRL. If the DRLs do not come on this is the fuse to check.


The original fuse goes into this location. A spare fuse is shipped in this location.

Plugs into the original fuse location (#M9).

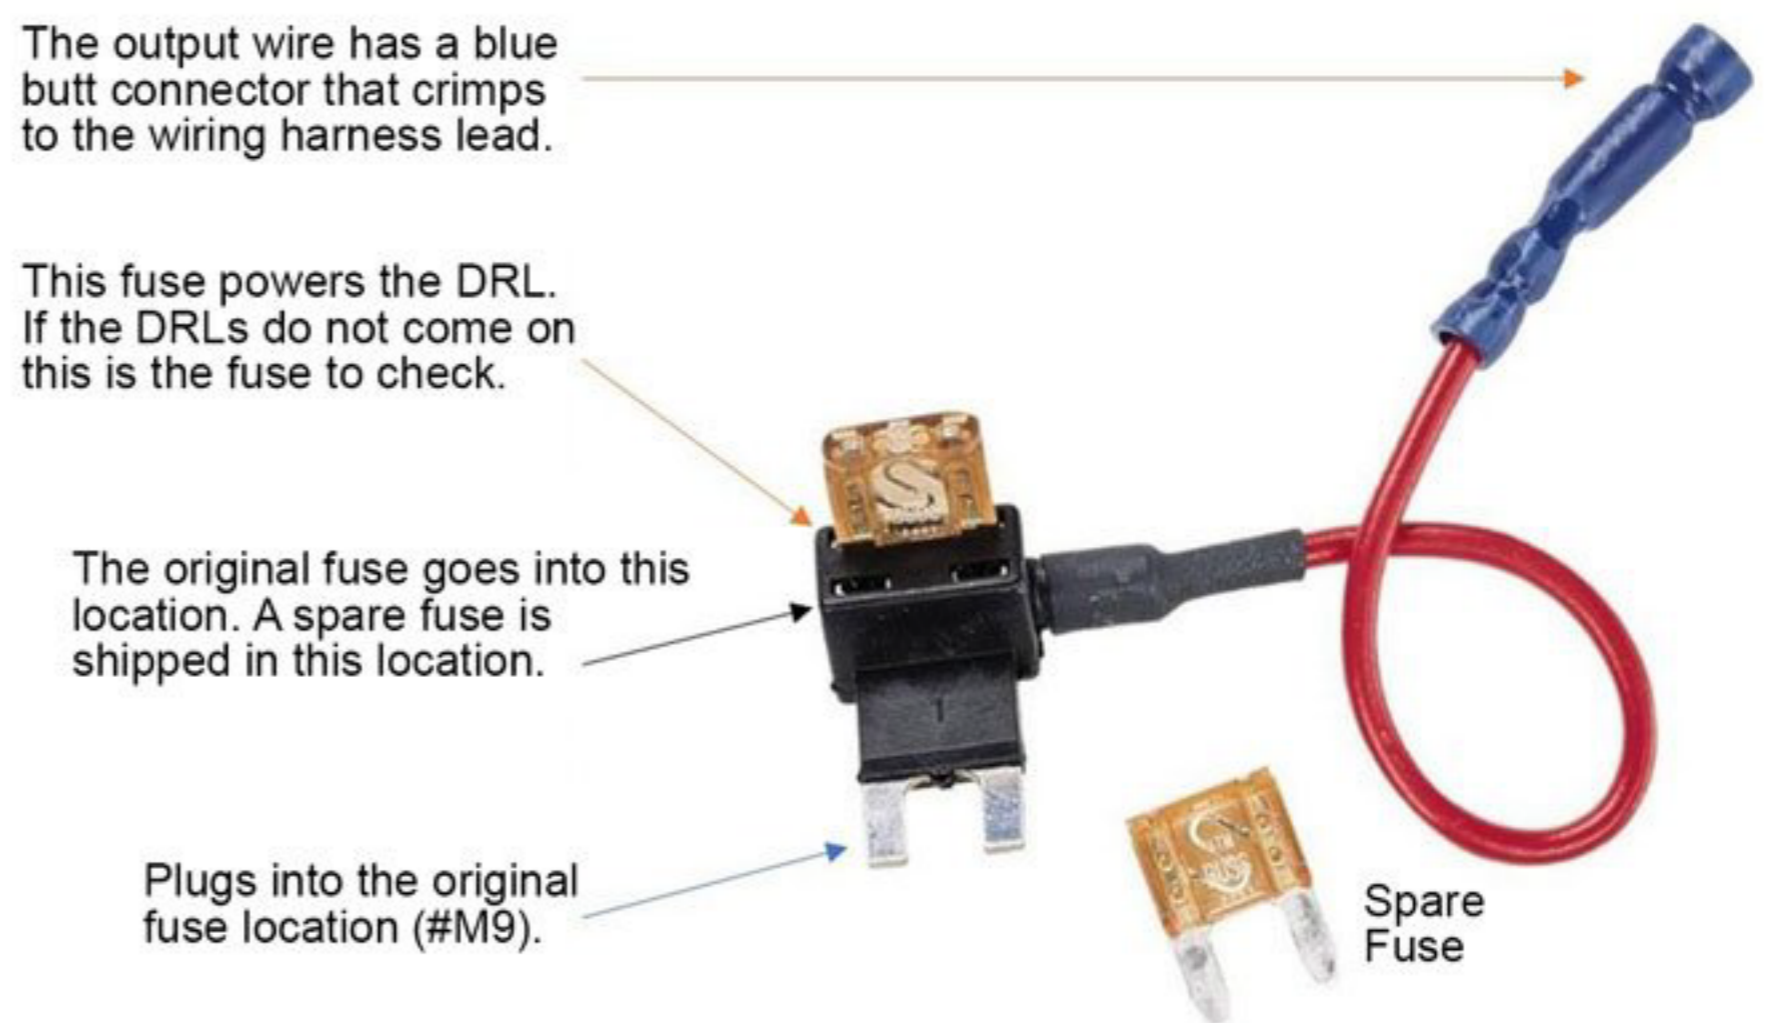

### USE THE ORACLE FAQ PAGE:

All Oculus Bi-LED Headlights come from the factory with a baseline headlight level but depending on your lift, tires, etc you may need to adjust the beam level to insure maximum light on road for best visibility while creating minimal glare. Refer to the owner's manual for details on adjusting the beam angle for your JK.

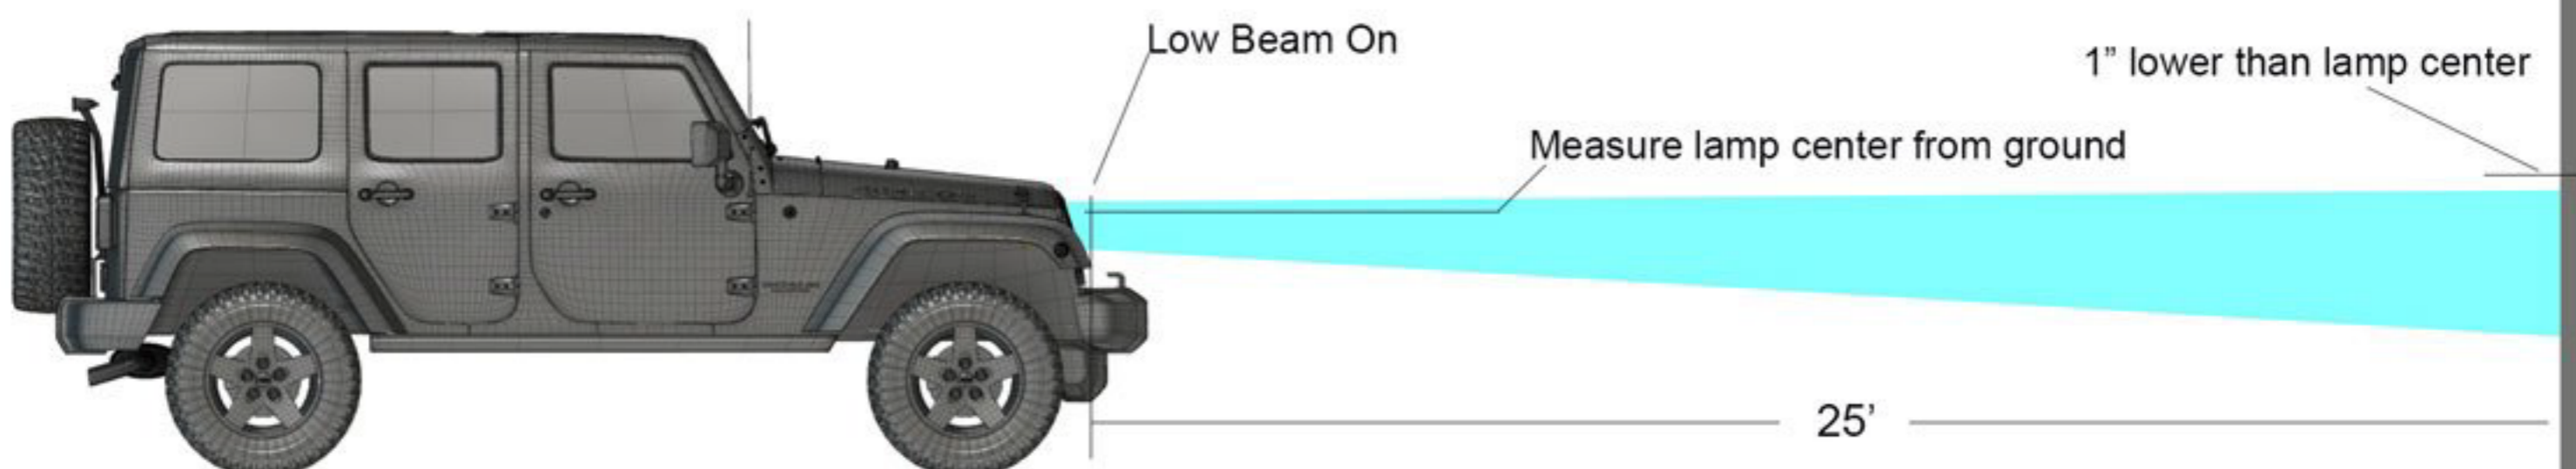

**ORACLE**  
LIGHTING

Discover other custom and factory headlights on our website.