

INSTALLATION INSTRUCTIONS

Failure to follow these instructions can severely shorten the life of this part and may void the part's warranty.



Installation Process - FORD TFI Ignition Module

- A. Shut off engine

- B. Remove the wire harness connector from the end of the old module. Use a screwdriver if needed to lift the latch over the catch point on the module.

- C. Remove the two screws that retain the module. Examine the screws for excess corrosion. Replace if needed.

- D. **IT IS ABSOLUTELY REQUIRED THAT YOU APPLY THE THERMAL GREASE PROVIDED TO THE METAL SIDE OF THE MODULE!** Failure to do so will shorten the life of the module and void the warranty. Clean the mounting surface of old grease, dirt and any corrosion found.

- E. Install the new module by installing the two screws evenly and being sure to maintain even contact with the mounting area. Plug in the connectors in reverse order from above.

- F. If the engine fails to start after careful installation of the new module, check the following:
 - 1. Make sure that you have proper voltage at the module.
 - 2. Check that the pick-up coil has continuity.

Models Covered:

IS7-1-17-08

7019
7040
7048
7049
7050
7051
7089