

INSTALLATION INSTRUCTIONS

Failure to follow these instructions can severely shorten the life of this part and may void the part's warranty.



Installation Process - FORD TFI Ignition Module

- A. Shut off engine
- B. Remove the wire harness connector from the end of the old module. Use a screwdriver if needed to lift the latch over the catch point on the module.
- C. Remove the two screws that retain the module. Examine the screws for excess corrosion. Replace if needed.
- D. **IT IS ABSOLUTELY REQUIRED THAT YOU APPLY THE THERMAL GREASE PROVIDED TO THE METAL SIDE OF THE MODULE!** Failure to do so will shorten the life of the module and void the warranty. Clean the mounting surface of old grease, dirt and any corrosion found.
- E. Install the new module by installing the two screws evenly and being sure to maintain even contact with the mounting area. Plug in the connectors in reverse order from above.
- F. If the engine fails to start after careful installation of the new module, check the following:
 1. Make sure that you have proper voltage at the module.
 2. Check that the pick-up coil has continuity.

Models Covered:

IS7-1-17-08

| |
|------|
| 7019 |
| 7040 |
| 7048 |
| 7049 |
| 7050 |
| 7051 |
| 7089 |