



INSTALLATION INSTRUCTIONS

Failure to follow these instructions can severely shorten the life of this part and may void the part's warranty.

Installation Process

CAUTION: DO NOT REMOVE PAPER SPACER ON SENSOR TIP.

The paper spacer about .030 inches thick pasted on the tip of the sensor probe, should not be removed prior to installation. It provides the required air gap between the sensor and the engine moving parts. After installation and the engine is started, it gets sheared off. If for some reason a sensor is pulled out and has to be reinstalled, a similar spacer should be glued to the sensor tip.

Models Covered:

96117
96083