

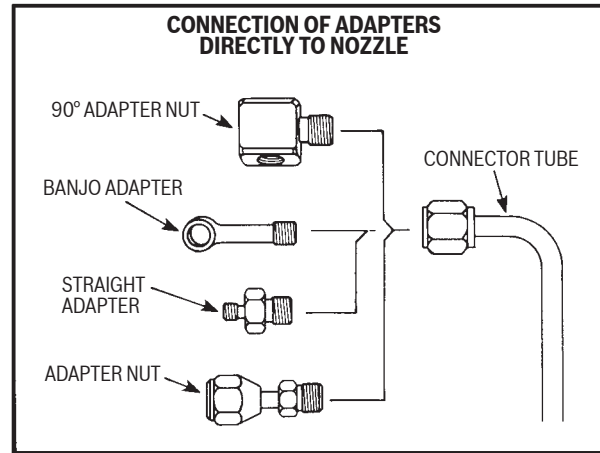
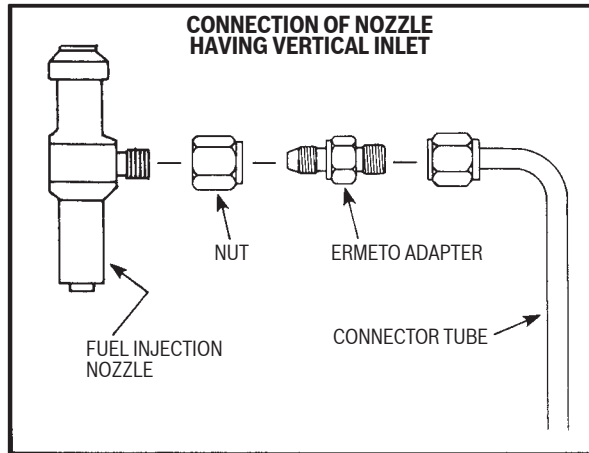


Accessory Kit

The illustrations below show how easily various nozzles that require testing can be connected to the OTC adapters and connectors. Refer to the CONNECTOR APPLICATION CHART on the back side of this sheet to help in the selection of accessories you require.

⚠ WARNING: Prior to operation, be sure all connections in the system have been securely fastened. Any leaks from fittings under pressure could penetrate the skin and cause serious injury!

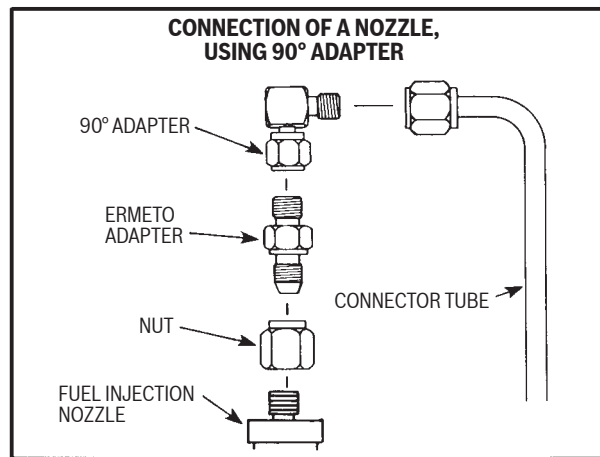

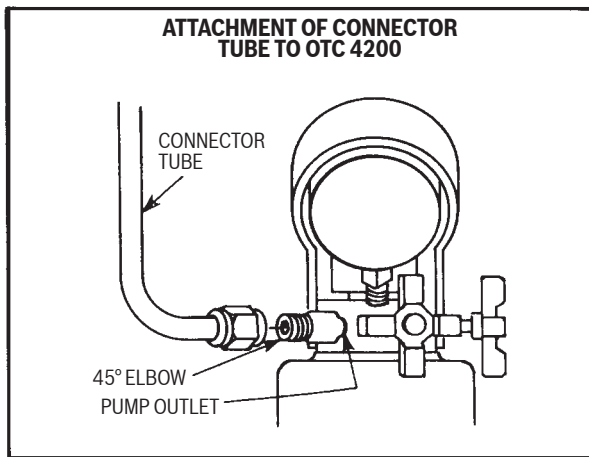
















44026 STRAIGHT ADAPTER
3/4-16 External R.H. Thd. to 9/16-18 R.H. Thd.
(Internal Ermeto 24) Caterpillar Adapter.

201920 ADAPTER NUT
(M14 X 1.5 External to 5/8"-18 UNF Internal)
Connectors OTC Y-900 "Nozl-Rater" to Other
Fittings Used in the Industry.

Operating Instructions

APPLICATION CHART

| Adapter No. | Description | I.H. Truck | I.H. Farm Const. | John Deere | Oliver & Allis | Waukesha | Case, Ford Tractor, Massey & Perkins | White | Mack | Deutz | GM Autos | VW, Audi & Mercedes Autos | Mercedes & Magaris Truck |
|-------------|---|------------|------------------|------------|----------------|----------|--------------------------------------|-------|------|-------|----------|---------------------------|--------------------------|
| 36352 |  Fuel line assembly, 9/16"-18 R.H. thd. with 24° on pipe. | X | X | X | X | X | X | X | X | X | X | X | X |
| 23622 |  Adapter nut 12 X 1.5 mm internal R.H. thd. to 1/2"-20 internal L.H. thd. | X | | X | X | X | X | X | | X | X | X | |
| 23623 |  Adapter nut 14 X 1.5 mm internal R.H. thd. to 1/2"-20 internal L.H. thd. | X | | X | X | X | X | | X | X | | | X |
| 23624 |  Adapter nut 18 X 1.5 mm internal R.H. thd. to 1/2"-20 internal L.H. thd. | | X | | X | X | X | | | | | | |
| 201917 |  Adapter nut 9/16"-18 internal R.H. thd. to 1/2"-20 internal L.H. thd. | X | | X | X | X | X | X | | | X | | |
| 23626 |  Adapter nut 5/8"-18 internal R.H. thd. to 1/2"-20 internal L.H. thd. | X | | | X | X | X | | | | | | |
| 201912 |  Adapter nut 3/4"-16 internal R.H. thd. to 1/2"-20 internal L.H. thd. | | | | | | | | | | | | |
| 201913 |  Adapter nut 9/16"-24 internal R.H. thd. to 1/2"-20 internal L.H. thd. | X | | | | | | | | | | | |
| 23693 |  Straight adapter, 1/2"-20 external L.H. thd. (Ermeto 24° & 90° seat) to 9/16"-18 external R.H. thd. (Ermeto 24°). | X | X | X | X | X | X | X | | | X | | |
| 23692 |  Straight adapter, 3/8"-24 external R.H. thd. to 9/16"-18 external R.H. thd. (internal Ermeto 24°). | X | | | | | | | | | | | |
| 23617 |  90° adapter, 9/16"-18 external R.H. thd. (Ermeto 24°) to 9/16"-18 internal R.H. thd. (Ermeto 24°). | X | X | X | X | | X | | X | X | X | X | X |
| 23621 |  Straight adapter, 9/16"-18 external R.H. thd. (Ermeto 24°) to 1/2"-20 external L.H. thd. (60° seat). | X | X | X | | | X | X | X | X | X | X | X |
| 208370 |  Banjo adapter, 9/16"-18 external R.H. thd. (24° seat). | | | X | | | | | | | | | |
| 201916 |  Adapter, 9/16"-18 external R.H. thd. to 9/16"-18 internal R.H. thd. ferrule. | | | X | | | | | | | | | |
| 208369 |  90° adapter, 9/16"-18 external R.H. thd. to 9/16"-18 internal R.H. thd. | X | | | | | | | | | | | |
| 38279 |  Straight adapter, 14 X 1.5 mm external R.H. thd. (Ermeto 60°) to 9/16"-18 external R.H. thd. (internal Ermeto 24°). | | | X | | | | | | | | | |
| 43468 |  Straight adapter, 1/2"-20 external R.H. thd. (Ermeto 24°) to 9/16"-18 external R.H. thd. (internal Ermeto 24°). | | | | | | | X | | | | | |