


Ford Injector Remover / Installer Kit

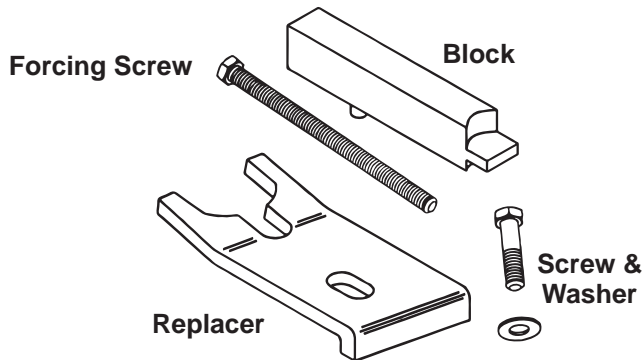

Application: 7.3L DIT diesel engines used on 1994 & newer 3/4- and 1-ton trucks, vans, & Super Duty trucks


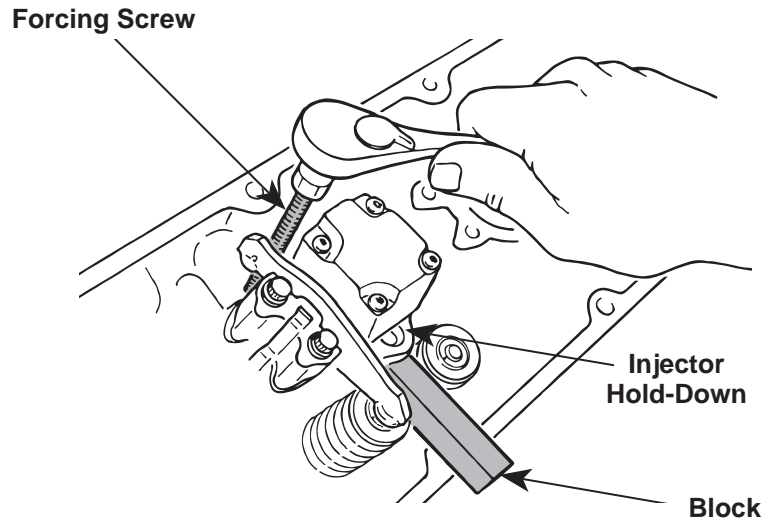


Figure 1

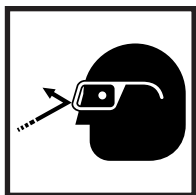

CAUTION: To prevent personal injury, wear eye protection that meets ANSI Z87.1 and OSHA standards.

Removing the Injector (Figure 1)

1. Place the block under the injector hold-down.
2. Thread the forcing screw through the top corner of the injector hold-down, and draw the injector out of the head.

Replacing the Injector (Figure 2)

1. Place the injector into the injector bore in the head.
2. Using the replacer and screw, seat the injector in the head by tightening the screw into the valve cover attaching screw hole.

Refer to the vehicle service manual for the complete procedure.

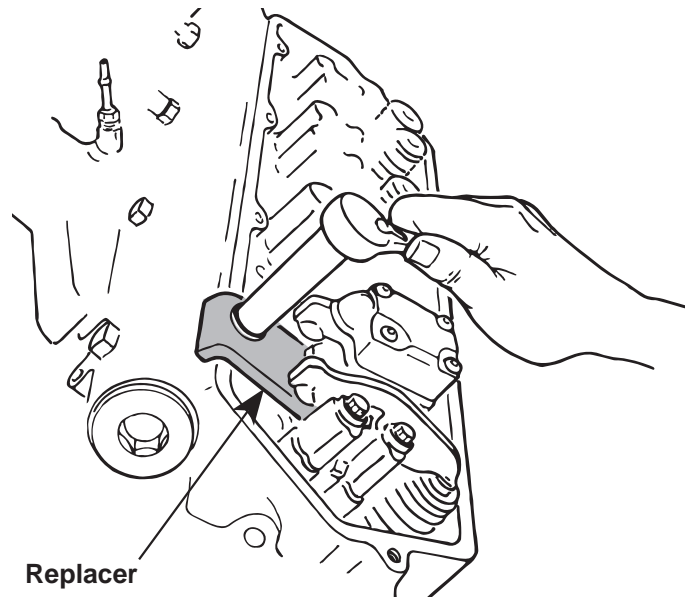


Figure 2