




Form No. 538623

Operating Instructions
for:



6695

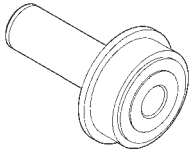

Ford Axle Shaft Seal Installer

Application: 1998–2004 Ford F-250, F-350, F-450, & F-550 4x4 trucks w/ vacuum-operated front axle

1. Place axle shaft seal onto axle shaft.
2. Position No. 6695 installer over seal as shown in Fig. 1, and use a hammer to seat seal onto shaft.
3. Insert axle shaft into axle housing.
4. Position No. 6695 installer over shaft as shown in Fig. 2, and use a hammer to install axle shaft seal into wheel knuckle.

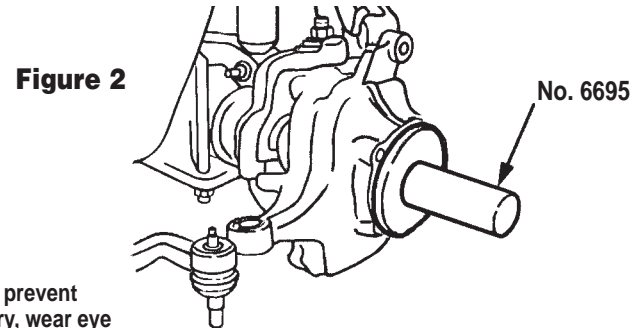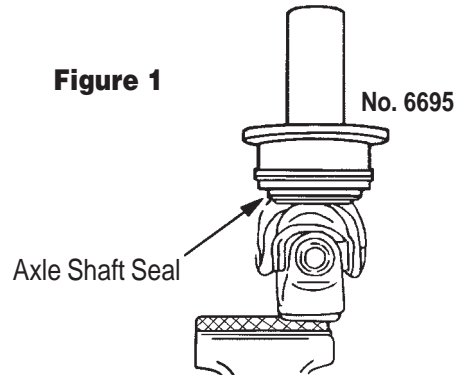

CAUTION: To prevent personal injury, wear eye protection that meets ANSI Z87.1 and OSHA standards.