

Made for




****READ THIS FIRST****

Changing Sources (iPod USB, iPod BT, USB, BT, or AUX)

- Press the BAND button until "XM" is displayed.
- Turn the tune knob until the source you want is displayed.
- Press the FWD >> button to select the displayed source.

(Actual radio appearance may differ from representation.)

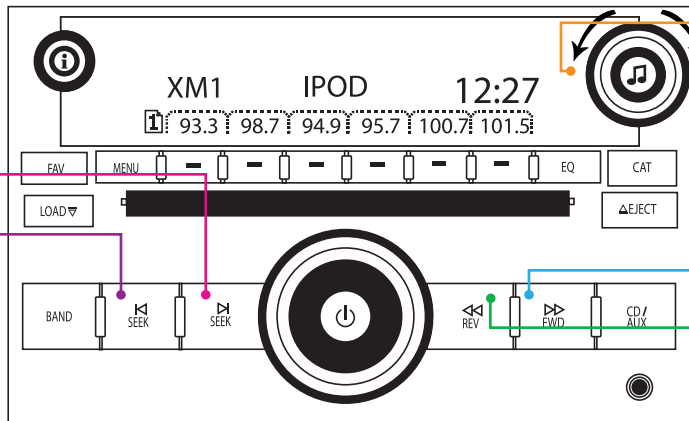

Press to fast forward current track.
Press again to resume play.

Press to rewind current track.
Press again to resume play.

Turn counter-clockwise to return to previous track.
Turn counter-clockwise to cycle backwards through songs or lists while in browse menu.

Turn clockwise to advance to next track.
Turn clockwise to cycle forward through songs or lists while in browse menu.

Press to enter into the browse menu.
Press to move forward one step while in the browse menu.

Press to move back one step while in the browse menu.

Browsing Example:

To select the song "Star-Spangled Banner" through the Artist category

1) Press "FWD>>" to enter into the browse menu

The radio will display "PL:List"

2) Turn the rotary knob clockwise until the radio displays "AR:Artist"

Press "FWD>>" to select
The radio will display "AR:All". All browsing menus are displayed in alphabetical order.

3) Turn the rotary knob clockwise until the radio displays "AR:Francis Scott Key"

Press "FWD>>" to select
The radio will display "AL:All". All browsing menus are displayed in alphabetical order.

4) Turn the rotary knob clockwise until the radio displays "AL:Patriot Hits Vol.1"

Press "FWD>>" to select
The radio will display "TR:All". All browsing menus are displayed in alphabetical order.

5) Turn the rotary knob clockwise until the radio displays "TR:Star-Spangled Banner"


Press "FWD>>" to select
The song will begin to play and the display will show the song title.

****READ THIS FIRST****

Changing Sources (iPod USB, iPod BT, USB, BT, or AUX)

- Press the Band button until "XM" is displayed.
- Turn the tune knob until the source you want is displayed.
- Press the FWD >> button to select the displayed source.

(Actual radio appearance may differ from representation.)

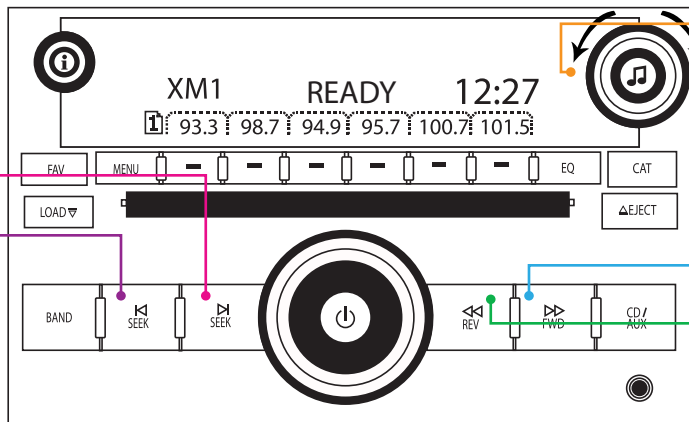


- Press to answer/end a call.
- Press to reject an incoming call.
- Press to play/pause streaming audio.

- Turn counter-clockwise to return to the previous track while streaming audio. Turn counter-clockwise to cycle backwards through settings menu.
- Turn clockwise to advance to the next track while streaming audio. Turn clockwise to cycle forward through settings menu.
- Press to enter into the settings menu. Press to move forward one step while in the settings menu.
- Press to move back one step while in the settings menu.

Settings Menu Example:

Adjusting the microphone volume

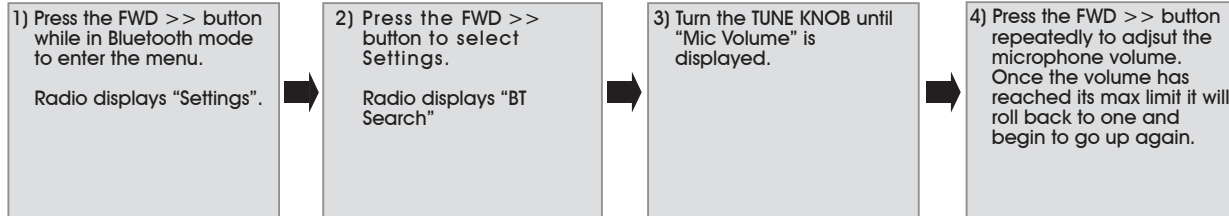




Android Devices, Thumb Drives

****READ THIS FIRST****

Changing Sources (iPod USB, iPod BT, USB, BT, or AUX)

- Press the BAND button until "XM" is displayed.
- Turn the tune knob until the source you want is displayed.
- Press the FWD >> button to select the displayed source.

(Actual radio appearance may differ from representation.)

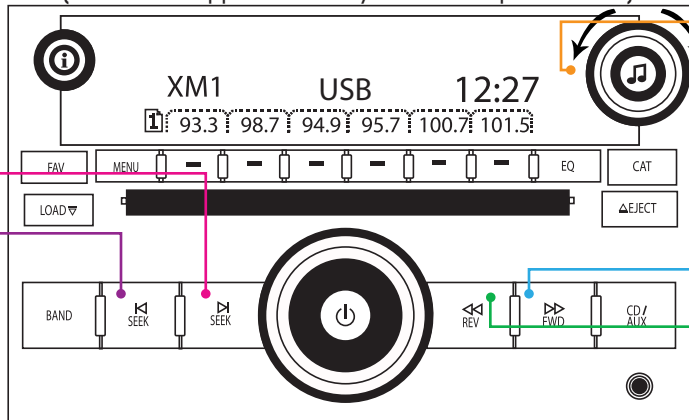

Press to fast forward current track.
Press again to resume play.

Press to rewind current track.
Press again to resume play.

Turn counter-clockwise to return to previous track.
Turn counter-clockwise to cycle backwards through songs or lists while in browse menu.

Turn clockwise to advance to next track.
Turn clockwise to cycle forward through songs or lists while in browse menu.

Press to enter into the browse menu.
Press to move forward one step while in the browse menu.

Press to move back one step while in the browse menu.

Browsing Example:

To select the song "Star-Spangled Banner" through the Folder category

1) Press the FWD>> button to enter the browse menu.
"FOLDER" will appear on your display.

2) Press the FWD>> button to select browse by Folder.
The list of Folders on your device will be displayed one at a time in alphabetical order.

3) Turn the tune knob clockwise until the radio displays "FO:Francis Scott Key"
Press the FWD>> button to select
The Files from the selected Folder will be displayed one at a time in alphabetical order.

4) Turn the tune knob clockwise until the radio displays "Patriot Hits Vol.1"
Press the FWD>> button to select
The song will begin to play and the display will show the song title.