 


NISSAN 350Z

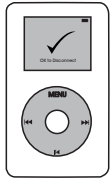

iPod

****READ THIS FIRST****

Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "Radio" button until "Sat" is displayed.
- Press the "Seek \curvearrowright " button until the source you want is displayed.
- Press the "Tune \sphericalangle " button to select the source.

*if available

Scan

- Press to exit browse menu
- Press while listening to iPod to toggle through random modes.

 
Radio Button - Press to enter into Sat mode or to switch modes within the Media Gateway

Seek \curvearrowright

- Press to advance to the next track
- Press to advance to the next option in the browse menu

Seek \curvearrowleft

- Press to go back to the previous track
- Press to go back to the previous option in the browse menu

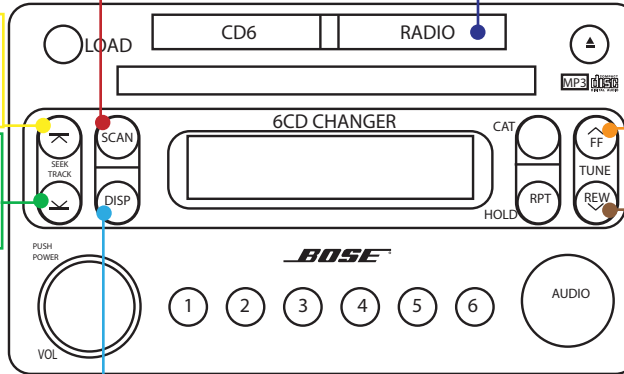

Tune \wedge Press to go back one step while in the browse menu

Tune \sphericalangle
• Press to enter into the browse menu
• Press to make a selection while in the browse menu

Display Button - Press to toggle through display modes.

Browsing Example:

To select the song "Star-Spangled Banner" through the Artist category

1) Press the Tune \sphericalangle button to enter into the Browse menu. The radio will display "PL:List"

2) Press the Seek \curvearrowright button until radio displays "AR:Artist". Prss the Tune \sphericalangle button to select. Radio will display "AR:All"

3) Press the Seek \curvearrowright button until radio displays "AR:Francis Scott Key". Press the Tune \sphericalangle button to select. Radio will display "AL:All".

4) Press the Seek \curvearrowright button until radio displays "AL:Patriot Hits Vol.1". Press the Tune \sphericalangle button to select. Radio will display "TR:All".

5) Press the Seek \curvearrowright button until radio displays "TR:Star-Spangled Banner". Press the Tune \sphericalangle button to select. Song will begin to play and the display will show track info.

(Actual Radio Appearance may differ from representation.)

NISSAN

350Z




****READ THIS FIRST****

 Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "Radio" button until "Sat" is displayed.
- Press the "Seek ∇ " button until the source you want is displayed.
- Press the "Tune \vee " button to select the source.

*if available

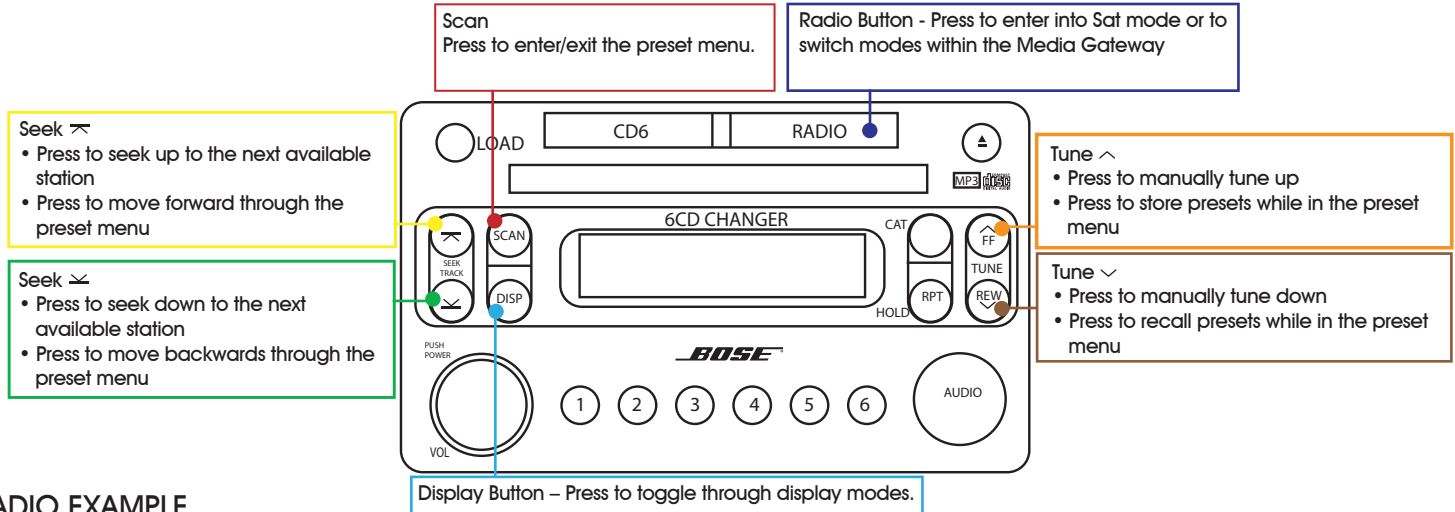

HD RADIO EXAMPLE

To select an HD radio station.

Press the 'SEEK ∇ ' button to get to the desired station. The Radio will auto lock on to an HD Radio Station if available example: 92.5 HD1MHZ. When locked into an HD Radio Station, press the 'SEEK ∇ ' button up to access multi-cast HD Station(s). (if available) example: 92.5 HD2 MHZ

To store a radio station into preset memory.

Press the "Scan" button to enter the Preset Menu. Press the "Seek ∇ " button until the location you want is displayed. Press the "Tune \wedge " button to store the preset. Radio will display "PR Saved"

To recall a station stored into preset memory.

Press the "Scan" button to enter the Preset Menu. Press the "Seek ∇ " button until the preset you want to recall is displayed. Press the "Tune \vee " button to recall the preset.

(Actual Radio Appearance may differ from representation.)

NISSAN

Maxima 2007-2008
Navigation Radios

****READ THIS FIRST****

Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "FM" button
- Press the "SAT" button
- Press "SEEK ►" until the source you want is displayed
- Press "TUNE ◀" to select the source

*if available



iPod

Seek ► Button

- Press to advance to the next track
- Press to advance to the next option in the browse menu

Seek ◀ Button

 
- Press to advance to the previous track
- Press to advance to the previous option in the browse menu

Tune ◀ Button

- Press to enter the browse menu
- Press to make a selection while in the browse menu

Tune ► Button

- Press to go back one step in the browse menu

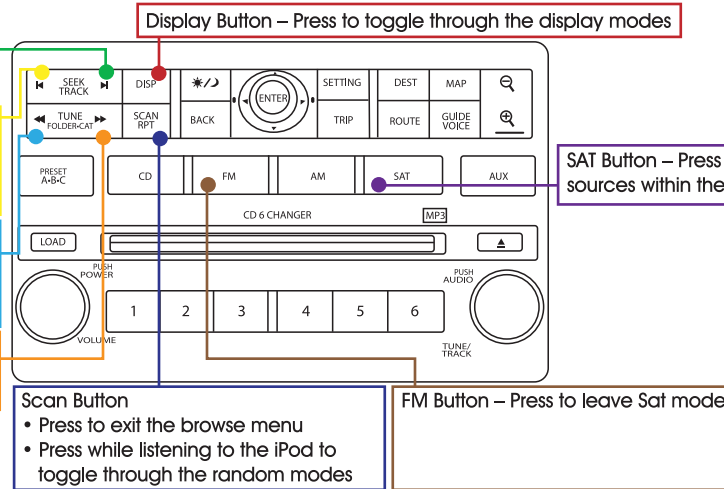

Browsing Example:

To select the song "Star-Spangled Banner" through the Artist category

1) Press the Tune ◀ button to enter into the Browse menu. The radio will display "PL:List".

2) Press the Seek ► button until radio displays "AR:Artist". Press the ◀Tune button to select. Radio will display "AR:All"

3) Press the Seek ► button until radio displays "AR:Francis Scott Key". Press the ◀Tune button to select. Radio will display "AL:All".

4) Press the Seek ► button until radio displays "AL:Patriot Hits Vol.1" Press the ◀Tune button to select. Radio will display "TR:All".

7) Press the Seek ► button until radio displays "TR:Star-Spangled Banner". Press the ◀Tune button to select. Song will begin to play and the display will show track info.

(Actual Radio Appearance may differ from representation.)
QRC022

NISSAN

Maxima 2007-2008
Navigation Radios



****READ THIS FIRST****

Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "FM" button
- Press the "SAT" button
- Press "SEEK ►" until the source you want is displayed
- Press "TUNE ◀" to select the source

*if available

Seek ► Button

- Press to seek up to the next available station
- Press to cycle forward through the preset menu

Seek ◀ Button

- Press to seek down to the next available station
- Press to cycle backwards through the preset menu

 
Tune ◀ Button

- Press to manually tune down
- Press to recall a preset stored into memory while in the preset menu

Tune ► Button

- Press to manually tune up
- Press to store a preset while in the preset menu

Display Button – Press to toggle through the display modes

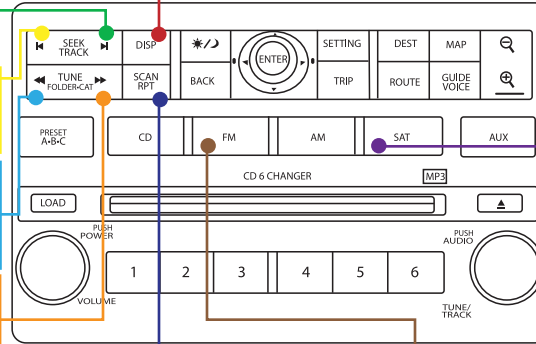

SAT Button – Press to enter SAT mode or change sources within the Media Gateway

Scan Button – Press to enter or exit the preset menu

FM Button – Press to leave Sat mode

HD RADIO EXAMPLE

To select an HD radio station.

Press the 'SEEK ►' button to get to the desired station. The Radio will auto lock on to an HD Radio Station if available example: 92.5 HD1 MHz When locked into an HD Radio Station, press the 'SEEK ►' button to access multi-cast HD Station(s). (if available) example: 92.5 HD2 MHz

To store a radio station into preset memory.

Press the "Scan" button to enter the Preset Menu. Press the "Seek ►" button until the location you want is displayed. Press the "Tune ►" button to store the preset. Radio will display "PR Saved"

To recall a station stored into preset memory.

Press the "Scan" button to enter the Preset Menu. Press the "Seek ►" button until the preset you want to recall is displayed. Press the "◀Tune" button to select the preset

(Actual Radio Appearance may differ from representation.)

NISSAN

Frontier, Versa, Xterra



iPod

****READ THIS FIRST****

Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "Radio" button until "Sat" is displayed.
- Press the "Seek ▲" button until the source you want is displayed.
- Press the "Tune ▼" button to select the source.

*if available

Radio Button - Press to enter into Sat mode or to switch modes within the Media Gateway

 
Display Button – Press to toggle through display modes.

Seek ▲

- Press to advance to the next track
- Press to advance to the next option in the browse menu

Seek ▼

- Press to go back to the previous track
- Press to go back to the previous option in the browse menu

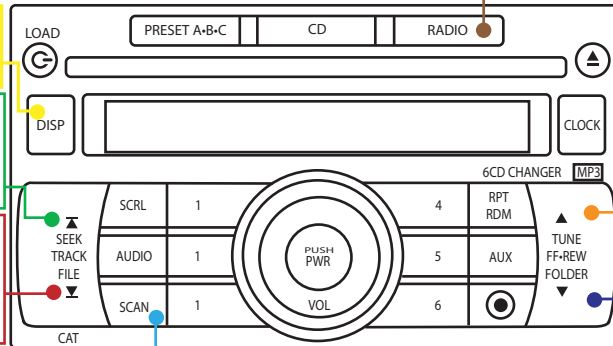

Tune ▲

- Press to go back one step while in the browse menu

Tune ▼

- Press to enter into the browse menu
- Press to make a selection while in the browse menu

Scan

- Press to exit browse menu
- Press while listening to iPod to toggle through random modes.

Browsing Example:

To select the song "Star-Spangled Banner" through the Artist category

1) Press the Tune ▼ button to enter into the Browse menu. The radio will display "PL:List"

2) Press the Seek ▲ button until radio displays "AR:Artist". Press the Tune ▼ button to select. Radio will display "AR:All"

3) Press the Seek ▲ button until radio displays "AR:Francis Scott Key". Press the Tune ▼ button to select. Radio will display "AL:All".

4) Press the Seek ▲ button until radio displays "AL:Patriot Hits Vol.1". Press the Tune ▼ button to select. Radio will display "TR:All".

7) Press the Seek ▲ button until radio displays "TR:Star-Spangled Banner". Press the Tune ▼ button to select. Song will begin to play and the display will show track info.

(Actual Radio Appearance may differ from representation.)

QR026

NISSAN

Frontier, Versa, Xterra



****READ THIS FIRST****

Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "Radio" button until "Sat" is displayed.
- Press the "Seek ▲" button until the source you want is displayed.
- Press the "Tune ▼" button to select the source.

*if available

Radio Button - FM/AM/SAT button – Press to enter into sat mode or to switch modes within the media gateway

 
Display – press to toggle through display modes

Seek ▲
• Press to seek up to the next available station
• Press to move forward through the preset menu

Seek ▼
• Press to seek down to the next available station
• Press to move backwards through the preset menu

Tune ▲
• Press to manually tune up
• Press to store presets while in the preset menu

Tune ▼
• Press to manually tune down
• Press to recall presets while in the preset menu

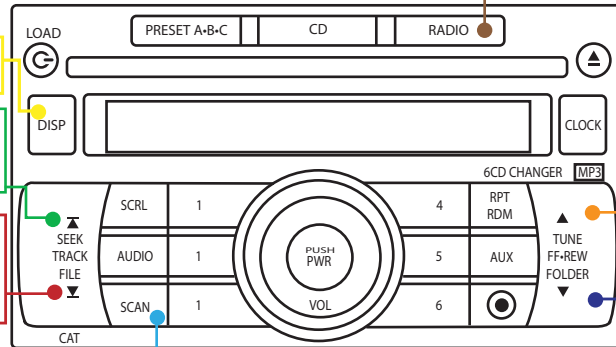

Scan – Press to enter/exit the browse menu.

HD RADIO EXAMPLE

To select an HD radio station.

Press the 'SEEK ▲' button to get to the desired station. The Radio will auto lock on to an HD Radio Station if available example: 92.5 HD1 MHZ
When locked into an HD Radio Station, press the 'SEEK ▲' button up to access multi-cast HD Station(s). (if available) example: 92.5 HD2 MHZ

To store a radio station into preset memory.

Press the "Scan" button to enter the Preset Menu. Press the "Seek ▲" button until the location you want is displayed. Press the "Tune ▲" button to store the preset. Radio will display "PR Saved"

To recall a station stored into preset memory.

Press the "Scan" button to enter the preset menu. Press the "Seek ▲" button until the preset you want to recall is displayed. Press the "Tune ▼" button to recall the preset.

(Actual Radio Appearance may differ from representation.)

NISSAN Quest



➔ iPod

****READ THIS FIRST****

Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "FM/AM/SAT" button until "Sat" is displayed
- Press the "Seek ▲" button until the source you want is displayed
- Press the "Tune ▼" button to select the source

*if available

Seek ▲

- Press to advance to the next track
- Press to advance to the next option in the browse menu

 
Seek ▼

- Press to go back to the previous track
- Press to go back to the previous option in the browse menu

Display Button – Press to toggle through display modes.

Scan

- Press to exit browse menu
- Press while listening to iPod to toggle through random modes.

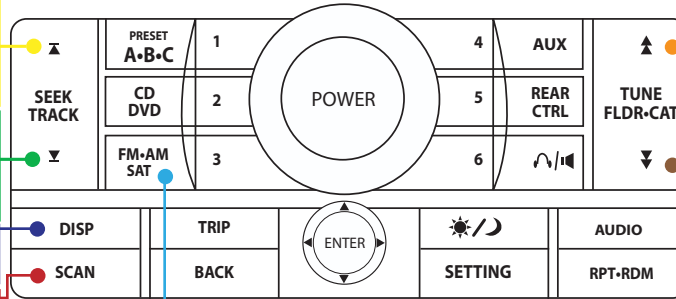

Tune▲ – Press to go back one step while in the browse menu

Tune▼
• Press to enter into the browse menu
• Press to make a selection while in the browse menu

AM/FM/SAT Button – Press to enter into Sat mode or to switch modes within the Media Gateway

Browsing Example:

To select the song "Star-Spangled Banner" through the Artist category

1) Press the Tune ▼ button to enter into the Browse menu. The radio will display "PL:List"

2) Press the Seek ▲ button until radio displays "AR:Artist". Press the Tune ▼ button to select. Radio will display "AR:All"

3) Press the Seek ▲ button until radio displays "AR:Francis Scott Key". Press the Tune ▼ button to select. Radio will display "AL:All".

4) Press the Seek ▲ button until radio displays "AL:Patriot Hits Vol.1". Press the Tune ▼ button to select. Radio will display "TR:All".

7) Press the Seek ▲ button until radio displays "TR:Star-Spangled Banner". Press the Tune ▼ button to select. Song will begin to play and the display will show track info.

(Actual Radio Appearance may differ from representation.)

****READ THIS FIRST****

Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "FM/AM/SAT" button until "Sat" is displayed
- Press the "Seek ▲" button until the source you want is displayed
- Press the "Tune ▼" button to select the source

*if available

Seek ▲

 
- Press to seek up to the next available station
- Press to move forward through the preset menu

Seek ▼

- Press to seek down to the next available station
- Press to move backwards through the preset menu

Display – press to toggle through display modes

Scan – Press to enter/exit the browse menu

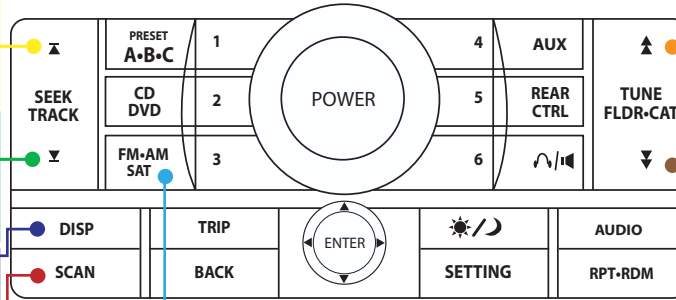

Tune ▲

- Press to manually tune up
- Press to store presets while in the preset menu

Tune ▼

- Press to manually tune down
- Press to recall presets while in the preset menu

AM/FM/SAT Button – Press to enter into Sat mode or to switch modes within the Media Gateway

HD RADIO EXAMPLE

To select an HD radio station.

Press the 'SEEK ▲' button to get to the desired station. The Radio will auto lock on to an HD Radio Station if available example: 92.5 HD1 MHZ
When locked into an HD Radio Station, press the 'SEEK ▲' button up to access multi-cast HD Station(s). (if available) example: 92.5 HD2 MHZ

To store a radio station into preset memory.

Press the "Scan" button to enter the Preset Menu. Press the "Seek ▲" button until the location you want is shown Press the "Tune ▲" button to store the presetRadio will display "PR Saved"

To recall a station stored into preset memory.

Press the "Scan" button to enter the Preset Menu. Press the "Seek ▲" button until the preset you want to recall is displayed. Press the "Tune ▼" button to select the preset.

(Actual Radio Appearance may differ from representation.)



iPod

****READ THIS FIRST****

Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "FM/AM" button
- Press the "Sat" button
- Press the "Seek ►" button until the source you want is displayed
- Press the "Tune ◀" button to select the source

*if available

Seek Button ►

- Press to advance to the next track
- Press to advance to the next option in the browse menu

Seek Button ◀

- Press to go back to the previous track
- Press to go back to the previous option in the browse menu

Tune Button ◀

- Press to enter into the browse menu
- Press to make a selection while in the browse menu

Tune Button ►

- Press to go back one step while in the browse menu

 
FM/AM Button – Press to exit Sat mode

Sat Button – Press to enter Sat mode or to switch modes within the Media Gateway

Scan Button

- Press to exit browse menu
- Press while listening to iPod to toggle through random modes.

Display Button – Press to toggle through display modes.

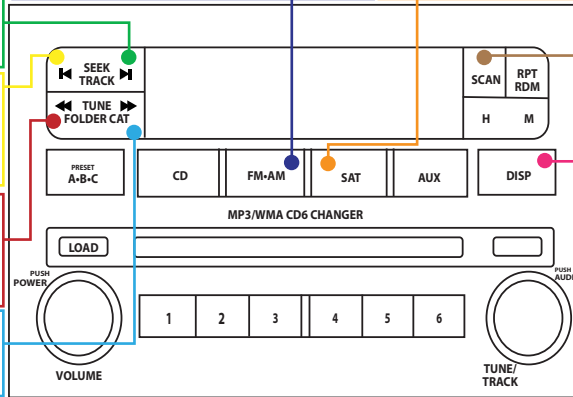

Browsing Example:

To select the song "Star-Spangled Banner" through the Artist category

1) Press the ◀Tune button to enter into the Browse menu. The radio will display "PL:List"

2) Press the Seek ► button until radio displays "AR:Artist". Press the ◀Tune button to select. Radio will display "AR:All"

3) Press the Seek ► button until radio displays "AR:Francis Scott Key". Press the ◀Tune button to select. Radio will display "AL:All".

4) Press the Seek ► button until radio displays "AL:Patriot Hits Vol.1" Press the ◀Tune button to select. Radio will display "TR:All".

5) Press the Seek ► button until radio displays "TR:Star-Spangled Banner". Press the ◀Tune button to select. Song will begin to play and the display will show track info.

(Actual Radio Appearance may differ from representation.)

****READ THIS FIRST****

Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "FM/AM" button
- Press the "Sat" button
- Press the "Seek ►" button until the source you want is displayed
- Press the "Tune ◀" button to select the source

*if available

Seek Button ►

- Press to seek up to the next available station
- Press to cycle forward through the preset menu

Seek Button ◄

 
- Press to seek down to the next available station
- Press to cycle backwards through the preset menu

Tune Button ◀

- Press to manually tune down
- Press to recall a preset stored into memory while in the preset menu

Tune Button ►

- Press to manually tune up
- Press to store a preset into memory while in the preset menu

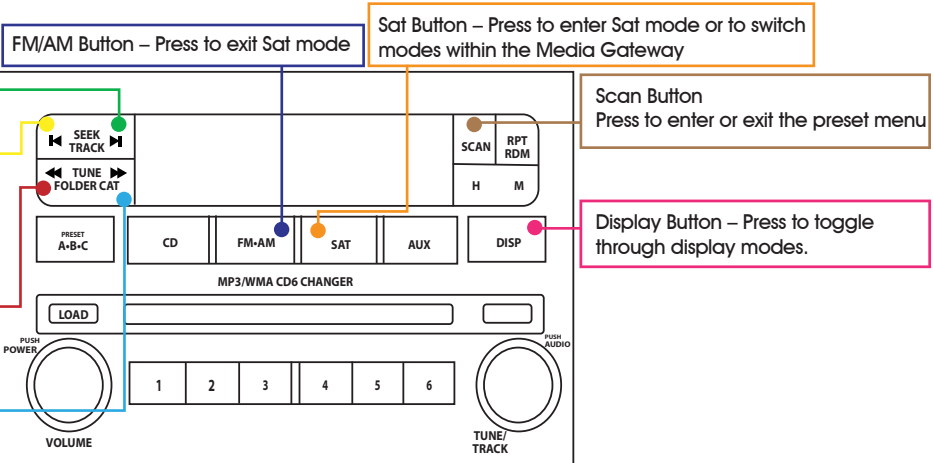

HD RADIO EXAMPLE

To select an HD radio station.

Press the 'SEEK ►' button to get to the desired station. The Radio will auto lock on to an HD Radio Station if available example: 92.5 HD1 MHZ. When locked into an HD Radio Station, press the 'SEEK ►' button to access multi-cast HD Station(s). (if available) example: 92.5 HD2 MHZ

To store a radio station into preset memory.

Press the "Scan" button to enter the Preset Menu. Press the "Seek ►" button until the location you want is displayed. Press the "Tune ►" button to store the preset. Radio will display "PR Saved"

To recall a station stored into preset memory.

Press the "Scan" button to enter the preset menu. Press the "Seek ►" button until the preset you want to recall is displayed. Press the "Tune ◀" button to recall the preset.

(Actual Radio Appearance may differ from representation.)

GRC025