



60128

LS Engine 36" Coil Extension Harness Kit

1. Make sure the ignition key is in the off position.
2. Unplug the factory light grey, 7 pin coil connectors from the coil sub-harnesses that are located on each valve cover.
3. Plug the Painless pigtail labeled "Driver Coils" in line with the driver side coil sub-harness and driver side main harness connector.
4. Plug the Painless pigtail labeled "Passenger Coils" in line with the passenger coil sub-harness and passenger side main harness connector.
5. Start vehicle. If vehicle won't start recheck connections.