

STEERING WHEEL LOCK PLATE TOOL

INSTRUCTIONS FOR STANDARD APPLICATIONS:

1. Remove steering wheel and any components to expose lock plate.
2. Screw correct adaptor onto steering shaft.
3. Place nut on long bolt then insert long bolt through hole in yoke and thread it into adaptor.
4. Run nut up tight against yoke and continue to tighten until lock plate is held away from lock ring.
5. Slide lock ring onto adaptor and carefully back nut off until lock plate is free of spring tension.

To install, reverse procedure.

INSTRUCTIONS FOR TILT / TELESCOPING APPLICATIONS:

1. Remove steering wheel and any components to expose lock plate.
2. Screw correct adaptor onto steering shaft.
3. Place nut on long bolt then insert long bolt through hole in yoke.
4. Remove lock handle and lock bolt from steering column.
5. Run nut up tight against yoke and continue to tighten until lock plate is held away from lock ring.
6. Remove lock ring.
7. Carefully back nut off until lock plate is free of spring tension.

To install, reverse procedure.

