

QUICK DISCONNECT TOOL SET


W83148

Choose the appropriate size disconnect tool by matching the inner lip of the tool to the diameter of the spring or open side of fuel line fitting. Refer to instructions in your repair manual.

Slip tool over fuel line (twist tool to separate) with the inner lip facing the spring or open side of fuel line fitting.

Press inner lip of tool into fuel line fitting until a click is heard as fuel line releases.

Disconnect fuel line sections; push fuel line fittings together to reconnect.

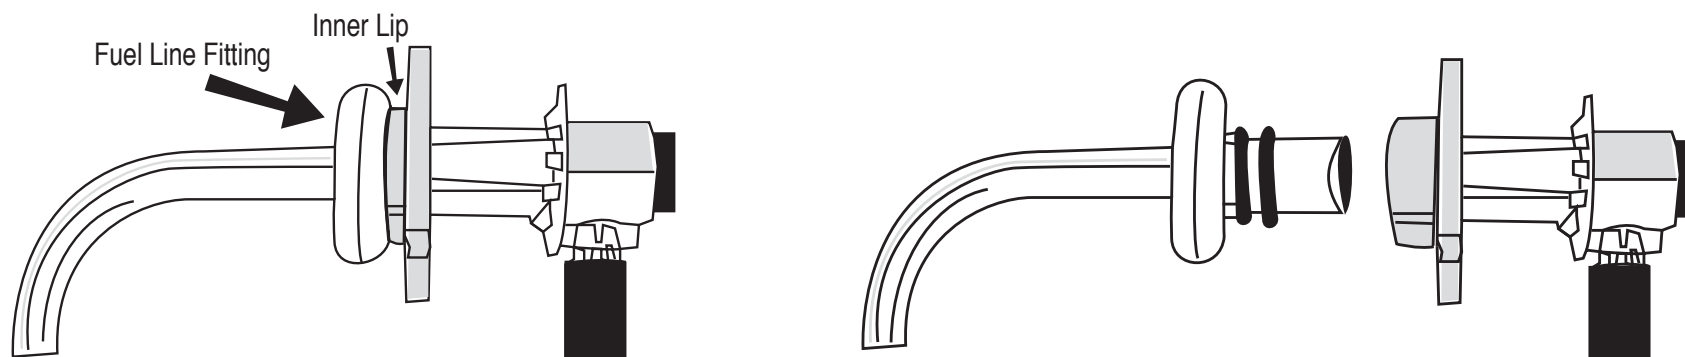

PT
Performance Tool®

▲ **CAUTION:** Follow instructions in repair manual. Always relieve fuel line pressure before using tool.

Check out the collection of automotive tools we offer.