


# OVERHEAD VALVE SPRING COMPRESSOR

W84001

1. Rocker covers & rocker arms must be removed first.
2. Squeeze spring loaded compressor tool jaws to fit over valve spring, securing on the lowest available spring coil.
3. Use compressed air with Flexible Air Valve Holder (Performance Tool W84003) and Air Hold Fittings (Performance Tool W84005) to keep valves from dropping into cylinders when keepers are removed.
4. To compress springs, rotate the handle clockwise. Remove valve keepers.
5. Reverse steps 1-3 to reinstall.

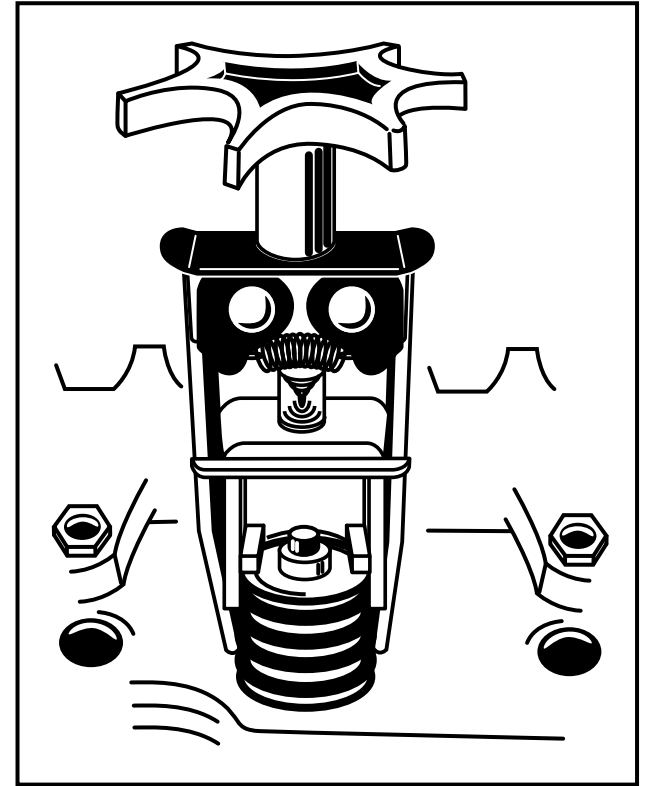

**CAUTION:**

Place vehicle in park or neutral with the emergency brake on prior to applying air pressure to the cylinders. Applying air pressure to the cylinder may cause the crankshaft to rotate, possibly causing vehicle movement. Keep clear of all belts, pulley and the fan.

**PT**  
Performance Tool®

Check out the collection of automotive tools we offer.