


FUEL & TRANSMISSION LINE DISCONNECT TOOL SET

W89330


1. Choose the appropriate disconnect tool for the desired job. Make sure that you have chosen the tool for the correct pressure line diameter.
2. Position the tool as per the illustration.
3. Apply slight pressure toward the connector fitting pressing strong enough to depress the "connector fingers" that maintain the connection.
4. Remove the pressure line.
5. To replace: place the pressure line fitting onto the desired fitting destination and apply pressure. A click sound signifies the re-connection of the pressure line.

Replacement Parts:


- W83130 5/16 in. Fuel Line Disconnect Tool
- W83131 3/8 in. Fuel Line Disconnect Tool
- W83132 1/4 in. Fuel Line Disconnect Tool
- W83133 Oil Cooler Line Disconnect tool
- W80542 Fuel Line Coupling Tool
- W83102 Ford & GM Quick Disconnect Coupler Tool
- W83111 Ford & Mercury Oil Cooler Line Disconnect Tool

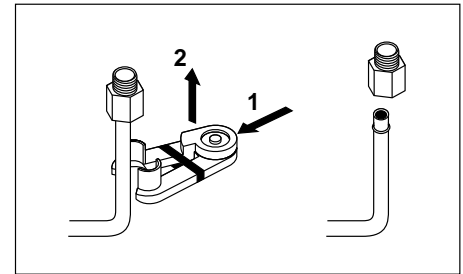

Fuel Line, Oil Cooler Line and Transmission Cooler Line Disconnect Tool

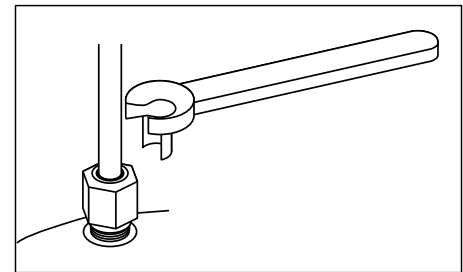

Oil Cooler Line Disconnect Tool

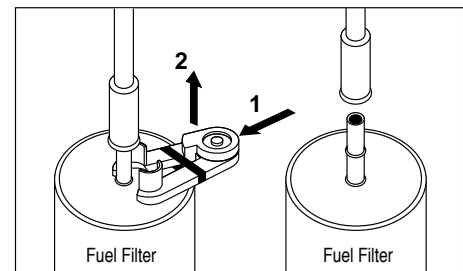

Fuel Line Disconnect Tool

PT
Performance Tool®

Check out the collection of automotive tools we offer.