

Pierce Arrow Product Limited Warranty

Pierce Arrow Inc. warrants to the original purchaser only (whether a wholesale, OEM or retail customer) that the goods, equipment, and merchandise manufactured by Pierce Arrow are free from defects in material and workmanship. The Pierce Arrow limited warranty on parts covers such items for a period of one year on mechanical and electrical from the date of shipment by Pierce Arrow. All warranties cover only the product or product parts, and are nontransferable.

OBTAINING WARRANTY SERVICE

Pierce Arrow must be notified promptly in writing about the defect before any means of repair have been made. The merchandise must be delivered by the purchaser to Pierce Arrow in Henrietta, Texas at the purchaser's expense. Pierce Arrow reserves the right to repair or replace the merchandise proved to be defective. The purchaser is responsible for the cost of repairs made by Pierce Arrow if the repairs are not covered by the Pierce Arrow warranty.

EXCLUSIONS

The Pierce Arrow warranty is not intended to cover normal maintenance parts including but not limited to: wear pads, bushings, mud flaps, fender flares, light bulbs, oil filters, oil leakage, wire rope and remote holdings. Nor is the warranty intended to cover any change or defect due to accident; misuse; improper; inadequate or unauthorized repair; failure to provide maintenance or uses for which the equipment was not intended; and normal deterioration due to weather or road conditions. Reference the owner's manual for safety, installation, operation and maintenance guidelines.

The warranty does not bear the cost of labor, transportation, shipping damages, claimed down time, loss of profit or goodwill, or any other special, incidental, indirect, or consequential damages, concerning or related to any product or part, whether based upon negligence, strict liability, breach of contract, breach of warranty, misrepresentation, or any other legal theory.

Pierce Arrow makes no warranty, expressed or implied, to finished products manufactured or supplied by other manufacturers, and supplied from Pierce Arrow to the purchaser, including but not limited to, any vehicle to which our products is affixed to, and any accessories.

Merchandise manufactured by Pierce Arrow is not designed or intended for the movement of people and are not to be used in the operation of elevators or other improper uses. Any improper use of the product may void the warranty.

CONDITIONS OF SALE

CLAIMS: Claims for breakage or damages must be made to the carrier. We, the shipper, cannot file a claim for purchasers. When placing an order with Pierce Sales, the terms and conditions of payment, shipping, delivery and claims, create an agreement between the purchaser and Pierce Sales. The agreement is to be performed in Clay County, Texas. Pierce Sales is not responsible for, and has no liability for, damage in shipment, during assembly, installation, erection, or that arising from accidents, abuse or improper operation of goods, equipment or merchandise.

Merchandise sold by Pierce Sales, but not manufactured, is subject to the manufacturer's warranty only. The manufacturer's warranty is available upon request.

All warranties cover only the product or product parts, not labor costs, transport costs nor the installation or removal of the product.



Manual:
CATTLE SIRENS



PIERCE CATTLE SIRENS

WARNING: Pierce cattle sirens are to be used with extreme care. Loss of hearing may occur if not used properly. Do not stand in front of the siren. Install the siren properly or the warranty will be void.

SIREN WARRANTY

Sirens are not designed for continuous use. Please limit the PCH324 standard to two minutes and the PS092BE heavy duty siren to 10 minutes. Failure to limit use may result in warranty termination. The PCH324 standard is covered under a six month warranty. The PS092BE heavy duty siren is covered under a two year warranty.

AVAILABLE MODELS



PCH324
STANDARD
CATTLE SIREN
Limit run time to
2 minutes

 


PS092BE
HEAVY DUTY
CATTLE SIREN
Limit run time to
10 minutes

INSTALLATION

STEP 1: LOCATION

Bolt the cattle siren to a flat surface such as a headache rack or under the hood using (2) 1/4" bolts or (2) #12 self tapping screws.





When exposed to the elements, do not install upside-down or water will collect within the siren and your warranty will be voided. Covered cake feeders are the exception (as long as the siren will be hidden from the elements).

STEP 2: WIRING

We recommend wiring a momentary switch to activate your cattle siren.


Our PCHK wiring kit includes:

  - 1 Push Button
- 4 Butt Connectors
- 2 Female Push-on Terminals
- 1 Fuse
- 1 5/16" Battery
- 1 #10 Battery Eyes
- 1 Parallel Wire

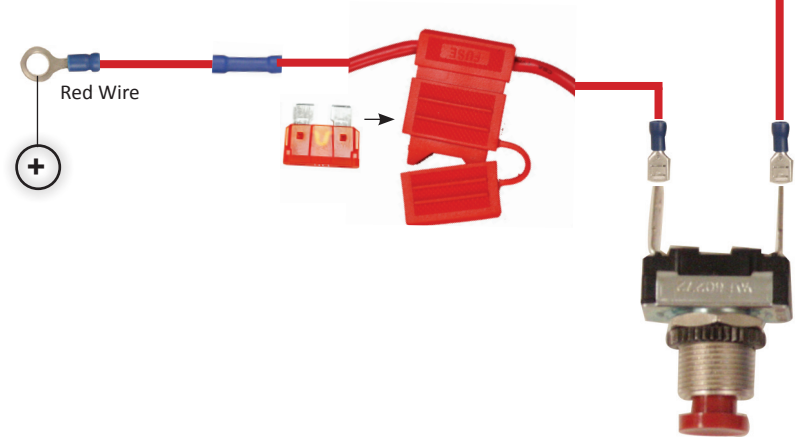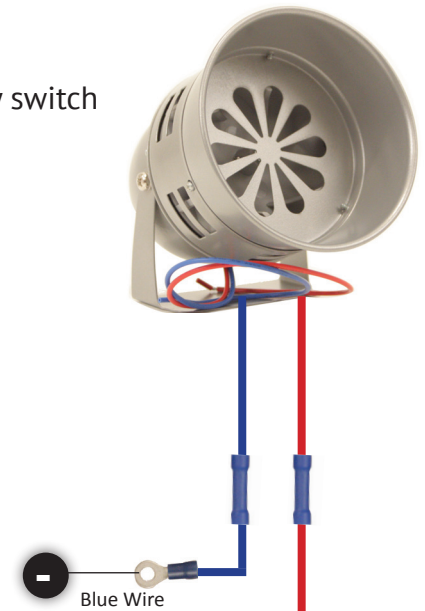

If you already have the wiring and switch to operate the cattle siren just connect:

 - ⊖ NEGATIVE
Blue Wire
- ⊕ POSITIVE
Red Wire

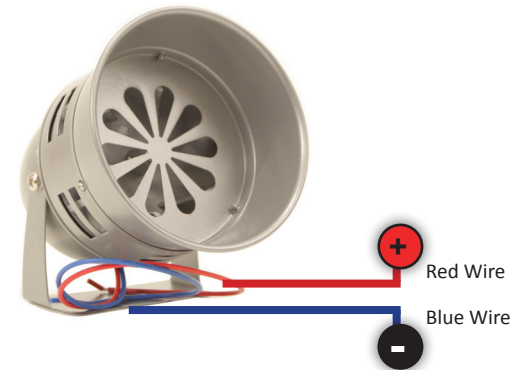

Find out more about custom automotive horns we have.