CD RDS RECEIVER

DEH-S1200UB

Important (Serial number

he serial number is located on the bottom of this unit. For your own security and convenience, be sure to record this number on the enclosed warranty card.

QRD3768-

This guide is intended to guide you through the basic functions of this unit

Before You Start

hank you for purchasing this PIONEER product

o ensure proper use, please read through this quide before using this product. It is especially he guide in a safe and accessible place for future reference

wo conditions: (1) This device may not cause harmful interference, and (2) this device

Alteration or modifications carried out without appropriate authorization may invalidate

easonable protection against harmful interference in a residential installation. This mmunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or elevision reception, which can be determined by turning the equipment off and on,

- Increase the separation between the equipment and receiver.

mportant that you read and observe **WARNING**S and **CAUTION**S in this guide. Please keep

his device complies with part 15 of the FCC Rules. Operation is subject to the following nust accept any interference received, including interference that may cause undesired

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio the user is encouraged to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

come through clearly without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. ver time, your hearing "comfort level" adapts to higher volumes of sound, so what sounds

Get the most out of your equipment by playing it at a safe level—a level that lets the sound

"normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

ESTABLISH A SAFE LEVEL:

The Safety of Your Ears is in Your Hands

• Set your volume control at a low setting.

Slowly increase the sound until you can hear it comfortably and clearly, without distortion. Once you have established a comfortable sound level, set the dial and leave it there. BE SURE TO OBSERVE THE FOLLOWING GUIDELINES:

Do not turn up the volume so high that you can't hear what's around you.

• Use caution or temporarily discontinue use in potentially hazardous situations • Do not use headphones while operating a motorized vehicle; the use of headphones may create a traffic hazard and is illegal in many areas.

• Rear visibility systems (backup cameras) are required in certain new vehicles sold in the U.S. and Canada. U.S. regulations began according to a two year phase-in on May 1, 2016, and both the U.S. and Canada require that all such vehicles manufactured on or after May 1, 2018 have rear visibility systems. Owners of vehicles equipped with compliant rear visibility systems should not install or use this product in a way that alters or disable

that system. If you are unsure whether your vehicle has a rear visibility system subject to the U.S. or Canadian regulations, please contact the vehicle manufacturer or dealer. · Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric

- shock, injury or other hazards. Do not attempt to operate the unit while driving. Make sure to pull off the road and park
- your vehicle in a safe location before attempting to use the controls on the device. This product contains chemicals known to the State of California and other governmental entities to cause cancer and birth defects or other reproductive harm. Wash hands after

A CAUTION

- Do not allow this unit to come into contact with moisture and/or liquids. Electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact
- Always keep the volume low enough to hear outside sounds.
- This product is evaluated in moderate and tropical climate condition under the Audio, video and similar electronic apparatus - Safety requirements, IEC 60065.

This product is a Class 1 laser product classified under the safety standard, IEC 60825-

USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN

CLASS 1 LASER PRODUCT

THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE

After-sales service for Pioneer products ease contact the dealer, distributor from where you purchased this unit or the authorized PIONEER Service Station for after-sales service or any other information. In case the necessary

information is not available, please contact the companies listed below: Please do not ship your unit to the companies at the addresses listed below for repair without contacting them in advance.

Connections

A WARNING

• When speaker output is used by 4

to 3 Ω speakers for this unit.

channels, use speakers rated over 50 W

(maximum input power) and between 4Ω

to 8 Ω (impedance value). Do not use 1 Ω

When rear speaker output is used by a 2

 Ω subwoofer, use speakers rated for over

this unit or power amp (sold separately),

Ensure that the ground wire is properly

one of this unit or any other device must

be connected to the car separately with

different screws. If the screw for the ground

wire loosens or falls out, it could result in

fire, generation of smoke or malfunction.

Metal parts

of car's body

Two devices connected to the

car separately (ground wires)

*1 Not supplied for this unit

Setup operation

* Please refer to connections for a

without an ACC (accessory) position on the ignition switch, failure to connect

When installing this unit in a vehicle

the red cable to the terminal that detects operation of the ignition key may result in battery drain.

: Important



• The black cable is ground. When installing negative grounding only. Failure to do so may result in a fire or malfunction. make sure to connect the ground wire first To prevent a short-circuit, overheating or malfunction, be sure to follow the onnected to metal parts of the car's body. directions below. The ground wire of the power amp and the

Disconnect the negative terminal of the battery before installation. -Secure the wiring with cable clamps or adhesive tape. Wrap adhesive tape

around wiring that comes into contact with metal parts to protect the wiring. Place all cables away from moving parts such as the shift lever and seat rails. -Place all cables away from hot places. such as near the heater outlet. Do not connect the yellow cable to the

battery by passing it through the hole to -Cover any disconnected cable connector with insulating tape. Do not shorten any cables.

Never cut the insulation of the pow

cable of this unit in order to share the power with other devices. The current capacity of the cable is limited. -Use a fuse of the rating prescribed -Never wire the negative speaker cable

directly to ground. Never band together negative cables of multiple speakers.


· When this unit is on, control signals are sent through the blue/white cable

Connect this cable to the system remote control of an external power amp or the vehicle's auto-antenna relay control terminal (max. 300mA 12 V DC). If the

vehicle is equipped with a glass antenna connect it to the antenna booster power supply terminal. Never connect the blue/white cable to the power terminal of an external power amp. Also, never connect it to the power


terminal of the auto antenna. Doing so may result in battery drain or a malfunction. The graphical symbol ____ placed on the product means direct current.

The function and audio settings other than the setting of RCA pre-outs are stored in memory if the unit is disconnected from power supply.

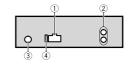


1) Power cord input 2 Rear output or subwoofer output (4) Fuse (10 A)

Perform these connections when not connecting a rear speaker or middle range

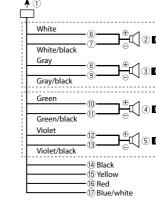

Perform these connections when using a

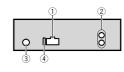

subwoofer without the optional amplifier.

— (14) Black

In the case of ¹⁹ above, two 4 Ω subwoofers

wired in parallel will represent a 2 Ω load.

—⊕ 17 Blue/white

2 Front left speaker Front right speaker ⑤ Rear right speaker White/black

1) To power cord input

Gray/black

Green/black

13 Violet/black

Blue/white

® Subwoofer (4 O)

black leads

21 Subwoofer $(4 \Omega) \times 2$

20 Not used.

15 Yellow

Black (chassis ground)

Connect to a clean, paint-free meta

Connect to the constant 12 V supply

Connect to terminal controlled by the

Connect to the system control terminal

of the power amp or auto-antenna relay

When using a subwoofer of 2 Ω, be sure

to connect the subwoofer to the violet

and violet/black leads of this unit. Do no

onnect anything to the green and green

control terminal (max. 300 mA 12 V DC).

ignition switch (12 V DC)

Consult your dealer if installation require drilling of holes or other modifications to the vehicle. 1) System remote control

Connect to blue/white cable

Power amp (sold separately 3) Connect with RCA cables (sold separately) (4) To rear output or subwoofer output (5) Rear speaker or subwoofer

Perform these connections when using the

Power amp (sold

separately)

optional amplifier.

• Do not install this unit where: -it may interfere with operation of the

Check all connections and systems before

Do not use unauthorized parts as this ma

-it may cause injury to a passenger as a result of a sudden stop. Install this unit away from hot places such

final installation

cause malfunctions

as near the heater outlet Optimum performance is obtained when the unit is installed at an angle of less

than 60°. · When installing, to ensure proper heat dispersal when using this unit, make sure you leave ample space behind the rear panel and wrap any loose cables so they

are not blocking the vents.



DIN mount installation


- 1 Insert the supplied mounting sleeve into the dashboard.
- 2 Secure the mounting sleeve by using a screwdriver to bend the metal tabs (90°) into place.
- Mounting sleeve Make sure that the unit is installed securely in place. An unstable

installation may cause skipping or other

When not using the supplied ounting sleeve Determine the appropriate position



2 Tighten the screws on each side

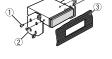

2 Mounting bracket

Dashboard or consol Use either truss (5 mm × 9 mm) or flush surface (5 mm × 9 mm) screws depending on the bracket screw holes.



emoving the unit (installed with the

upplied mounting sleeve)

eleasing the front panel allows easier


2 Insert the supplied extraction keys into both sides of the unit until the

where the holes on the bracket and the side of the unit match.

The front panel can be secured with the supplied screw.



1 Remove the trim ring.

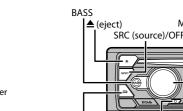

2 Notched tab


access to the trim ring. When reattaching the trim ring, point the side with the notched tab down.

click into place. 3 Pull the unit out of the dashboard.

To secure the front panel

Basic operation

DEH-S1200UB

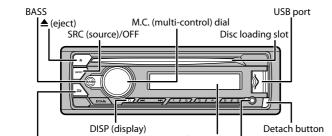

AUX input jack (3.5 mm stereo jack)

About the main menu

You can adjust various settings in the main menu.

SYSTEM settings

2 Turn the M.C. dial to select one of the categories below, then press to

· AUDIO settings

FUNCTION settings

1 Press the M.C. dial to display the main menu.

ILLUMINATION settings

3 Turn the **M.C.** dial to select the options, then press to confirm.

Frequently used operation:

Press **SRC/OFF** to turn on the Turn on the power Press and hold SRC/OFF to turn off the power Adjust the volume Turn the **M.C.** dial. Press SRC/OFF repeatedly. Select a source Press **DISP** repeatedly Change the display information Return to the previous display/list Press **BAND**/**二**. Return to the normal display from | Press and hold **BAND**/\$\square\$. the menu Change the display brightness Press and hold **BAND**/ Boost the bass level

You can select the bass level in [BASS BOOST].

When you turn the ignition switch to ON after installation, [SET UP:YES] appears in the

1 Press the M.C. dial.

The indicator moves to the minute setting automatically. 3 Turn the M.C. dial to adjust the minute, then press to confirm.

4 [QUIT:YES] appears when all the settings have been made.

Tuner operation

2 Turn the M.C. dial to adjust the hour, then press to confirm.

5 Press the **M.C.** dial to confirm the settings.

Receiving preset stations

1 Press **SRC/OFF** to select [RADIO].

2 Press **BAND**/**⇒** to select the band. $[FM1] \longleftrightarrow [FM2] \longleftrightarrow [FM3] \longleftrightarrow [AM]$

3 Press a number button (1/∧ to 6/⇌).

Best stations memory (BSM)

1 After selecting the band, press the M.C. dial to display the main

To store stations manually

1 While receiving the station you want to store, press and hold one of the number buttons $(1/\Lambda)$ to $6/\rightleftharpoons$) until it stops flashing.

To eject a disc, stop playback first then press ▲

1 Insert a disc into the disc loading slot with the label side up.

2 Plug in the USB device using an appropriate cable.

2 Turn the M.C. dial to select [FUNCTION], then press to confirm.

3 Turn the **M.C.** dial to select [BSM], then press to confirm.

1 Open the USB port cover.

CD/USB/AUX operation

– MTP connection —

connected device, OS version or the numbers of the files in the device, audio files/songs may not be able to be played back via MTP.

If you use an MTP connection, [ANDROID WIRED] needs to be set to [MEMORY] in the

A device installed with Android OS 4.0 or most of later versions can be connected to

the unit via MTP, using the cable supplied with the device. However, depending on the

1 Insert the stereo mini plug into the AUX input jack. 2 Press SRC/OFF to select [AUX] as the source

Pioneer's Advanced app converts your compatible smartphone



Do not attempt to operate the application while driving. Make sure

to pull off the road and park your vehicle in a safe location before

ttempting to use the controls on the application.

1 Enter the SYSTEM menu (refer to "About the main menu").

3 Turn the M.C. dial to select [APP CONTROL], then press to confirm.

4 Turn the M.C. dial to select [P.APP AUTO ON], then press to confirm.

5 Turn the M.C. dial to select [ON], then press to confirm.

6 Connect this unit with the Android device via USB. Pioneer ARC APP on the device starts automatically.

Making a connection with Pioneer ARC APP

into a powerful touchscreen remote control.



This function is compatible with a phone that runs Android 4.1 up to 7.1.2 and also supports

AOA (Android Open Accessory) 2.0, but the compatibility depends on the smartphone.

2 Turn the M.C. dial to select [ANDROID WIRED], then press to confirm

