

INSTRUCTION SHEET

FORD *XSTORQUE* STARTERS (9503, 9504, 9505, 9506)

FORD APPLICATIONS

- 9503 - 289-302-351 A/T and 5-speed M/T
'75 and later in auto applications
'81 and later in truck applications
- 9504 - 289-302-351 3 and 4-speed M/T only
Up to '74 in auto applications
Up to '80 in truck applications
- 9505 - 351M, 400, 429, 460
- 9506 - 390-427-428 "FE" only



ELECTRICAL WIRING INSTRUCTIONS

1. Install a jumper wire from the "Bat" terminal connection on the starter solenoid to the "IGN" terminal.
[OPTIONAL: Run the "switch" wire from the starter relay to the "IGN" terminal on the starter solenoid.]
2. Connect the positive battery wire to the "BAT" terminal on the starter solenoid.

