



PRO Rebound Adjustable Shocks 7-12

Rebound Adjuster Instructions



Features & Benefits

- 7 to 12 Rebound adjustment range.
- Positive detent locating mechanism for fine tuned adjustability.
- +/- indicator
 - o Turn the adjuster screw in the “+” direction to increase rebound resistance.
 - o Turn the adjuster screw in the “-” direction to decrease rebound resistance.
- Click adjuster enables the rebound to be reset the same every time.
- Re-buildable housing improves life of adjuster with yearly maintenance.

Setting your adjuster


- Ensure your adjuster is set at the full soft position (all the way toward the “-” setting).
- Count your clicks as you turn the adjuster to the “+” position.



Reference setting for Rebound

- | | |
|-------------|--|
| •7 Rebound | 4 All the way “-” (minus) [starting point] |
| •8 Rebound | +6 clicks from full soft. |
| •9 Rebound | +8 clicks from full soft. |
| •10 Rebound | +10 clicks from full soft. |
| •11 Rebound | +12 clicks from full soft. |
| •12 Rebound | +16 clicks from full soft. |

DELIVERING CHAMPIONSHIPS
And big Trophies
FOR OVER 30 YEARS

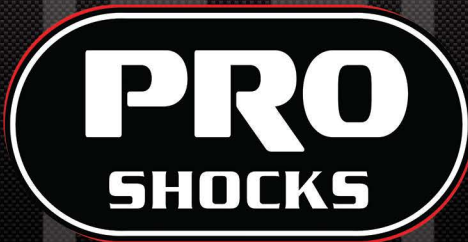

PRO Rebound Adjustable Shocks

Rebound Adjuster Instructions

Features & Benefits

- 3 to 8 Rebound adjustment range.
- Positive detent locating mechanism for fine tuned adjustability.
- +/- indicator
 - o Turn the adjuster screw in the "+" direction to increase rebound resistance.
 - o Turn the adjuster screw in the "-" direction to decrease rebound resistance.
- Click adjuster enables the rebound to be reset the same every time.
- Re-buildable housing improves life of adjuster with yearly maintenance.

Setting your adjuster


- Ensure your adjuster is set at the full soft position (all the way toward the "-" setting).
- Count your clicks as you turn the adjuster to the "+" position.



Reference setting for Rebound

- | | |
|-------------|--|
| •3 Rebound | All the way "-" (minus) [starting point] |
| •4 Rebound | +2 clicks from full soft. |
| •5 Rebound | +6 clicks from full soft. |
| •6T Rebound | +10 clicks from full soft. |
| •6 Rebound | +12 clicks from full soft. |
| •7 Rebound | +14 clicks from full soft. |
| •8 Rebound | All the way "+" (positive) |

DELIVERING CHAMPIONSHIPS
And big Trophies
FOR OVER 30 YEARS

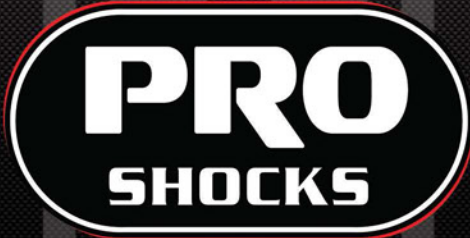

PRO Rebound Adjustable Shocks 6-11

Rebound Adjuster Instructions

Features & Benefits

- 6 to 11 Rebound adjustment range.
- Positive detent locating mechanism for fine tuned adjustability.
- +/- indicator
 - o Turn the adjuster screw in the “+” direction to increase rebound resistance.
 - o Turn the adjuster screw in the “-” direction to decrease rebound resistance.
- Click adjuster enables the rebound to be reset the same every time.
- Re-buildable housing improves life of adjuster with yearly maintenance.

Setting your adjuster

- Ensure your adjuster is set at the full soft position (all the way toward the “-” setting).
- Count your clicks as you turn the adjuster to the “+” position.

Reference setting for Rebound

- | | |
|-------------|--|
| •6 Rebound | All the way “-” (minus) [starting point] |
| •7 Rebound | +6 clicks from full soft. |
| •8 Rebound | +8 clicks from full soft. |
| •9 Rebound | +12 clicks from full soft. |
| •10 Rebound | +14 clicks from full soft. |
| •11 Rebound | +16 clicks from full soft. |



DELIVERING CHAMPIONSHIPS
And big Trophies
FOR OVER 30 YEARS