

REKUDO

To adjust shock, it must be fully compressed and then rotated to change the damping from soft to firm as shown below.

COMPRESS



SOFT (-)



FIRM(+)

