

Features



Dual Temperature Display

The dual temperature reading is achieved by installing the air temperature sensors on the piping of both the entrance side and exit side of the intercooler. The IN TEMP sensor is installed on the piping after the turbo and before the intercooler, and the OUT TEMP sensor is installed on the piping after the intercooler and before the engine intake.



OLED Screen

Maximum comfort is attained by the use of an OLED (Organic Light Emitting Diode) numerical display. When compared to a traditional LCD display, the OLED display provides sharper contrast resulting in a deeper black for a crisp, clear images that is easier to read at a glance. The technology also allows for undistorted viewing angles approaching 170 degrees. The OLED display also does not require a backlight to be clearly visible at night, which gives the slim profile of the gauge – perfect for mounting in areas where space is an issue.



Parts Included

All Revel VLS gauges include the necessary hardware, sensors, and universal mounting pod and hood, as well as the installation instructions:

- (1) Intercooler Dual Temp Gauge 2 1/16 in. (52mm)
- (1) Power Harness
- (2) Air Temperature sensors and wiring harness
- (1) Mounting Pod
- (1) Sun Shade (hood)
- (1) 3M double sided tape
- (2) Mounting Bracket Threaded Extension
- (2) Washers
- (2) Nuts
- (1) Mounting Bracket

*Note: Installation of the air temperature sensors require 3/8 NPT weld-in bungs. These bungs are not included.