

RLTF & RLTP Rhino Heavy Duty - Track Mount

Your Rhino-Rack is designed and manufactured in Australia to meet the requirements of Australian Standard AS1235-2000. Only use Rhino-Rack approved accessories.

Place these instructions in the vehicle's glove box after installation is complete.

Important: Please read these instructions carefully prior to installation. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations. Check the contents of kit before commencing fitment and report any discrepancies.

Parts List

Item	Component Name	Qty.	Part No.	
1	Heavy Duty Rubber Buffer	2	-	
2	Heavy Duty Crossbar	2	-	
3	Heavy Duty Bar End Cap	4	M002	
4	M10 Channel Nut	2	N024	
5	M10 x 38mm x 2.5mm Flat Washer	2	W022	
6	M10 Internal Shakeproof Washer	2	W021	
7	M10 x 25mm Hex Bolt	2	B071	
8	Track End Cap	4	M006	
9	M6 x 35mm Button Head Security Screw	4	B092	
10	M6 Spring Washer	4	W004	
11	M6 x 12.5mm Flat Washer	4	W003	
12	Track Mount Leg RLTF (M010) & RLTP (M057)	2	-	
13	Wedges	4	M148	
14	M6 x 21.43mm x 4.4mm Brass Hex Nut	4	N009	
15	Track	2	-	
16	M5 Security Allen Key & Handle	1	H011 & H013	
17	Fitting Instruction	1	RR04	





Install crossbar onto legs. Push the leg hex bolt up and turn the bolt so that the channel nut is fully located across the crossbar.

Tools Required Allen key, provided in kit Tape measure Marking pen 5mm drill bit Drill Drill stop Vacuum cleaner Masking tape Rivet gun Galvanised paint Selleys Butyl Mastic Carton knife 13mm socket

Care Instructions

Before fitting the Heavy Duty Track Mount Wash and clean vehicle roof prior to installation.

Assemble rack as shown, attaching the legs to the tracks. Finger tighten hex bolt as the legs will require adjustment when placed onto the vehicle.





Important Information

RECOMMENDATIONS

Please refer to your vehicle manufacturers operating manual for maximum roof load rating.

It is essential that all bolt connections be checked after driving a short distance when you first install your Rhino-Rails Crossbars.

Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof bars each time they are refitted.

Crossbars and accessories should be cleaned and all screw threads should be lubricated at regular intervals.

Rhino-Rack offers a 3 year warranty to the original purchaser of the Rhino-Rack rails roof rack system and Accessories.

Rhino-Rack cannot be held responsible for incorrect mounting of the roof rack system or for usage that exceeds vehicle and production tolerances.

Make sure to fasten your load securely.

Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

USE ONLY NON-STRETCH FASTENING ROPES OR STRAPS.

SENSITIVITY TO CROSSWINDS, BEHAVIOUR IN CURVES AND BRAKING

The handling characteristics of the vehicle change when you transport a load on the roof. For safety reasons, we recommend you exercise extreme care when transporting wind-resisting loads; special consideration must be taken into account when braking.

PLEASE REMOVE CROSSBARS WHEN PUTTING VEHICLE THROUGH AN AUTOMATIC CAR WASH

LOAD RATINGS

The vehicle manufactures recommended load rating is the maximum permissible load per pair of roof racks (include the weight of the roof rack, 5kg). When roof bars are to be used in extreme off-road conditions please build a safety factor of 1.5 into this maximum load limit. Although roof bars are tested and approved to AS1235-2000, Australian road conditions can be much more rigorous.

NOTE FOR FITTERS AND DEALERS

It is your responsibility to ensure instructions are given to the end user or client.

RTV Track Kit

Important: Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations. Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete.

Download your Vehicle Fitment Sheet

Individual fitment sheets exist for most vehicles available, they provide specific fitment information that is relevant to each individual vehicle. Fitment sheets can be downloaded from the Rhino-Rack Website under 'Fit My Car'. Simply select the make and model of the vehicle, select the Pioneer tray of choice and click on instructions. **Be sure to check the website to see you have latest version of your instructions before attempting the fitment.**

Important Information

1. Check Part No./Kit is correct 3. Fit roof rack accessory

2. Read through instruction before installing 4. Check and recheck all fasteners are secure

Maximum carrying capacity for the track system is 100kg (220lbs).

Please refer to your vehicle manufacturers handbook for the maximum roof loading of your vehicle, also check Rhino-Rack website 'fit my car' section for the latest rating . Always use lower of the two figures. Note: Be sure to check the Rhino-Rack website to see if you have the latest version of instructions before beginning installation.

Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your crossbars. Bolt connections should be checked & lubricated at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are refitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

Crossbars must be removed when putting vehicle through an automatic car wash.

Use only non-stretch fastening ropes or straps.

Caution: The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account

when cornering and braking.

Load Ratings:

Maximum permissible load is 100kg (220lbs) for two crossbars including the weight of the crossbars, 5kg (11lbs). When crossbars are to be used in off-road conditions, please build a safety factor of 1.5 into this load limit for off-road use, two crossbars = 66kg (145lbs). Although the crossbars are tested and approved to AS1235-2000, Off-road conditions can be much more rigorous. However, increasing the number of crossbars does not increase the vehicles maximum permissible roof loading.

Note for Dealers and Fitters:

It is your responsibility to ensure instructions are given to the end user or client.







RHINO-RACK VA-FK1

ltem	Component Name	Qty	Part No.
1	M6 Nut 30x25mmx5mm	2	N035A
2	Adapter Block	2	M154
3	RCP Leg 3000 32x 3 Square Washer Mech	2	W037
4	M6 Spring Washer	2	W004
5	M6x35 Hex Setscrew	2	B203

*Note:

RL Kit parts are sold separately.

Tools Required:

10mm Wrench

