 




RHINO-RACK

RCL, RCH 2,4,6 Kits

Important: Please read these instructions carefully prior to installation. Please refer to your fitting instruction to ensure that the Roof Rack System is installed in the correct location. Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete.

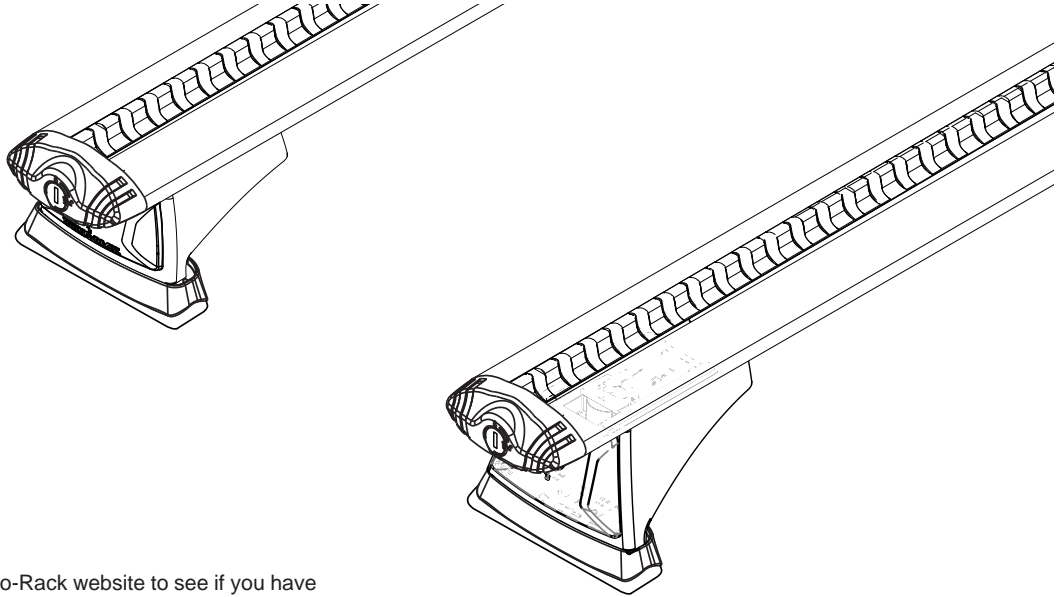

Note: Be sure to check Rhino-Rack website to see if you have the latest version of instructions before beginning installation.

Maximum load carrying capacity: 100kg / 220lbs

Important Information

1. Check Part No./Kit is correct
2. Read through instruction before installing
3. Fit roof rack accessory
4. Check and recheck all fasteners are secure

Maximum carrying capacity: Up to 100kg (220lbs) including the weight of the rack system.

Please refer to your vehicle manufacturers handbook for maximum carrying capacity. Always use the lower of the two figures. Load must be evenly distributed over the entire basket.

Warning: Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.

Use only non-stretch fastening ropes or straps.

Recommendations: It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible and must be entirely contained within the extents of the roof racks. **Rack System must be removed when putting vehicle through an automatic car wash.**

Caution: The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.

Off-road use:

The Roof Rack System may be used in off road applications, however a safety factor of 1.5 is enforced. That is, maximum permissible off road load is **66kg (145lbs)**. Although the crossbars are tested and approved to AS1235-2000/ 15011154, off-road conditions can be much more rigorous. Extreme care must be taken in off road conditions

 
 
 
 
 
 
 
Note for Dealers and Fitters:

It is your responsibility to ensure these fitting instructions are given to the end user or client.


Rhino-Rack 3 Pike Street, Rydalmere,




RCL, RCH 2,4,6 Kits

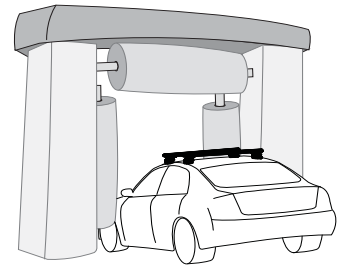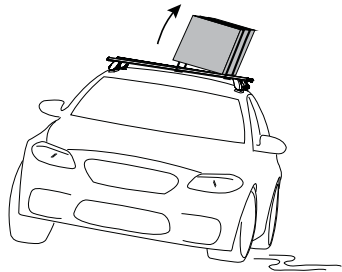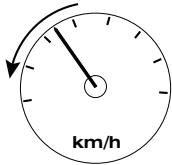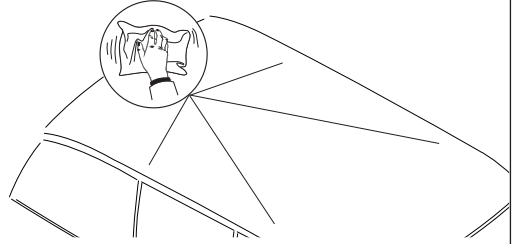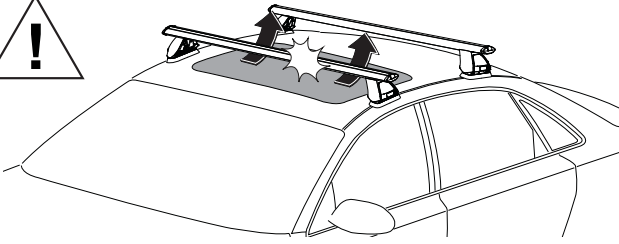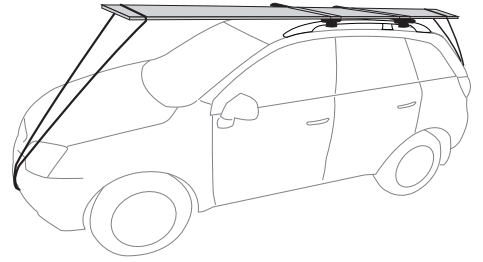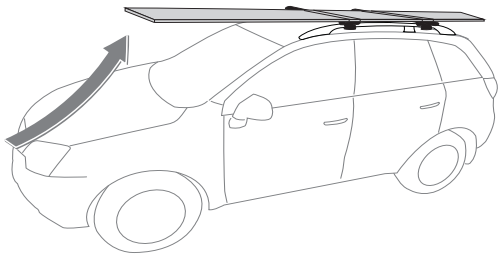

 
Ensure Ladder is well supported on the ground to help support tent. Take extreme caution when climbing heights above 1.2m/4ft.

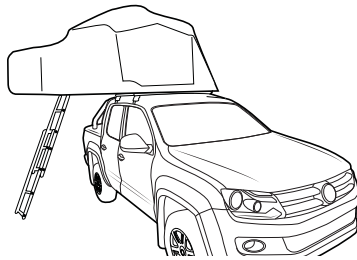

 It is required for Clam Shell Roof Top Tents to use a 3 Crossbar System.

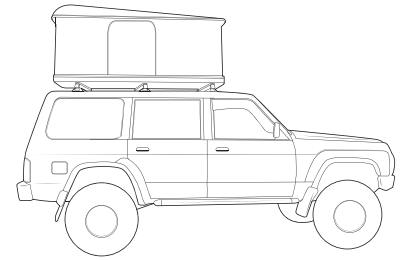

 
When these roof racks are to be used on a vehicle that is driven off sealed roads, the manufacturer maximum roof load rating (to be found in the vehicles User Manual) should be **divided by 1.5**. Do not forget to subtract the complete crossbar system weight from your maximum carrying capacity.

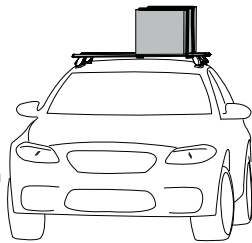

100kg/220lbs
(Urban Road)




 66kg/145lbs
(Off Road)

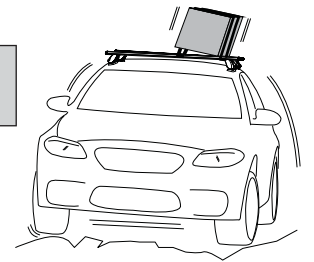


WARNING! Important Load Carrying Instructions

 With utility vehicles, the cabin and the canopy move independently. Roof racks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roof racks or the canopy roof racks.

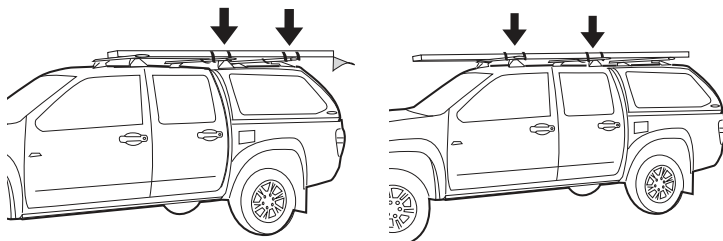

 Paddle/ Surfboards should be fixed to the front of the vehicle.

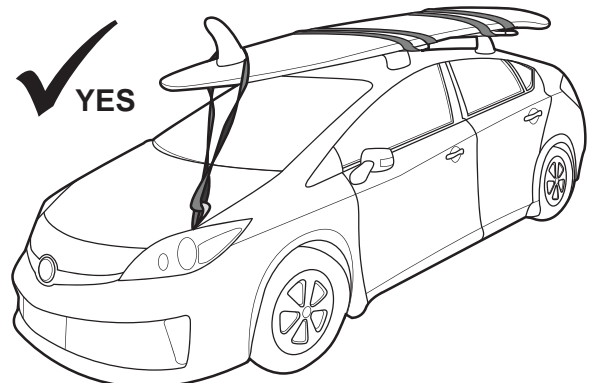




RCL, RCH 2,4,6 Kits

Parts List

Item	RCL	2 Kit Qty	4 Kit Qty	6 Kit Qty	Part No.
1	Locking Leg Cover (37mm)	2	4	6	M810
2	Locking Leg Base (37mm)	2	4	6	M813
3	Key Barrel	2	4	6	CA1339
4	Key	1	2	2	-
5	Allen Key	1	1	1	H034
6	M6 x 20mm Socket Head Screw	2	4	6	B054
7	M6 Spring Washer	2	4	6	W004
8	M6 x 16mm Flat Washer	2	4	6	W031
9	M6 Nut 30mm x 25mm	2	4	6	N035A
10	Instructions	1	1	1	R1182

Item	RCH	2 Kit Qty	4 Kit Qty	6 Kit Qty	Part No.
10	Locking Leg Cover (52mm)	2	4	6	M812
11	Locking Leg (52mm)	2	4	6	M811
3	Key Barrel	2	4	6	CA1339
4	Key	1	2	2	-
5	Allen Key	1	1	1	H021
6	M6 x 20mm Socket Head Screw	2	4	6	B054
7	M6 Spring Washer	2	4	6	W004
8	M6 x 16mm Flat Washer	2	4	6	W031
9	M6 Nut 30mm x 25mm	2	4	6	N035A
10	Instructions	1	1	1	R1182

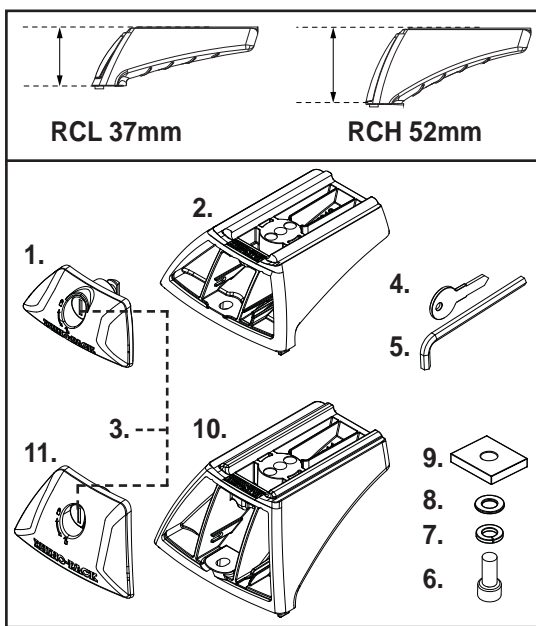 

Tools Required:

Allen Key (provided).
Metal Key (provided).

 
Notes:

Crossbars and Fit Kits are sold as separate and are required for individual vehicle fits.
Heavy Duty Bars will require a QMHD05 kit.


Instructions

- 1** Use the Metal Key provided to unlock the Cover Plate and remove. Remove the Allen Key from its storage position.

Note: Low Leg used throughout instructions.

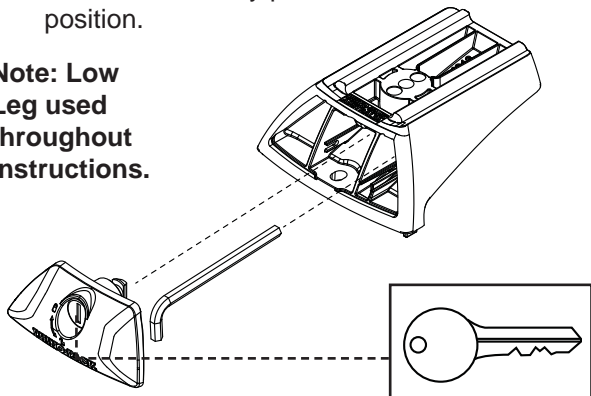


Front View:

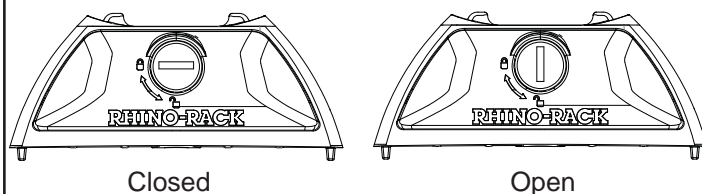 

- 2** Insert the M6 hardware as shown. Finger tighten only at this stage.

 
M6 Nut 30mm x 25mm

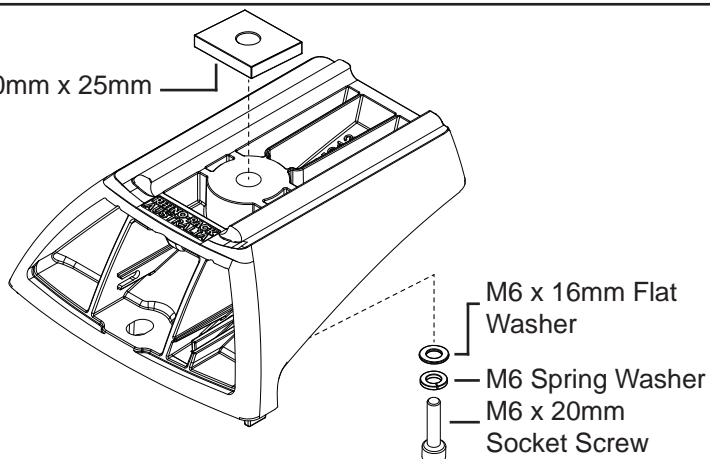




RCL, RCH 2,4,6 Kits

 - 3** Slide the Assembled legs into the Crossbars as shown. Insert Vortex Rubber, cut to length as required.

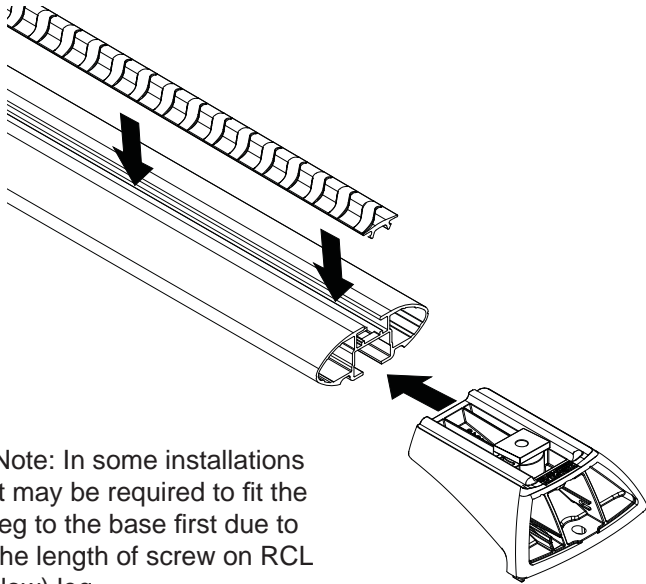


Note: In some installations it may be required to fit the leg to the base first due to the length of screw on RCL (low) leg.

 - 4** Fix the Crossbars to the vehicle specific Base Kit that has been purchased, using the Allen Key provided.

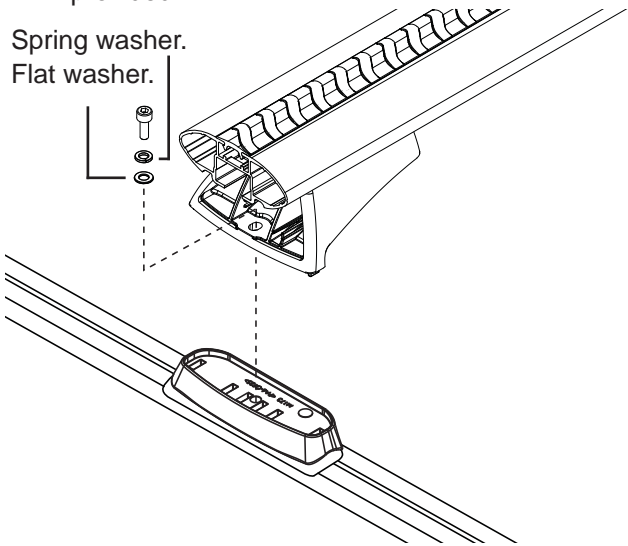


Note: Images are example only. RCL/RCH legs can be fit to either tracks or pads. Pads and track fit kits are sold as separate.

 
- 5** Ensure the Crossbars have an equal overhang. Tighten the M6 Leg Hardware with the Allen Key provided.

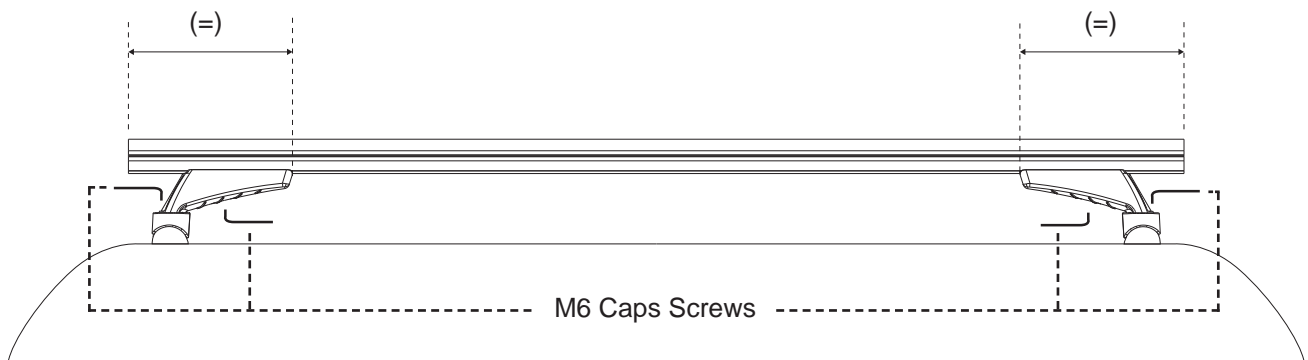

 - 6** Insert the Underbar Strips into the slots either side of the installed Leg. Cut to length as required.

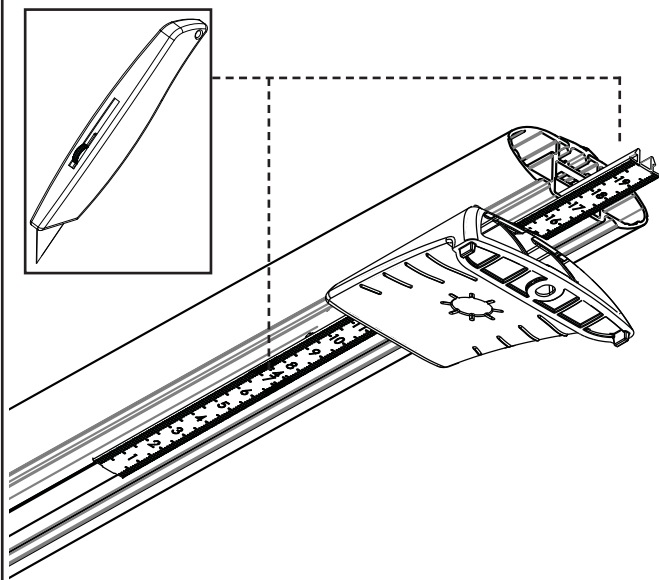

 
- 7** Insert the Crossbar End Caps and lock in place. Replace the Allen Key and Leg Cover. Lock the Leg Cover Plate with the key provided. Be sure all fixtures are secure before use.

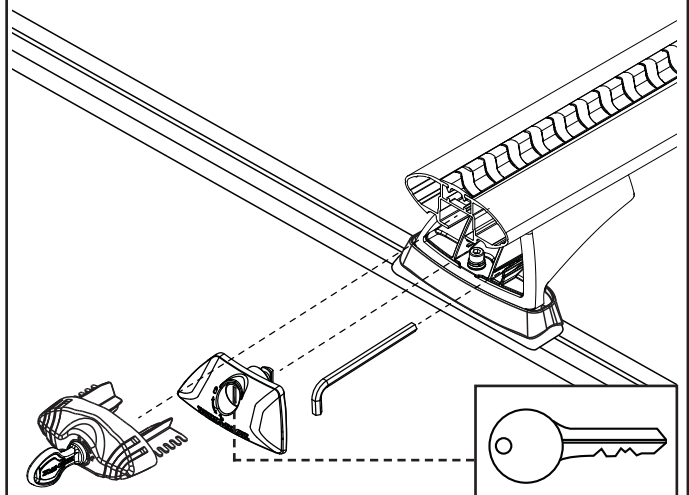




RCL, RCH 2,4,6 Kits

 
Note To fit Legs to Heavy Duty Crossbars, Pioneer Trays and Platforms Pioneer QMHD05 must be purchased as separate. Install the Spacer Kit then the HD Crossbars.

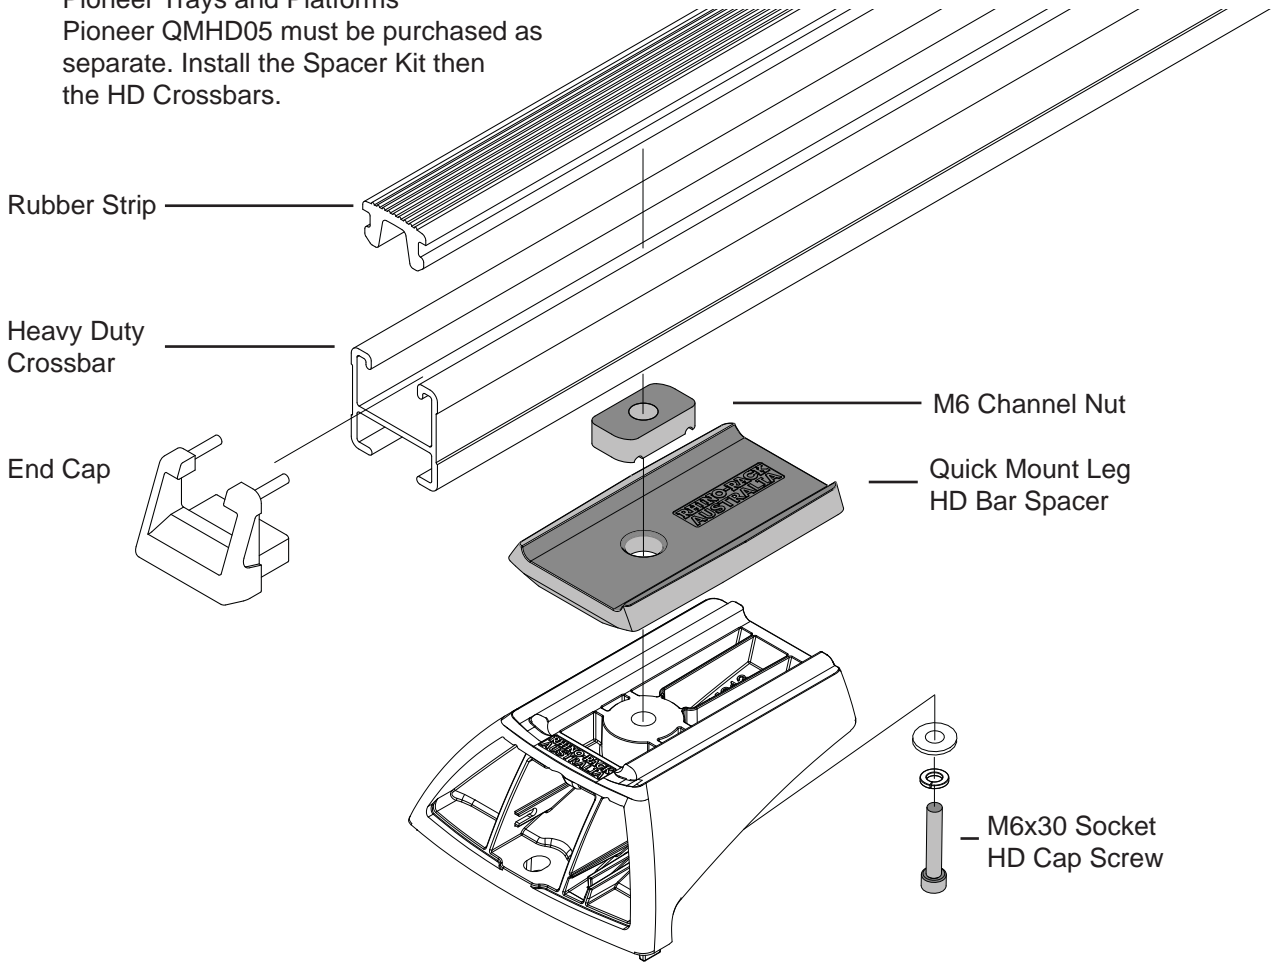

 To fit Legs to Pioneer Trays/ Platforms, positioned wide on vehicle, QMPS10 must be purchased as separate. Install the Spacer Kit then the Tray/ Platform.

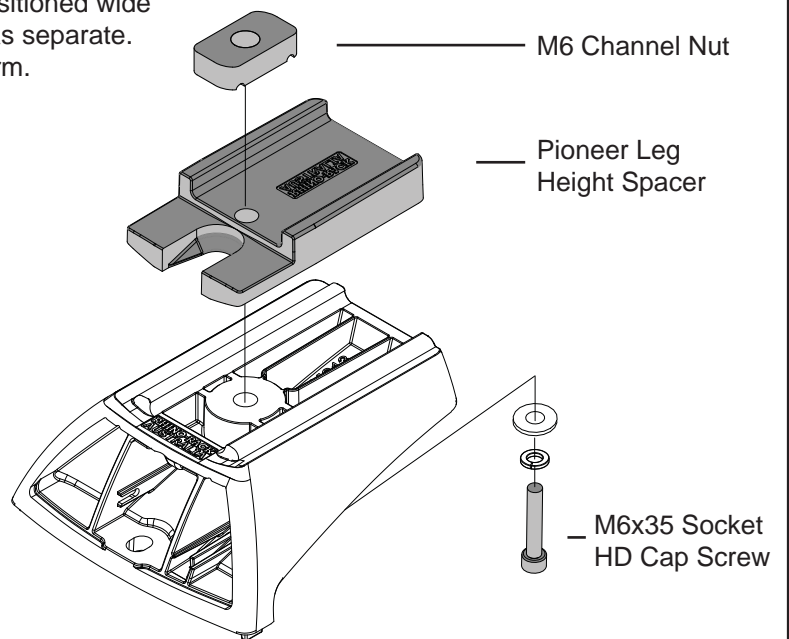

 Check all fixtures are secure before use.

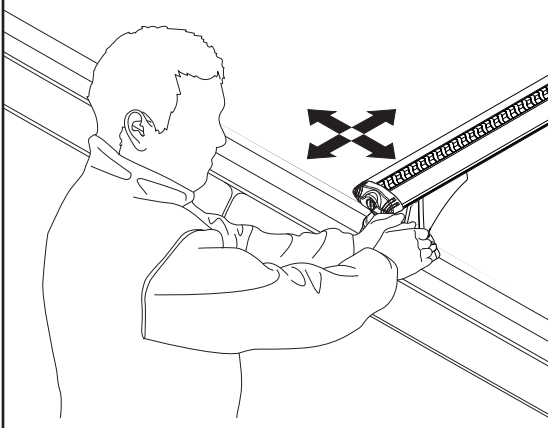




RHINO-RACK

RCP15-BK - HONDA CR-V

 Important: Please read these instructions carefully prior to installation.
Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
Check the contents of this kit before commencing fitment and report any discrepancies.
Place these instructions in the vehicle's glove box after installation is complete.

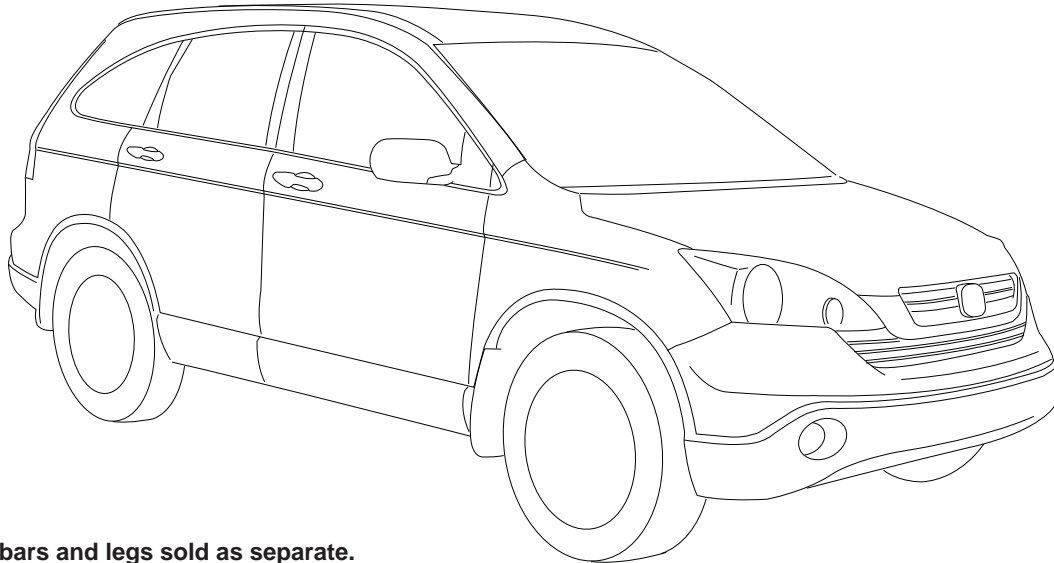

Note: Crossbars and legs sold as separate.

Maximum roof load: 75kg

1. Check Part No./Kit is correct
2. Read through instruction before installing
3. Fit roof rack accessory
4. Check and recheck all fasteners are secure

Note: Be sure to check the Rhino-Rack website to see if you have the latest version of instructions before beginning installation. Refer to vehicle manufacturers handbook for maximum roof loading. Always use lower of the two figures.

Recommendations: It is essential that all bolt connections be checked after driving a short distance when you first install your crossbars. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are refitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

Crossbars must be removed when putting vehicle through an automatic car wash.

Carrying Loads: Use only non-stretch fastening ropes or straps to secure your load.

Caution: The handling characteristics of the vehicle change when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.

Load Ratings:









Maximum permissible load is 75kg (165lbs) for two crossbars including the weight of the crossbars, 5kg (11lbs). When crossbars are to be used in off-road conditions, please build a safety factor of 1.5 into this load limit for off-road use, two crossbars = **50kg (110lbs)**. Although the crossbars are tested and approved to AS1235-2000, off-road conditions can be much more rigorous. However, increasing the number of crossbars does not increase the vehicles maximum permissible roof loading.

Note for Dealers and Fitters:


It is your responsibility to ensure instructions are given to the end user or client.



        
RCP15-BK - HONDA CR-V

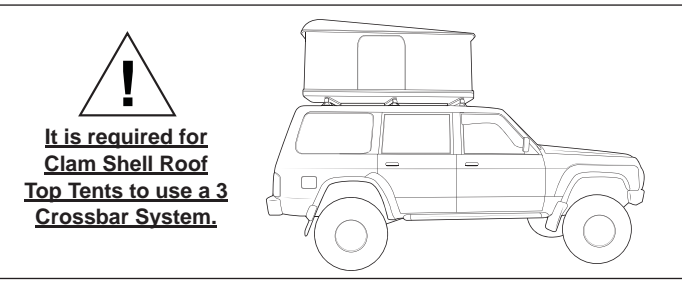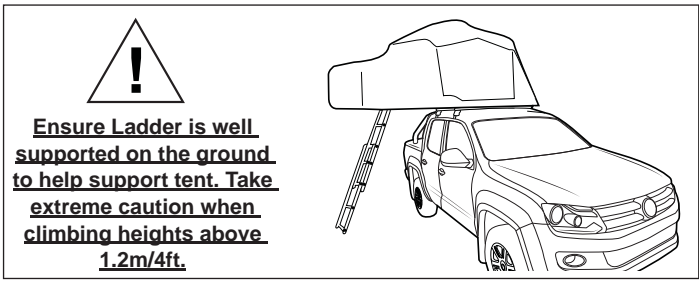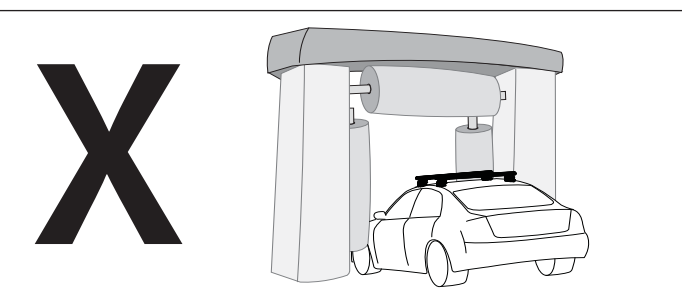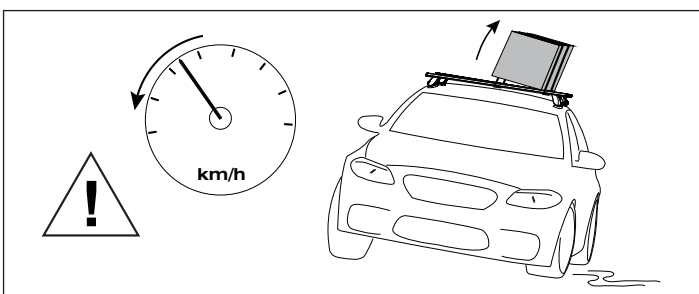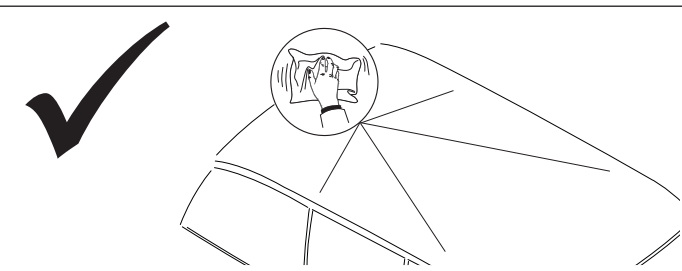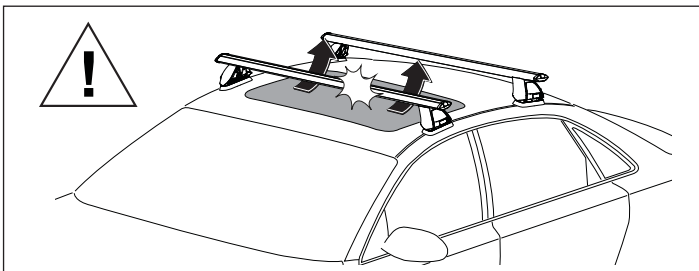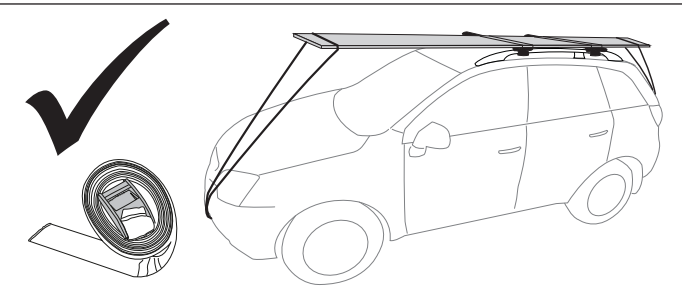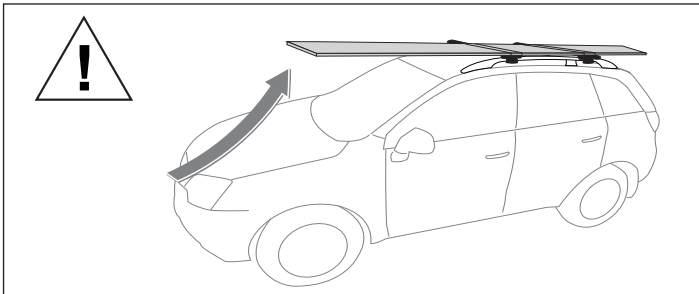

 When these roof racks are to be used on a vehicle that is driven off sealed roads the maximum load rating must be divided by 1.5. Remember to subtract the weight of the roof racks to determine your maximum permissible load capacity.

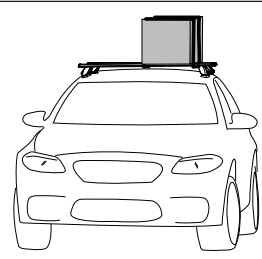

 2 bars 75kg (165lbs) load rating (Urban road) = **2 bars 50kg (110lbs) load rating (Off road)**
Load rating not taking into account crossbar weight - 5kg

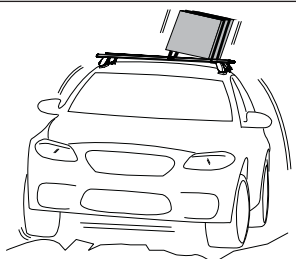

WARNING! Important Load Carrying Instructions

With utility vehicles, the cabin and the canopy move independently. Roof racks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roof racks or the canopy roof racks.

Paddle/ Surfboards should be fixed to the front of the vehicle.




RCP15-BK - HONDA CR-V

Parts List


Item	Component Name	Qty	Part No.
1	M6 x 30mm Hex Setscrew	4	B202
2	M6 Spring Washer	4	W004
3	M6 x 16mm Flat Washer	4	W031
4	M8 Tube Nuts	8	N049
5	Honda CRV FL Mounting Pad	1	M341
6	Honda CRV FR Mounting Pad	1	M342
7	Honda CRV RL Mounting Pad	1	M343
8	Honda CRV RR Mounting Pad	1	M344
9	U-Shaped Rubber Strip	4	R017-80
10	Mount Point Cover Plate	4	M126
11	5mm Allen Key	1	H021
12	M6 Washer (used on cover plate)	4	W003
13	Fitting Instruction	1	R1284

 Tools required: Allen key, included. 10mm socket wrench.

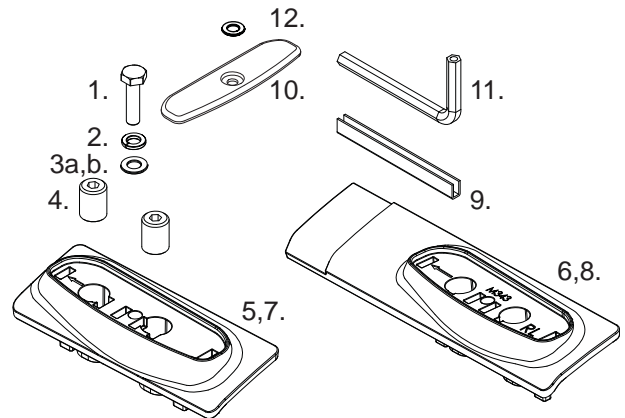



Instructions

 - 1** Remove eight roof trim covers, four to access adjustment screws and four to allow base pads to be installed. Use a flat head screwdriver to remove covers.

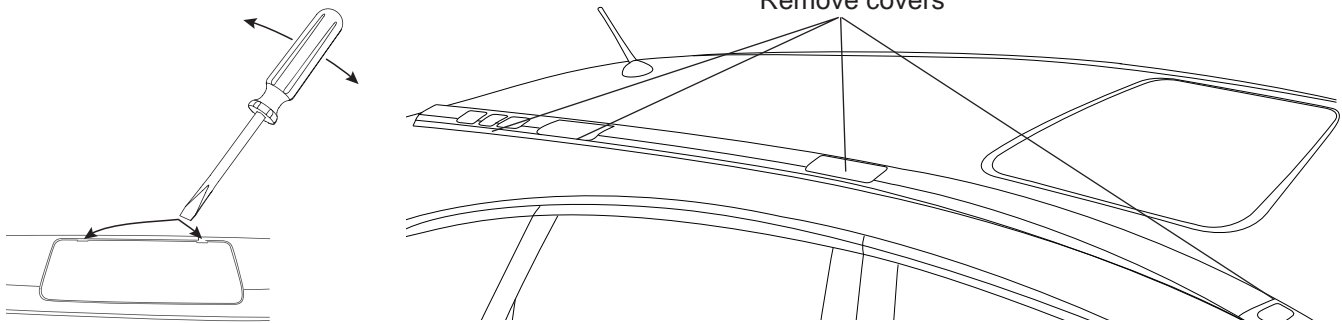


- 2** Arrows on base pads must point towards front of vehicle when installed.

 
 
FL = Front Left - item 5
 FR = Front Right - item 6
 RL = Rear Left - item 7
 RR = Rear Right - item 8

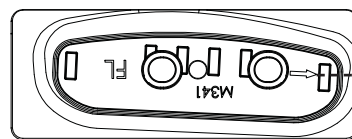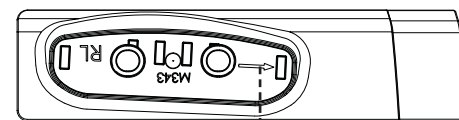

Base pad
 arrows forward

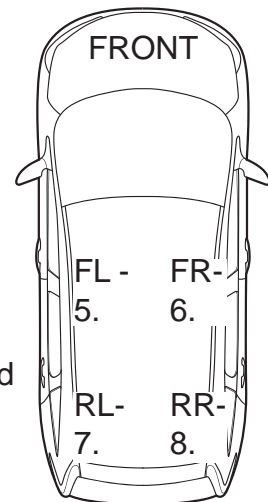 

  - 3** Slide a rubber strip onto each base pad.

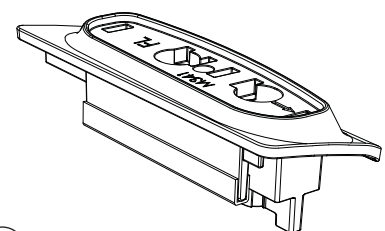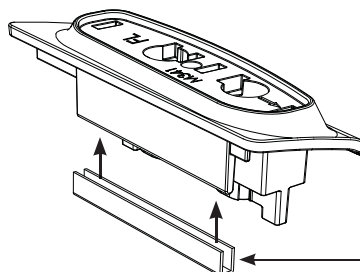


9




RCP15-BK - HONDA CR-V

4

 
- Loosen 8 x roof trim adjustment nuts to help with alignment of Front & Rear base pads.
- Place Front & Rear base pads in position.
- Position roof trim so pads sit correctly.
- Remove Front & Rear base pads.
- Tighten roof trim adjustment nuts. 3-4 Nm (2-3 lb/ft).
- Re-fit Front & Rear base pads.

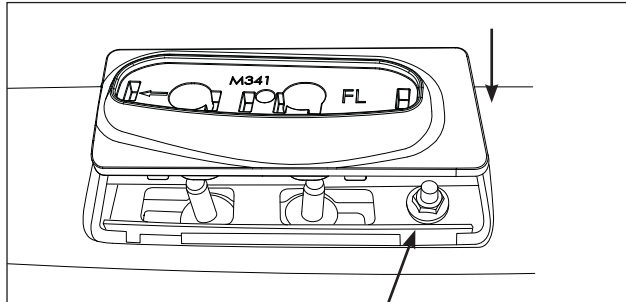

x 2
FRONT Left
FRONT Right

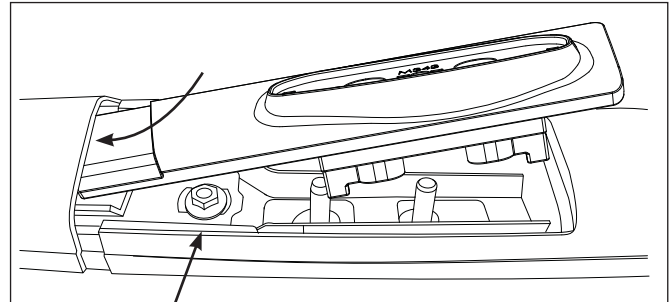 


x 2
REAR Left
REAR Right

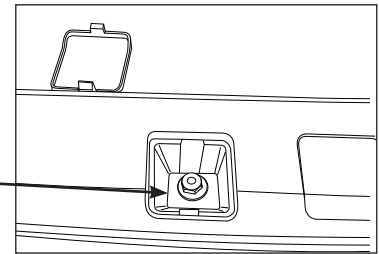 

x 4
FRONT
REAR

5

 - Fasten all four base pads with M8 tube nuts. 3-4 Nm (2-3 lb/ft). Use 5mm Allen key supplied.

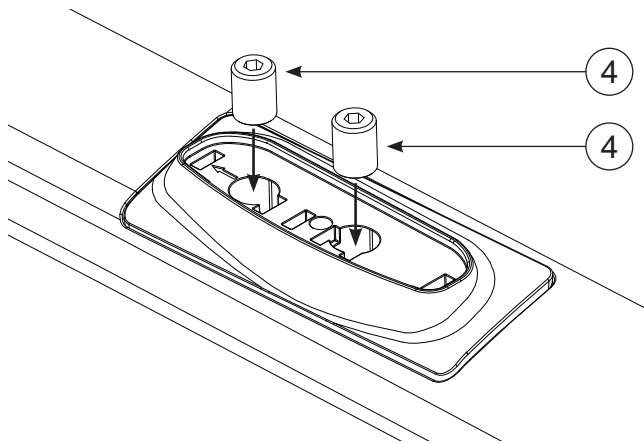

6

- Fix the crossbars to the vehicle using the M6 x 30mm hex setscrew, M6 spring washer and flat washer provided as per corresponding instructions. When crossbars are not in use, remove and install the mount point cover plates as shown.

