





RCL, RCH 2,4,6 Kits

0						
				Parts	s List	
ltem	RCL	2 Kit Qty	4 Kit Qty	6 Kit Qty	Part No.	
1	Locking Leg Cover (37mm)	2	4	6	M810	
2	Locking Leg Base (37mm)	2	4	6	M813	RCL 37mm RCH 52mm
3	Key Barrel	2	4	6	CA1339	1
4	Кеу	1	2	2	-	2.
5	Allen Key	1	1	1	H034	
6	M6 x 20mm Socket Head Screw	2	4	6	B054	1 . ~
7	M6 Spring Washer	2	4	6	W004	1 O -A; O
8	M6 x 16mm Flat Washer	2	4	6	W031	
9	M6 Nut 30mm x 25mm	2	4	6	N035A	
10	Instructions	1	1	1	R1182	
tem	RCH	2 Kit Qty	4 Kit Qty	6 Kit Qty	Part No.	- 11. - 9. - 8.
10	Locking Leg Cover (52mm)	2	4	6	M812	- € ♥
11	Locking Leg (52mm)	2	4	6	M811	
3	Key Barrel	2	4	6	CA1339	
4	Кеу	1	2	2	-	Tools Required:
5	Allen Key	1	1	1	H021	Allen Key (provided).
6	M6 x 20mm Socket Head Screw	2	4	6	B054	Metal Key (provided).
7	M6 Spring Washer	2	4	6	W004	Notes:
8	M6 x 16mm Flat Washer	2	4	6	W031	Crossbars and Fit Kits are sold as separ
9	M6 Nut 30mm x 25mm	2	4	6	N035A	and are required for individual vehicle fit Heavy Duty Bars will require a QMHD05
10	Instructions	1	1	1	R1182	
	position.				e and rem	ove. Remove the Allen Key from its storage
Leg used throughout instructions.				Fr	ont View:	Sed Open
2	Insert the M6 hardware as shown. Finger tighten only at this stage.		M6 Nu	t 30mm	n x 25mm -	M6 x 16mm Flat Washer G – M6 Spring Washer













