
**Important:** Please read these instructions carefully prior to installation.

Please refer to your fitting instruction to ensure that the Roof Rack System is installed in the

correct location.

Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete.

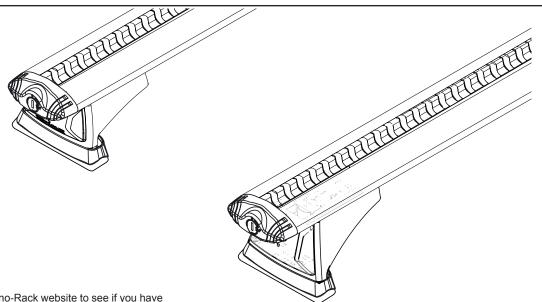

**Note:** Be sure to check Rhino-Rack website to see if you have the latest version of instructions before beginning installation.

Maximum load carrying capacity: 100kg / 220lbs

#### Important Information

. ☐ Check Part No./Kit is correct	<ol><li>Image: 3. ☐ Fit roof rack accessory</li></ol>
-----------------------------------	---

2. Read through instruction before installing 4. Check and recheck all fasteners are secure

Maximum carrying capacity: Up to 100kg (220lbs) including the weight of the rack system.

Please refer to your vehicle manufacturers handbook for maximum carrying capacity. Always use the lower of the two figures. Load must be evenly distributed over the entire basket.

**Warning:** Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.

Use only non-stretch fastening ropes or straps.

**Recommendations:** It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible and must be entirely contained within the extents of the


roof racks. Rack System must be removed when putting vehicle through an automatic car wash.


Caution: The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.


#### Off-road use:


The Roof Rack System may be used in off road applications, however a safety factor of 1.5 is enforced. That is, maximum permissible off road load is **66kg (145lbs)**. Although the crossbars are tested and approved to AS1235-2000/ 15011154, off-road conditions can be much more rigorous. Extreme car must be taken in off road conditions.




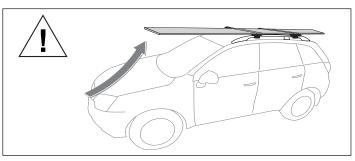


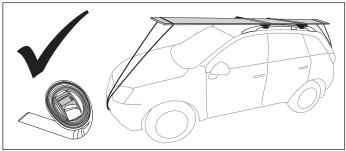

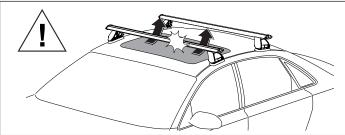

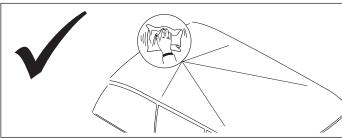


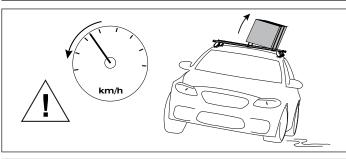

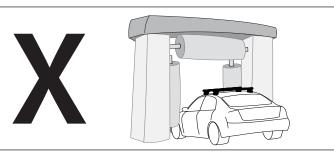




Ensure Ladder is well supported on the ground to help support tent. Take extreme caution when climbing heights above 1.2m/4ft.

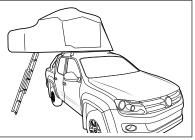

It is required for Clam Shell Roof
Top Tents to use a 3
Crossbar System.

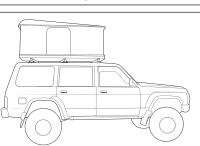

When these roof racks are to be used on a vehicle that is driven off sealed roads, the manufacturer maximum roof load rating (to be found in the vehicles User Manual) should be *divided by 1.5.* Do not forget to subtract the complete crossbar system weight from your maximum carrying capacity.





100kg/220lbs (Urban Road) = 66kg/145lbs (Off Road)




#### **WARNING!** Important Load Carrying Instructions

With utility vehicles, the cabin and the canopy move independently. Roofracks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roofracks or the canopy roofracks.

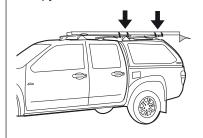

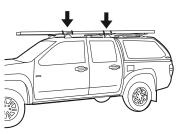


Paddle/ Surfboards should be fixed to the front of the vehicle.

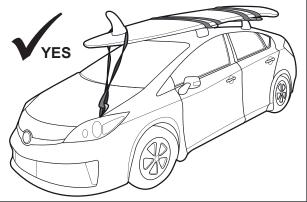



### **Parts List**

Item	RCL	2 Kit Qty	4 Kit Qty	6 Kit Qty	Part No.
1	Locking Leg Cover (37mm)	2	4	6	M810
2	Locking Leg Base (37mm)	2	4	6	M813
3	Key Barrel	2	4	6	CA1339
4	Key	1	2	2	-
5	Allen Key	1	1	1	H034
6	M6 x 20mm Socket Head Screw	2	4	6	B054
7	M6 Spring Washer	2	4	6	W004
8	M6 x 16mm Flat Washer	2	4	6	W031
9	M6 Nut 30mm x 25mm	2	4	6	N035A
10	Instructions	1	1	1	R1182
Item	RCH	2 Kit Qty	4 Kit Qty	6 Kit Qty	Part No.
10	Locking Leg Cover (52mm)	2	4	6	M812
11	Locking Leg (52mm)	2	4	6	M811
3	Key Barrel	2	4	6	CA1339
4	1				
ı .	Key	1	2	2	-
5	Key Allen Key	1	2	2	- H021
<u> </u>		· ·			- H021 B054
5	Allen Key	1	1	1	110-1
5	Allen Key M6 x 20mm Socket Head Screw	1 2	1 4	1 6	B054
5 6 7	Allen Key M6 x 20mm Socket Head Screw M6 Spring Washer	1 2 2	1 4 4	1 6 6	B054 W004

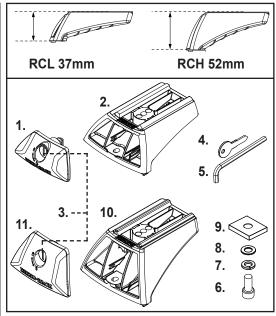

#### **Tools Required:**


Allen Key (provided). Metal Key (provided).


#### Notes:

Crossbars and Fit Kits are sold as separate and are required for individual vehicle fits. Heavy Duty Bars will require a QMHD05 kit.


## Instructions

Use the Metal Key provided to unlock the Cover Plate and remove. Remove the Allen Key from its storage position.

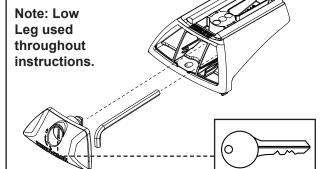


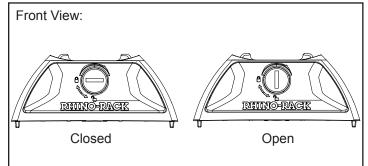


 Insert the M6 hardware as shown. Finger tighten only at this stage.

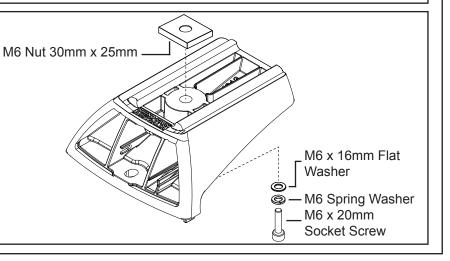







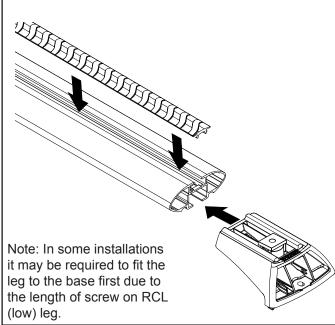


Fix the Crossbars to the vehicle specific Base Kit that has been purchased, using the Allen Key provided.

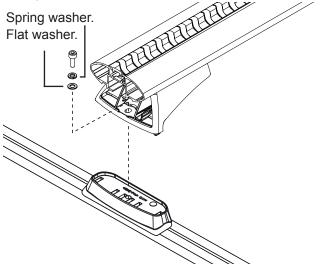


 **Note:** Images are example only. RCL/RCH legs can be fit to either tracks or pads. Pads and track fit kits are sold as separate.




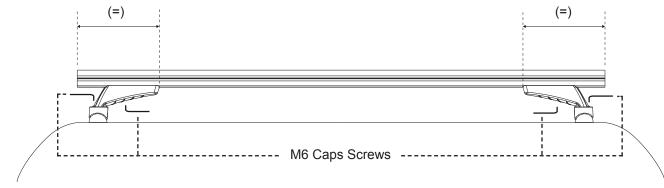


Insert the Underbar Strips into the slots either side of the installed Leg. Cut to length as required.

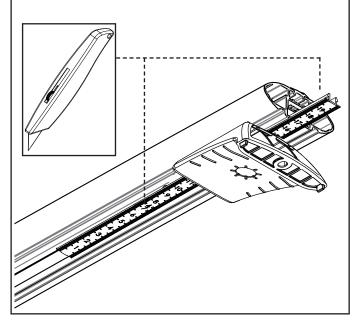

Insert the Crossbar End Caps and lock in place.
Replace the Allen Key and Leg Cover. Lock the
Leg Cover Plate with the key provided. Be sure all
fixtures are secure before use.

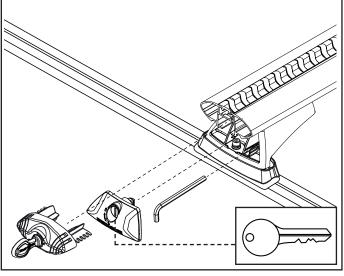



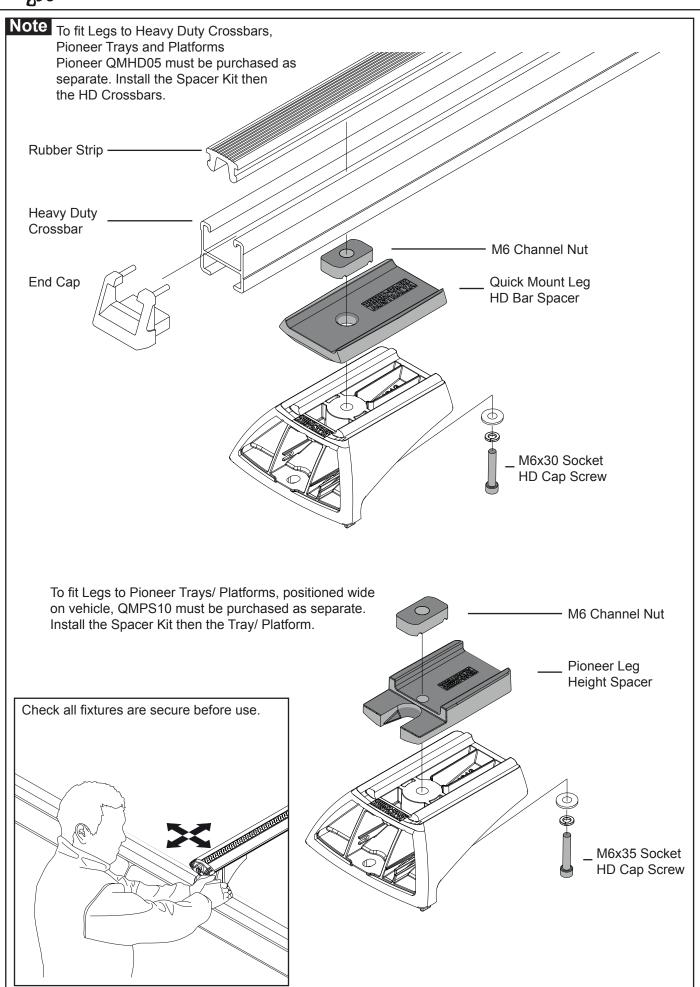


### **RCP51-BK Base Kit**

**Important:** Please read these instructions carefully prior to installation.

Please refer to your fitting instruction to ensure that the roof racks are installed in the

correct locations.

Check the contents of kit before commencing fitment and report any discrepancies

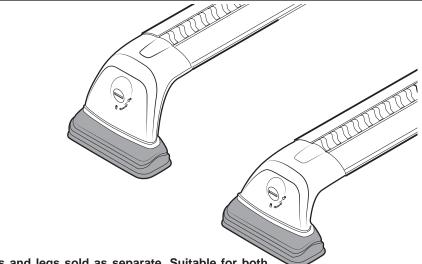

Note: Crossbars and legs sold as separate. Suitable for both

RVL, RVH, RCL and RCH legs and bars.

### **Important Information**

2. Read through instruction before installing 4. Check and recheck all fasteners are secure Maximum carrying capacity: 75kg (165lbs) evenly distributed over crossbars when mounted on the strongest section of the roof. Please refer to your vehicle manufacturers handbook for maximum roof loading. Always use the lower of the two figures. Note: Be sure to check the Rhino-Rack website to see if you have the latest version of instructions before	1. 🗆	Check Part No./Kit is correct	3.□	Fit roof rack accessory
the roof. Please refer to your vehicle manufacturers handbook for maximum roof loading. Always use the lower of the two figures. Note: Be sure to check the Rhino-Rack website to see if you have the latest version of instructions before	2. 🗆	Read through instruction before installing	4.	Check and recheck all fasteners are secure
	the roof. Plea	se refer to your vehicle manufacturers handb	ook fo	r maximum roof loading. Always use the lower of the

#### Advisory:

It is essential that all bolt connections be checked after 48hrs from when you first install your crossbars. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are refitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

Use only non-stretch fastening ropes or straps.

#### **Load Ratings**

When these roof racks are to be used on a vehicle that is driven off sealed roads, the manufacturer maximum roof load rating (to be found in the vehicle's User Manual) should be divided by a safety factor of **2**. For example, if the vehicle's maximum roof load rating is 75kgs\165lbs, these racks, when fitted to this vehicle should have no more than 37.5kgs\82lbs loaded on them.

#### Caution:

The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking. Please remove crossbars when putting vehicle through an automatic car wash.


Note for Dealers and Fitters: It is your responsibility to ensure instructions are given to the end user or client.




### **RCP51-BK Base Kit**

#### **Parts List**


Item	Components		Part No.
1	Short Fixed Mount Rotation Block	4	M835
2	Short Fixed Mount Base Cover	8	M836
3	Short Fixed Mount Base	4	M834
4	Tall Fixed Mount Flat Rubber	4	M838
5	M6 x 30mm Hex Setscrew	4	B202
6	M6 Spring Washer	4	W004
7	M6 16mm Flat Washer	4	W031
8	M6 Fix Point Adaptor	4	CA1188
9	Cover Plate	4	M126
10	M6 Washer (used on cover plate)	4	W003
11	Instructions	1	R1330

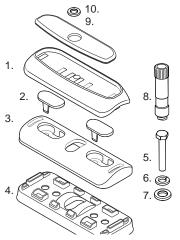


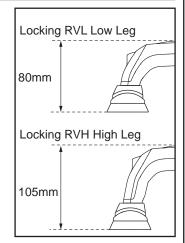


Tools Required: 10mm socket wrench. Note: Legs and Crossbars are sold separate. Be sure to obtain correct kits for your vehicle.

## Instructions

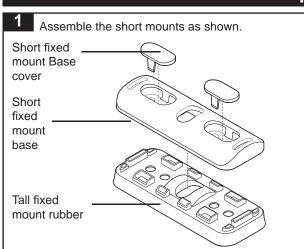


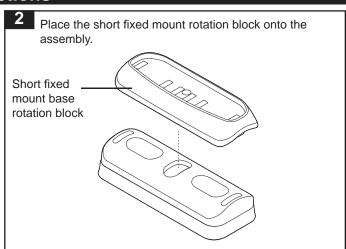


3 Carefully remove the ditch fill. Refer to vehicle owners manual. If the mounting points in the roof can be easily exposed and mount rubber can clear mount windows without interference, move to step 6.

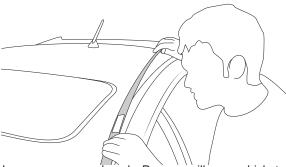

Images are example only. Process will vary vehicle to vehicle.

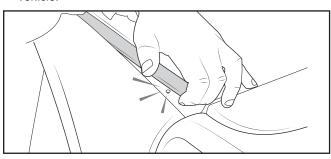

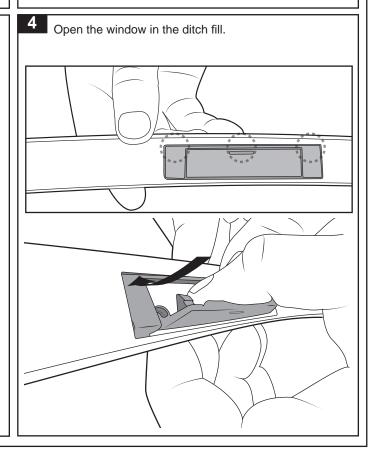



# **RCP51-BK Base Kit**

