
Important: Please read these instructions carefully prior to and during installation.

Check the contents of kit before commencing fitment and report any discrepancies.

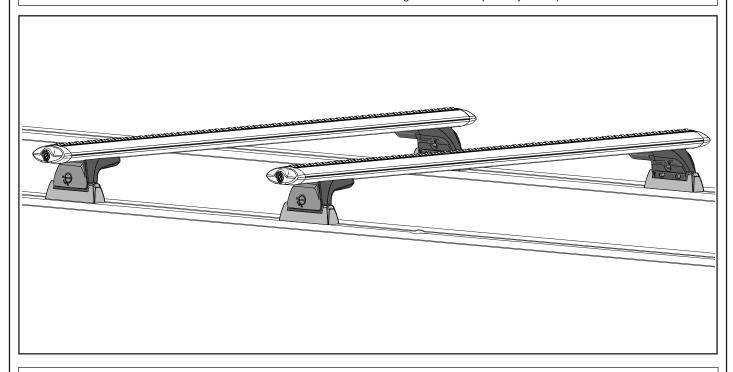

Clean roof prior to installation.

Important Information

Maximum carrying capacity: Up to 100kg. Evenly distributed over the crossbars.

It is essential that all bolt connections be checked after driving a short distance when you first install your crossbars. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are re-fitted.

Make sure to fasten your load securely. Ensure all loads are evenly distributed and centre of gravity is kept as low as possible. **Use only non-stretch fastening ropes or straps.**

Caution: The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.


Please remove crossbars when putting vehicle through an automatic car wash.


Load ratings:


Maximum permissible load for system is up to 100kg per pair of crossbars. When crossbars are to be used in off-road conditions, please build a safety factor of 1.5 into this load limit. Although the crossbars are tested and approved to AS1235-2000, off-road conditions can be much more rigorous. However, increasing the number of crossbars does not increase the vehicles maximum permissible roof loading.


Please refer to your vehicle manufacturers handbook for the maximum roof loading allowable for your make and model vehicle. Always use the lower of the two figures




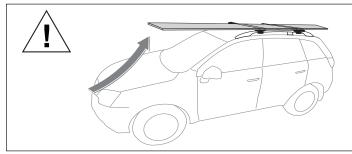


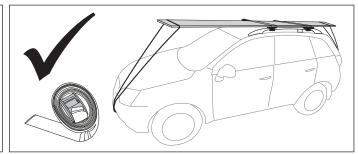


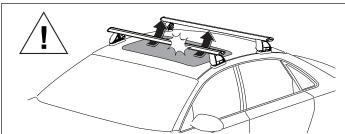


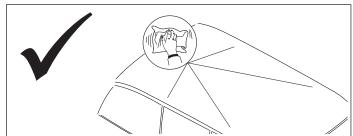

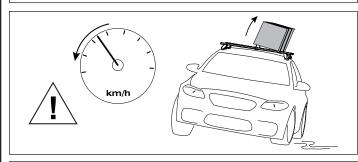


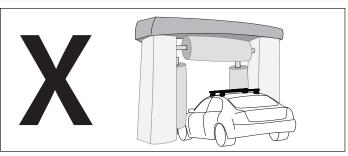

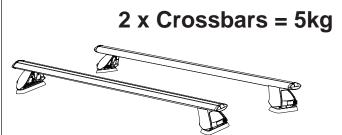

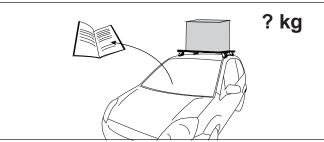

When these roof racks are to be used on a vehicle that is driven off sealed roads, the manufacturer maximum roof load rating (to be found in the vehicles User Manual) should be *divided by 1.5.* Do not forget to subtract 5kg from your maximum carrying capacity due to the weight of the crossbars and legs.

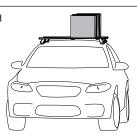



100kg load rating (Urban road) 67 kg load rating (Off road - 50kg / 1.5)



WARNING! Important Load Carrying Instructions

With utility vehicles, the cabin and the canopy move independently. Roofracks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roofracks or the canopy roofracks.

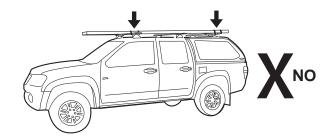

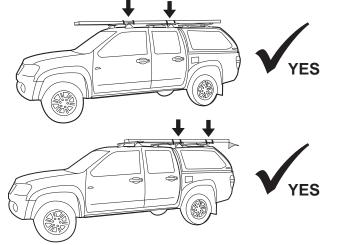





Parts List

| Item | Component Name | Qty | Part No. |
|------|--------------------------------|-----|----------|
| 1 | M6 30x25x5 Nut | 4 | N035A |
| 2 | Track Leg Body | 4 | M703 |
| 3 | M6x16x1.6 Flat Washer | 4 | W031 |
| 4 | M6 Spring Washer | 12 | W004 |
| 5 | M6x20 Socket HD | 4 | B054 |
| 6 | Track Leg Base Cover | 4 | M702 |
| 7 | Track Leg Base | 4 | M701 |
| 8 | 5mm Allen Key | 1 | H021 |
| 9 | Track Leg Lockable Cover | 4 | M704 |
| 10 | M6x16 Button Security Screw | 8 | B061 |
| 11 | M6x12.5 Flat Washers | 8 | W003 |
| 12 | M6 24x21x4 Nut | 8 | N057 |
| 13 | Instructions | 1 | R474 |


Tools Required: Allen Key (provided) Metal Key (provided)

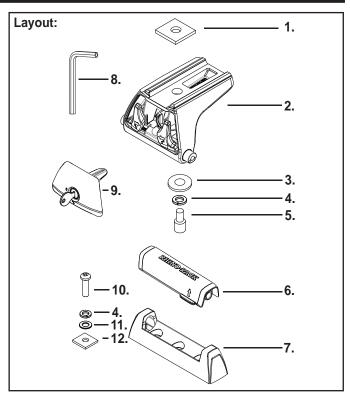


Instructions

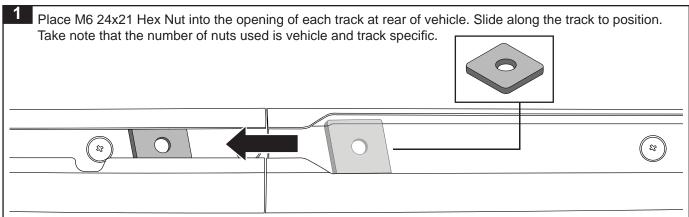


Place the mounting plate onto the track. Fix in place with security screws, spring and flat washers. Note that the amount of fixing hardware used is dependent on the previous step and vehicle requirements.

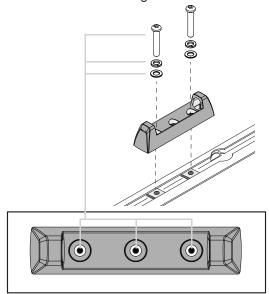


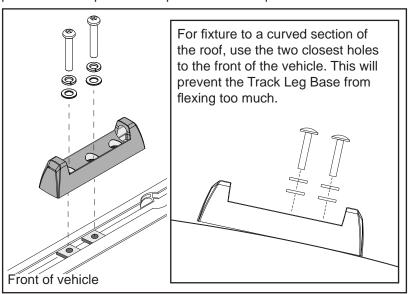




Prepare the Leg for installation as follows: 1 - Remove cover plate. 2 - Locate and Pinch locking levers together. 3 - With levers pinched together, push them backward into a locked position within the leg cavity.

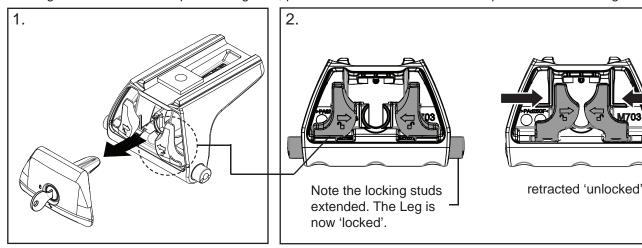


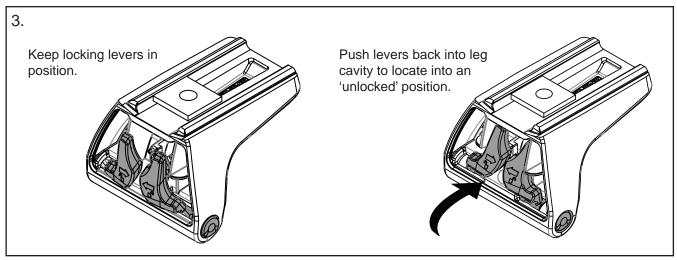


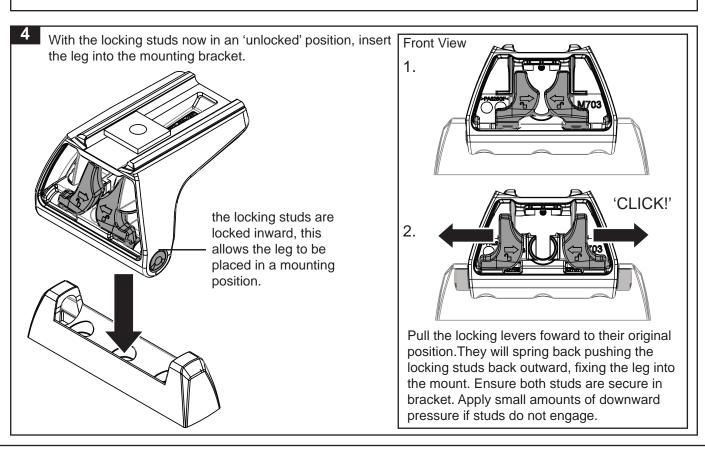




Assemble the leg hardware as shown. Slide the leg into the bar and finger tighten. Repeat for all 4 legs.

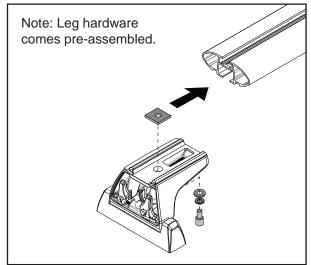

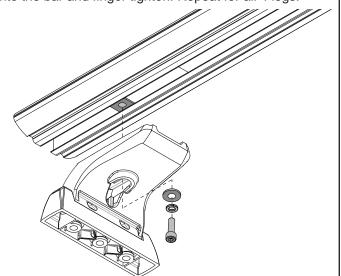



6 Check the cross bar over hang is equal on both sides, re-adjust if required. Tighten with a 5mm allen. key.

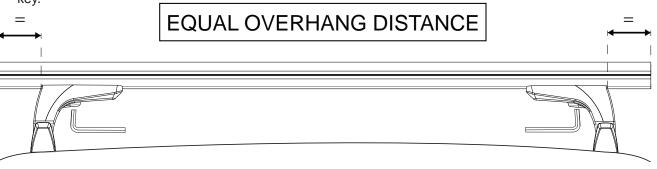


At this point the bar can be removed and the mounting base can be fully tightened if not done so in step 2.


Insert the Face plate into the leg. Using the key provided, insert and turn clockwise to lock the unit.

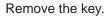

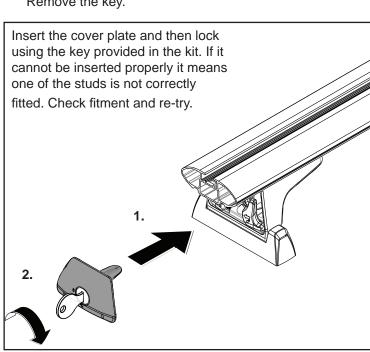


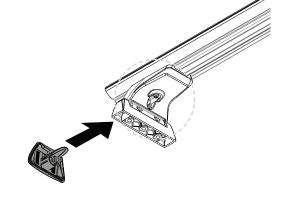


Note: The Face Plate will cover the hardware holding the legs in place. This will help to ensure your system is secure from theft.

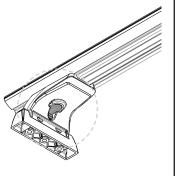




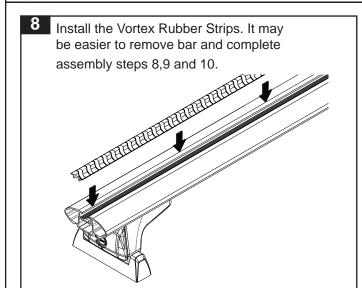

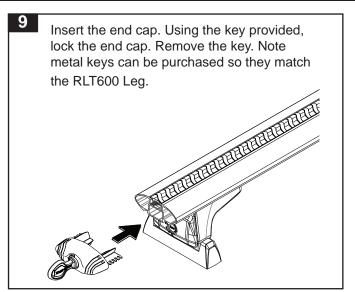



Removing the Bars


Remove the cover plate from the legs. Squeeze the locking levers together and push them backward into the leg cavity. Assistance may be required.

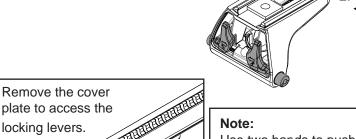


1.

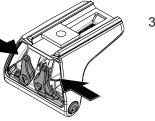


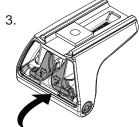


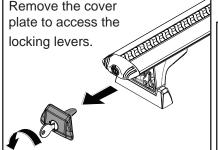

Use two hands to push in the locking levers if tight. Do not used a screw driver as this may damage the levers.

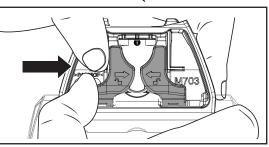


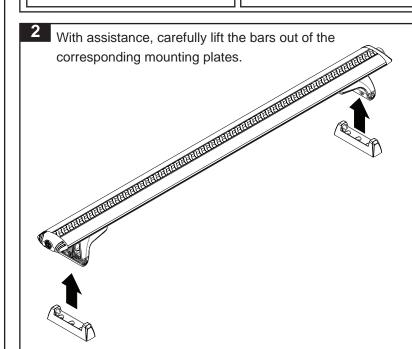

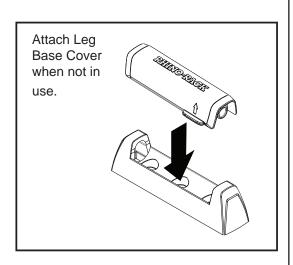



QMFK11

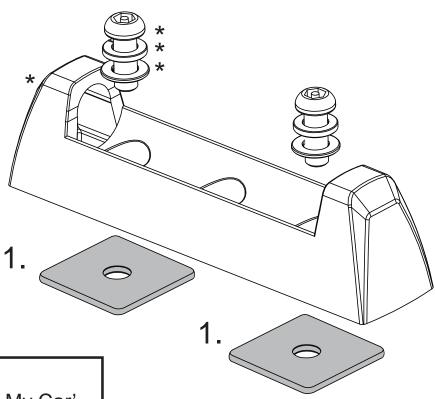

Note:

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

*RLT600 Parts as separate.

| Item | Component | Qty | Part No. |
|------|---------------------|-----|----------|
| 1 | M6 Nut 30x25x5mm | 4 | N035A |
| 2 | Instructions | 1 | R1008 |



| Item | Component Name | Qty | Part No. |
|------|------------------------------------------|-----|-------------|
| 1 | M6 Nut 30x25mmx5mm | 2 | N035A |
| 2 | Adapter Block | 2 | M154 |
| 3 | RCP Leg 3000 32x 3 Square Washer Mech | 2 | W037 |
| 4 | M6 Spring Washer | 2 | W004 |
| 5 | M6x35 Hex Setscrew | 2 | B203 |

*Note:

RL Kit parts are sold separately.

Tools Required: 10mm Wrench

