


INSTALLATION INSTRUCTIONS

For Pet Series Seat Covers

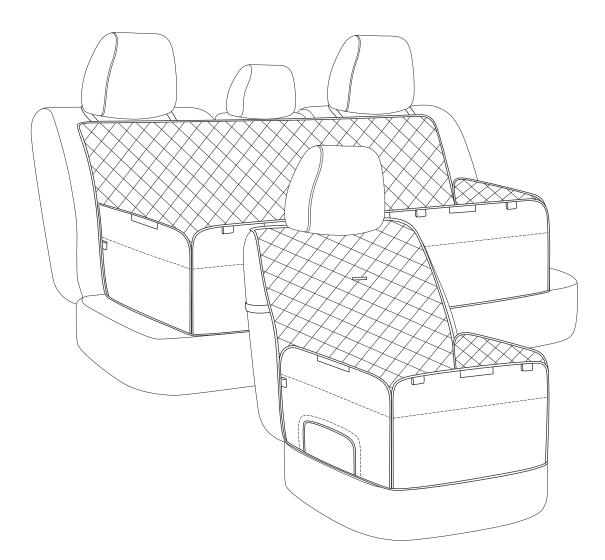

① Open the seat cover packaging, make sure that all components are present and not damaged.



② Open both zippers on the top of the cover and separate the hook and loop. Place the cover over the headrest so that the headrest goes through the top opening in the seat cover. Attach the hook and loop under the headrest and close zippers.







③ Install ring anchors on the bottom of the seat between the seat cushion and the backrest. Slide ring anchors through the seat to the back side of the seat. Once they are on the backside, rotate the anchor 90 degrees to lock it into place.





FIXXU

④ Bring the elastic strap around each side of the seat backrest and latch it together behind the seat.



⁽⁵⁾ Use two hooks on the front of the seat cover and latch them onto the seat frame under the seat cushion.


Note: Do not attach hooks to any moving parts of the seat or electrical components.



⁽⁶⁾ Make sure the seat cover is centered over the seat.



If you want to fold up the sides of the seat cover, simply use the provided zippers located on the seat cover backrest and cushion to hold the side panels in the upright position.

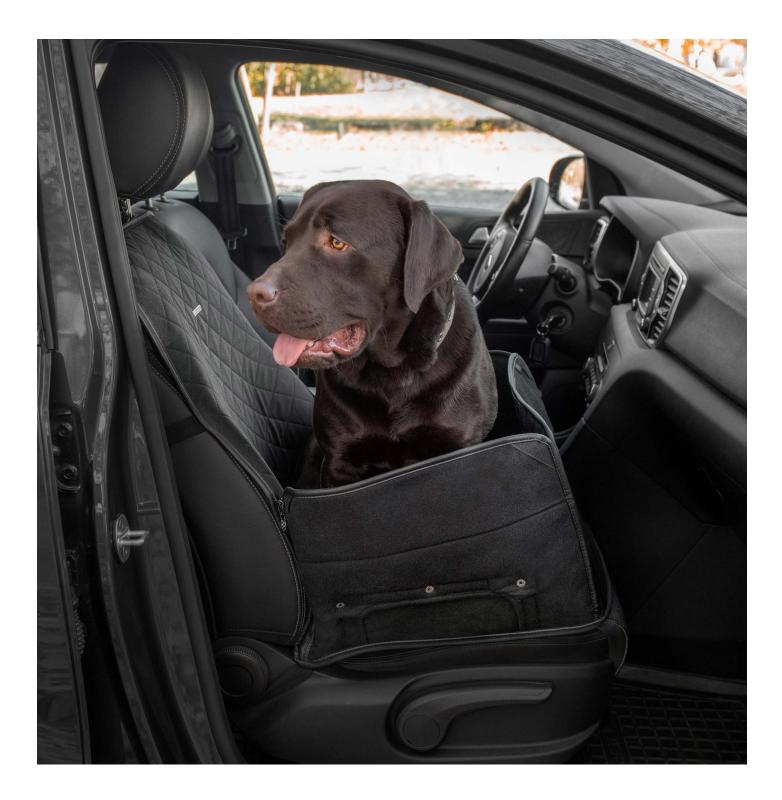

① Open the seat cover packaging and make sure that all components are present and not damaged.



Rixxu SC-PET03-BLK



- 2 Lay the seat cover over the bench seat.
- ③ 3. Slide ring anchors through the lower corner of the seat between the seat cushion and the backrest. Once ring anchors are through the seat and protrude out the back, rotate the anchor 90 degrees to lock it into place.












LIXXU

④ Install the retaining strap behind the headrest. Pull the elastic strap around the back of the headrest and attach using the buckle.

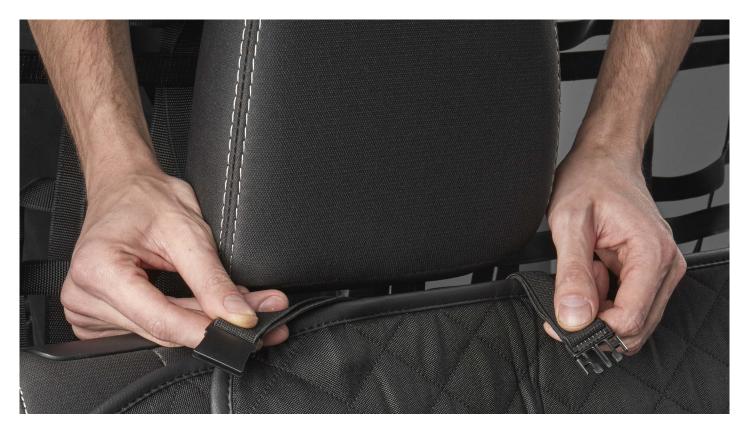





^⑤ Install front and side straps by securing metal hooks to the seat frame underneath the cushion.

[©] Install side panels to the backrest by sliding side pieces underneath the backrest portion of the seat cover with the hook and loop facing up. Apply slight pressure to the seat cover backrest to secure the hook and loop.








⑦ To utilize the seatbelt buckles, pull up the cover over the seat belt buckle, and pull the buckle through the passageway on the seat cover.




LIXXD

[®] If you want to use the side panels in the upright position, wrap the supplied nylon strap around the headrest, attach the clips to the loops on the front of the seat cover. You can then adjust the length to ensure a tight fit.

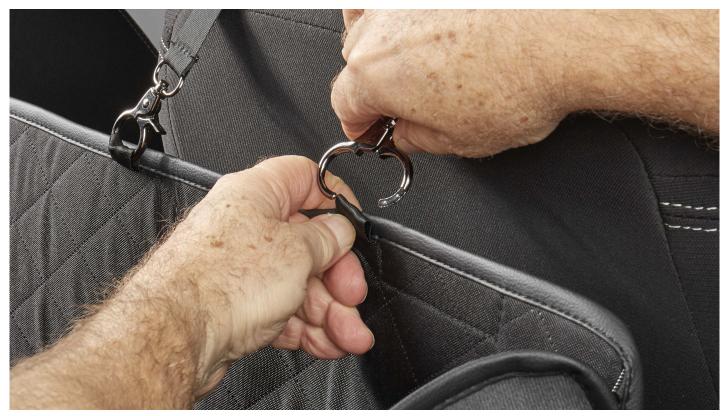




(9) Zip up the zippers for the bottom pieces of the seat cover.

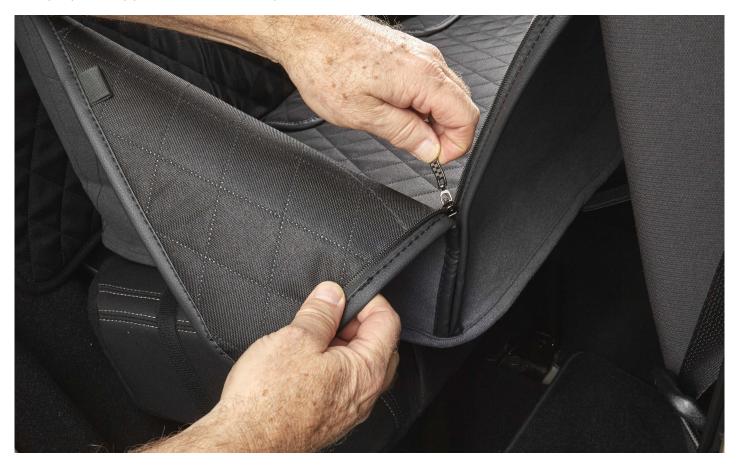

1 Make sure the seat cover is centered and secure.

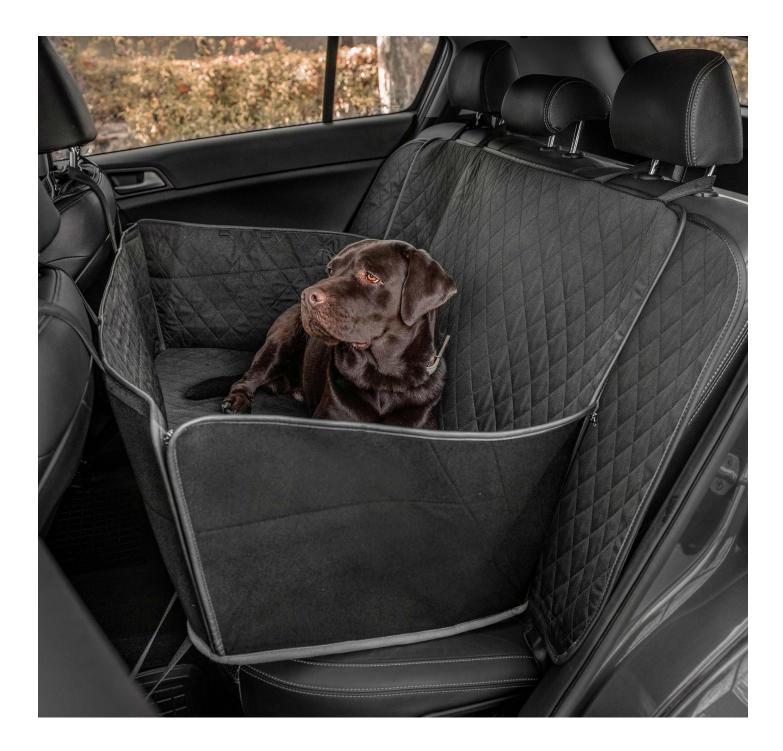

Take a look at other seat covers we have on our website.