
## **MOUNTING BRACKET KIT**

## INSTALLATION INSTRUCTIONS

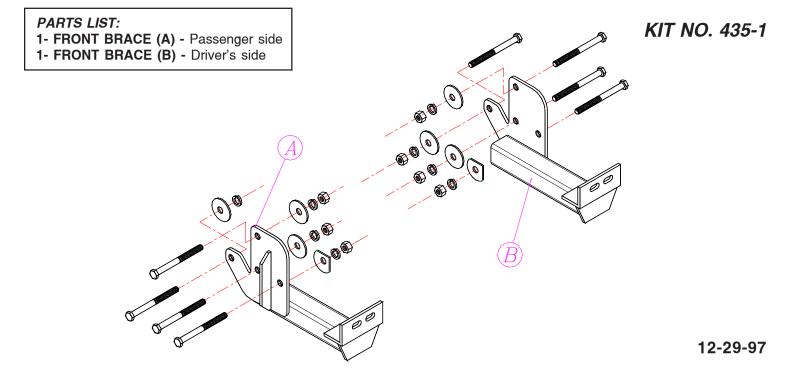

**IMPORTANT:** All brackets **must** be assembled with all the bolts left loose for final adjustment and positioning (before tightening) unless otherwise instructed. All bolts *must* be torqued for proper strength. If more than one bolt is used per fastening point, the diagram may only show one.

> Use flat washers over all slotted holes Use lock washers on all fasteners

ROADMASTER Limited Warranty, including One-Year Conditional Warranty Text and Product Registration Card, in Carton.

Failure to follow these instructions WARNING railure to follow these instructions can result in property damage, personal injury or even death.

- · Installation of most mounting brackets requires moderate mechanical aptitude and skills. We strongly recommend professional installation by an experienced installer.
- · The installer must read the instructions and use all bolts and parts supplied. Failure to do so could result in loss of the towed vehicle.
- · Use Loctite® Red on all bolts used for mounting this bracket.
- Do not use this document for custom fabrication, as it may not show all parts or structural components. Custom fabrication or an attempt to copy this bracket design could result in loss of the towed vehicle.
- · Every 3,000 miles, the owner must inspect the fasteners for proper torque, according to the bolt torque requirements chart on the last page of these instructions. The owner must also inspect all mounts and brackets for cracks or other signs of fatigue every 3,000 miles. Failure to do so could result in loss of the towed vehicle.
- · The owner must check the vehicle manufacturer's instructions for the proper procedure(s) to prepare the vehicle for towing. Some vehicles must be equipped with a transmission lube pump, an axle disconnect, driveline disconnect or free-wheeling hubs before they can be towed. Failure to properly equip the vehicle will cause severe damage to the transmission.
- If running changes were made by the vehicle manufacturer after this bracket was designed, some bolts or other fasteners in the hardware pack may no longer be the correct size. It is the installer's responsibility to verify that the bracket is securely fastened to the vehicle and fitted with the correct hardware to account for these changes. Failure to securely

fasten the bracket could result in loss of the towed vehicle.

- If the towed vehicle has been in an accident, it must be properly repaired before attaching the bracket. Do not install the bracket if any structural frame damage is found. Failure to repair the damage could result in the loss of the towed vehicle.
- · Some motorhome chassis have such a tight turning radius that you can damage your motorhome, towed vehicle, tow bar or bracket while turning sharply. Before getting on the road, test your turning radius in an empty parking lot. Turning too sharply could result in non-warranty damage to towing system, motorhome and/or towed vehicle.
- · Do not back up with the towed vehicle attached or non-warranty damage will occur to your towing system, motorhome and/or towed vehicle.
- The safety cables must connect the towing vehicle to the towed vehicle frame to frame, with the cables crossed, with enough slack for sharp turns. Refer to the cable instructions for proper routing. Failure to leave enough slack in the safety cables, or failure to connect the safety cables frame to frame, will result in the loss of the towed vehicle.
- · This bracket is designed for use with ROADMASTER tow bars and ROAD-MASTER adaptors only. Using this bracket with other brands, without an approved ROADMASTER adaptor, may result in non-warranty damage
- · Upon final installation, the installer must inspect the bracket to ensure adequate clearance, particularly around hoses, air conditioner lines, radiators, etc., or non-warranty damage to the towed vehicle will result.
- This bracket is only warranteed for the original installation. Installing a used bracket on another vehicle is not recommended and will void the warranty.

# MOUNTING BRACKET KIT INSTALLATION INSTRUCTIONS

KIT NO. 435-1

- 1. Important: please use all supplied bolts and parts and read all instructions carefully before beginning this installation. The majority of questions you may have can be answered within the text, and proper installation will ensure safe and secure travel. Now, begin the installation. This bracket kit mounts directly to the outside of each main frame tube. If you wish, you may remove the front bumper assembly to permit easy access to the mounting area. This is accomplished by removing four large nuts on the inside of each bumper mounting bracket, pushing the bolts in and removing the entire bumper assembly.
- 2. The main braces can now be mounted to the sides of the frame tubes using the supplied ½" x 4" bolts, flat washers and nuts. They should be mounted as shown in the illustration. *Note:* the bolts should be put through the brace, frame and backed on the inside of the frame with a flat washer, lock washer and nut. The top hole may be missing on some models. In this case, use the brace as a template and drill a hole through the frame and bolt through. The top bolt is needed on this installation.
- 3. The bumper can be reinstalled at this point, but the lower plastic fairing will have to be either removed or cut to fit the braces. Once this is done, install the bumper. Torque all bolts to the bolt torque requirements below.
- 4. Now, mount your tow bar according to the instructions included with it

### HARDWARE LIST:

8-1/2" X 4" BOLTS 6-1/2" PLATE WASHERS 2-1/2" CLIPPED PLATE WASHERS 8-1/2" LOCK WASHERS 8-1/2" NUTS

12-29-97

### **BOLT TORQUE REQUIREMENTS**

Note: The torque values represented below are intended as general guidelines. Torque requirements for specific applications may vary. Roadmaster does not warrant this information to be accurate for all applications and disclaims all liability for any claims or damages which may result from its use.

STANDARD BOLTS		METRIC BOLTS			METRIC BOLTS		
Thread Size Grade	Torque	Thread Size	Grade	Plated/Unplated	Thread Size	Grade	Plated/Unplated
5/16 5	13 ft./lb.	8mm-1.0	8.8	20 ft./lb. 18 ft./lb.	12mm-1.25.	8.8	70 ft./lb. 65 ft./lb.
3/8 5	23 ft./lb.	8mm-1.25	8.8	19 ft./lb. 18 ft./lb.	12mm-1.5	8.8	66 ft./lb. 61 ft./lb.
7/16 5	37 ft./lb.	10mm-1.25.	8.8	38 ft./lb. 36 ft./lb.	12mm-1.75.	8.8	65 ft./lb. 60 ft./lb.
1/2 5	56 ft./lb.	10mm-1.5	8.8	37 ft./lb. 35 ft./lb.	14mm-2.0	8.8 10	04 ft./lb. 97 ft./lb.
5/8 5	150 ft./lb.						