



Cleaning and Maintenance

Normal Maintenance- Clean filter as required using low pressure compressed air (50-70 psi) directed from the inside (clean) surface toward the outside (dirty) surface.

Discoloration and staining will occur. This will not impact filter restriction and efficiency. Compressed air cleaning will restore the filter's performance.

Never oil this filter as this will only degrade the filter's performance.