



Shed-in-a-Box RoundTop® 10' x 10' x 8' Assembly Instructions

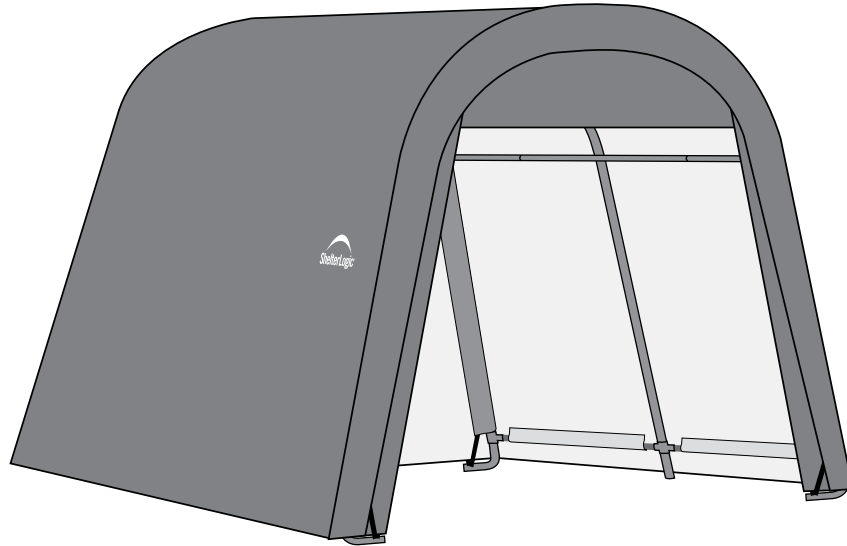

DESCRIPTION	MODEL #
Shed-in-a-Box RoundTop® - Grey	70435
Shed-in-a-Box RoundTop® - Sandstone	70437

RECOMMENDED TOOLS

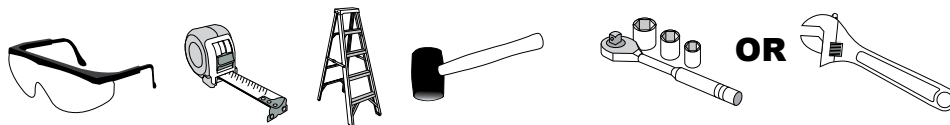

Please read instructions **COMPLETELY** before assembly. This shelter **MUST** be securely anchored. **THIS IS A TEMPORARY STRUCTURE AND NOT RECOMMENDED AS A PERMANENT STRUCTURE.**

Before you start: 2 or more individuals recommended for assembly, approximate time 1½ hours.




ATTENTION:

This shelter product is manufactured with quality materials. It is designed to fit the **ShelterLogic® Corp.** custom fabric cover included. **ShelterLogic® Corp.** Shelters offer storage and protection from damage caused by sun, light rain, tree sap, animal - bird excrement and light snow. Please anchor this **ShelterLogic® Corp.** structure properly. See manual for more anchoring details. Proper anchoring, keeping cover tight and free of snow and debris is the responsibility of the consumer. Please read and understand the installation detail, warnings and cautions prior to beginning installation. If you have any questions call the customer service number listed below. Please refer to the warranty card inside this package.

DANGER:

Prior to installation, consult with all local municipal codes regarding installation of temporary shelters. Choose the location of your shelter carefully. **DANGER: Keep away from electrical wires.** Check for overhead utility lines, tree branches or other structures. Check for underground pipes or wires before you dig. DO NOT install near roof lines or other structures that could shed snow, ice or excessive run off onto your shelter. DO NOT hang objects from the roof or support cables.

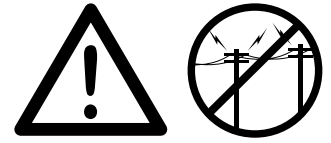

WARNING:

Risk of fire. DO NOT smoke or use open flame devices (including grills, fire pits, deep fryers, smokers or lanterns) in or around the shelter. DO NOT store flammable liquids (gasoline, kerosene, propane, etc.) in or around your shelter. Do not expose top or sides of the shelter to open fire or other flame source.



CAUTION:

Use **CAUTION** when erecting the frame. Use safety goggles during installation. Secure and bolt together overhead poles during assembly. Beware of pole ends.

PROPER ANCHORING AND INSTALLATION OF FRAME:

PROPER ANCHORING OF THE FRAME IS THE RESPONSIBILITY OF THE CONSUMER.


ShelterLogic® Corp. is not responsible for damage to the unit or the contents from acts of nature. Any shelter that is not anchored securely has the potential to fly away causing damage, and is not covered under the warranty. Periodically check the anchors to ensure stability of shelter. **ShelterLogic® Corp.** cannot be responsible for any shelter that blows away. **NOTE:** *Your shelter's cover can be quickly removed and stored prior to severe weather conditions.* If strong winds or severe weather is forecast in your area, we recommend removal of cover.

REPLACEMENT PARTS, ASSEMBLY, SPECIAL ORDERS:







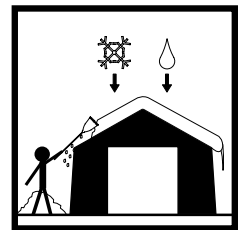

 

















Genuine **ShelterLogic® Corp.** replacement parts and accessories are available from the factory, including anchoring kits for nearly any application, replacement covers, wall and enclosure kits, vent and light kits, frame parts, zippered doors and other accessories. All items are shipped factory direct to your door.

CARE AND CLEANING:

A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate deterioration of cover fabric. Immediately remove any accumulated snow or ice from the roof structure with a broom, mop or other soft-sided instrument. Use extreme caution when removing snow from cover- always remove from outside the structure. DO NOT use hard-edged tools or instruments like rakes or shovels to remove snow. This could result in punctures to the cover. DO NOT use bleach or harsh abrasive products to clean the fabric cover. Cover is easily cleaned with mild soap and water.

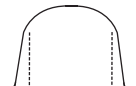
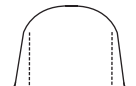


Shed-in-a-Box RoundTop® 10' x 10' x 8' - Parts List - Model 70435 or 70437

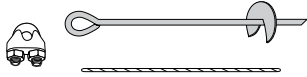Description of Parts:	Quantity	Part #
 Rib Peak 40 3/4 in. / 103,6 cm	3	801034
 Rafter Bend 48 in. / 121,8 cm	6	801033
 Leg Pipe 41 in. / 104,1 cm	6	800921
 Middle Leg Pipe 24 3/4 in. / 62,8 cm	2	800923
 Corner Leg Bend 33 3/4 in. / 86,1 cm	4	800922
 Cover Rails, Swedge 24 1/4 in. / 61,5 cm	4	13345
 Cover Rails 36 1/4 in. / 92,4 cm	4	800163
 Cross Rails, Swedge 31 3/4 in. / 80,5 cm	9	800599
 Cross Rails 30 1/2 in. / 77,8 cm	3	800598
 Half-Clamps for Middle Legs	4	13201
 Half-Clamps for Corner Legs	8	13202
 ShelterLock II® Stabilizer	9	800939
 Ratchet Clamp	8	10240
 Base Feet	2	12270
 Nut 1/4 in. / 6,4 mm	46	01010
 Washer 1/4 in. / 6,4 mm	8	01011
 White Bungee Cords (For holding door open)	2	10066
 Bolts 1/4 x 1 5/8 in. / 6,4 x 41,3 mm	28	10115
 Bolts 1/4 x 1 7/8 in. / 6,4 x 47,6 mm	18	03032
 Cover - Gray (Model # 70435)	1	800947
 Cover - Sandstone (Model # 70437)	1	801360
 2-Zipper Door - Gray (Model # 70435)	1	800949
 2-Zipper Door - Sandstone (Model # 70437)	1	801359
 Back Panel - Gray (Model # 70435)	1	800948
 Back Panel - Sandstone (Model # 70437)	1	801358
 15 in. Auger Anchors (Temporary) Cable - 1 ft. Length Cable Clamps	4 4 4	10014 10015 10016 } 00847


1. ASSEMBLE END RIBS

Secure connections using Bolts as shown with #01010 Nuts.

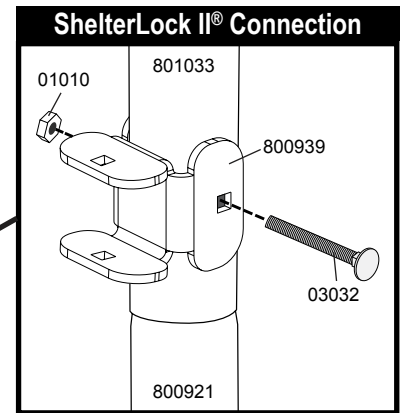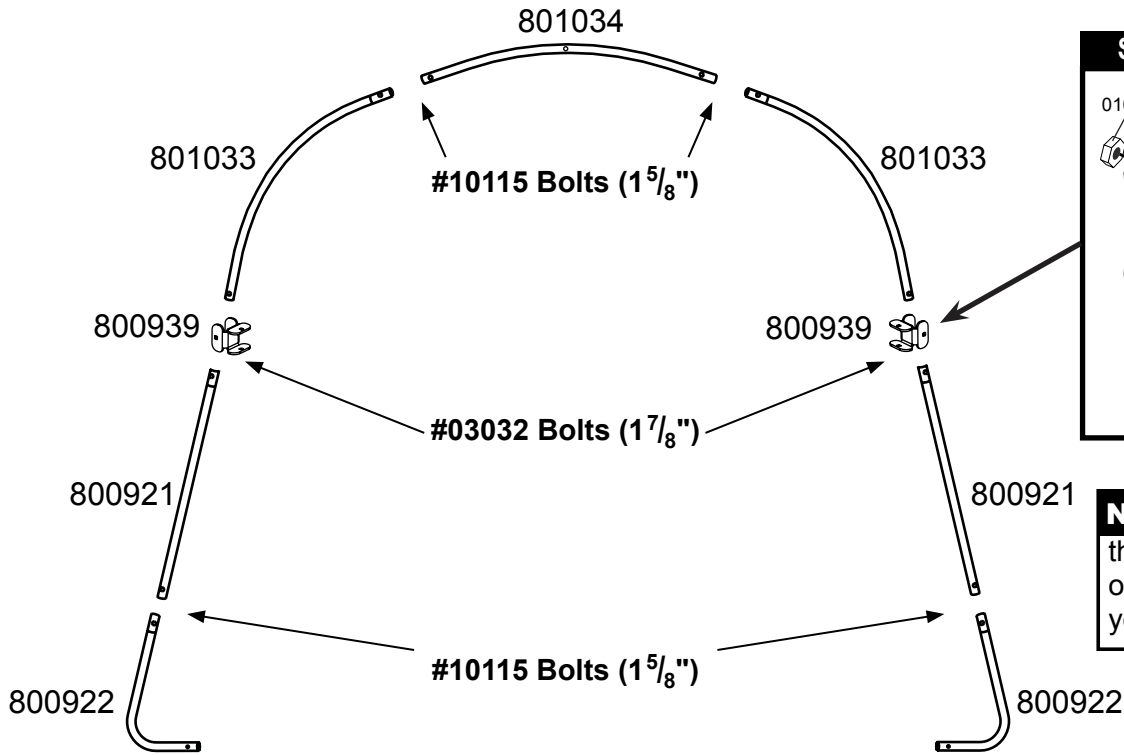

NOTE: The bolt heads at the end ribs must be facing outward to avoid damaging your cover.


2. ASSEMBLE MIDDLE RIB

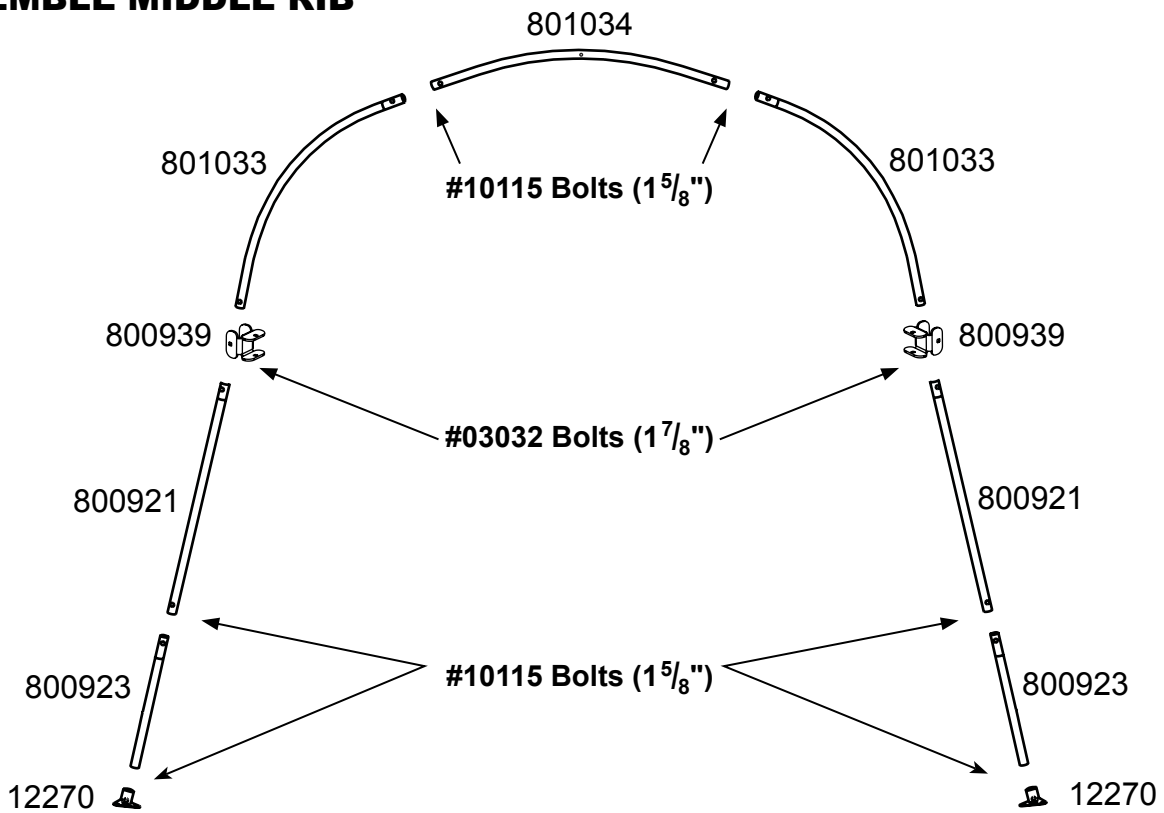

3. ATTACH CROSS RAILS AND COVER RAILS TO FRONT END RIB


- A. Assemble 2 Cover Rails using parts as shown.
- B. Assemble 3 Cross Rails using parts as shown.
- C. Connect the Cross Rails to the End Rib at the ShelterLocks.
- D. Place a Cover Rail at each leg and secure it with a Cover Clamp as shown. Slide the Cover Rails so they are 8 inches up from the ground. **Only HAND-TIGHTEN these bolts!**

ShelterLock II® connections use #03032 (1 7/8") Bolts. Cover Rail Clamp connections use #10115 (1 5/8") Bolts.

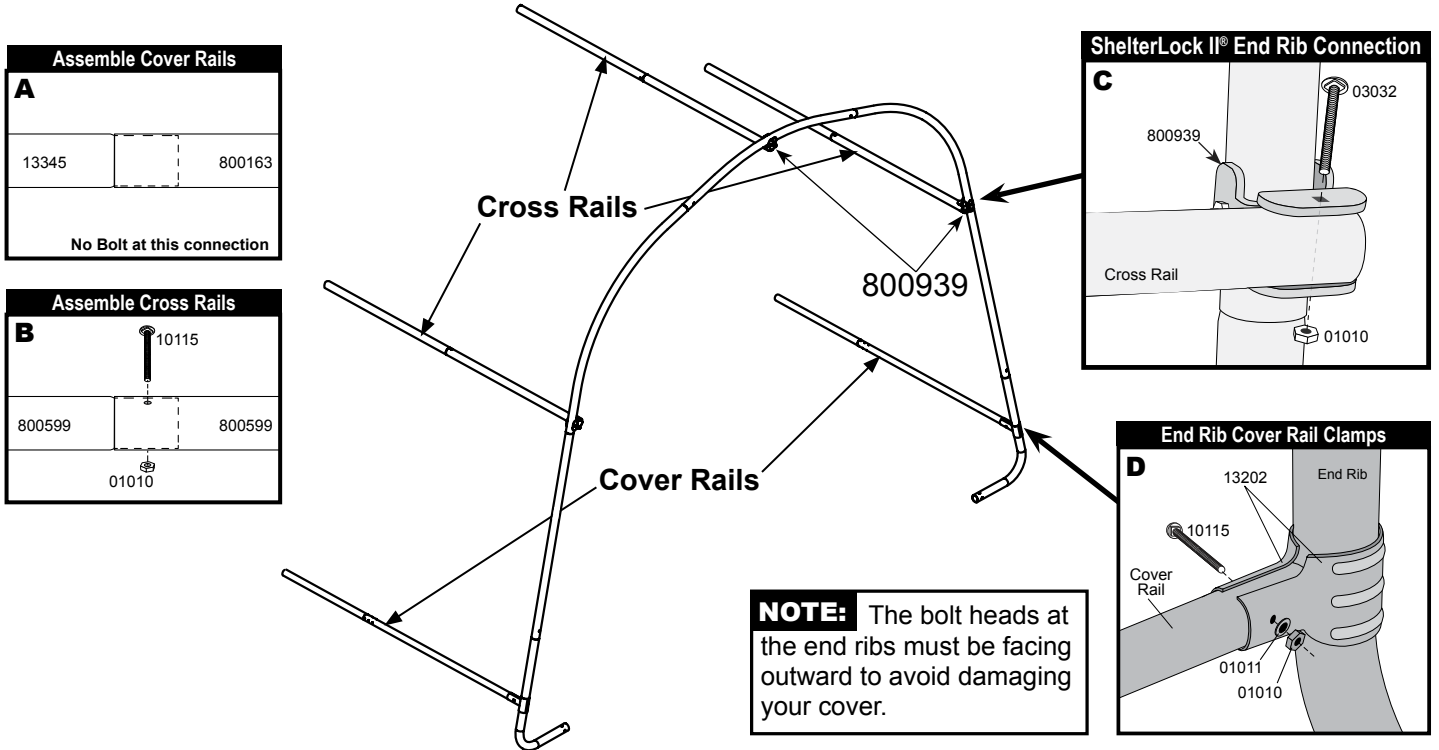

4. CONNECT MIDDLE RIB TO FRONT END RIB



ShelterLock II® connections use #03032 (1 7/8") Bolts. Cover Rail Clamp connections use #10115 (1 5/8") Bolts. Cross Rails face toward the inside of the shed.

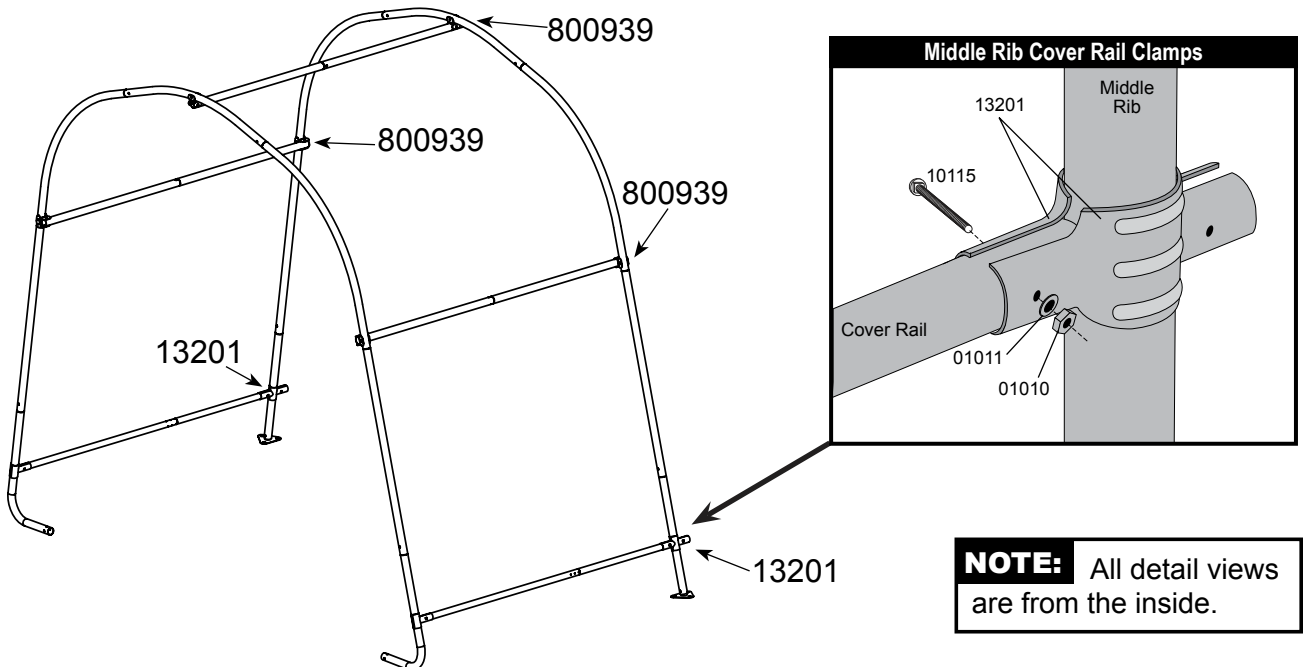





5. CONNECT REAR END RIB

- A. Repeat Cover Rail assembly steps.
- B. Assemble Cross Rails using parts as shown.
- C. Repeat steps to connect Cross Rails with ShelterLocks.
- D. Repeat steps to connect Cover Rails with Cover Rail Clamps. ***Only HAND-TIGHTEN these bolts!***

ShelterLock II® connections use #03032 (1 7/8") Bolts. Cover Rail Clamp connections use #10115 (1 5/8") Bolts. Cross Rails face toward the inside of the shed.

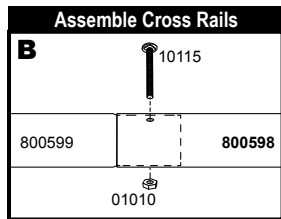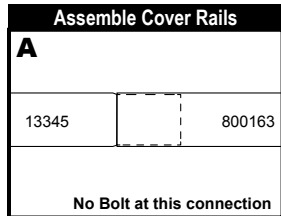


NOTE: The bolt heads at the end ribs must be facing outward to avoid damaging your cover.

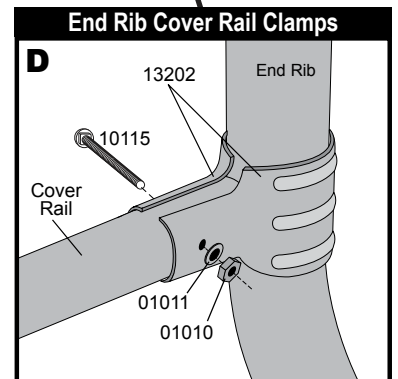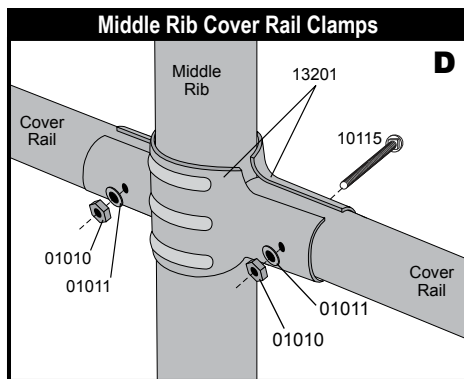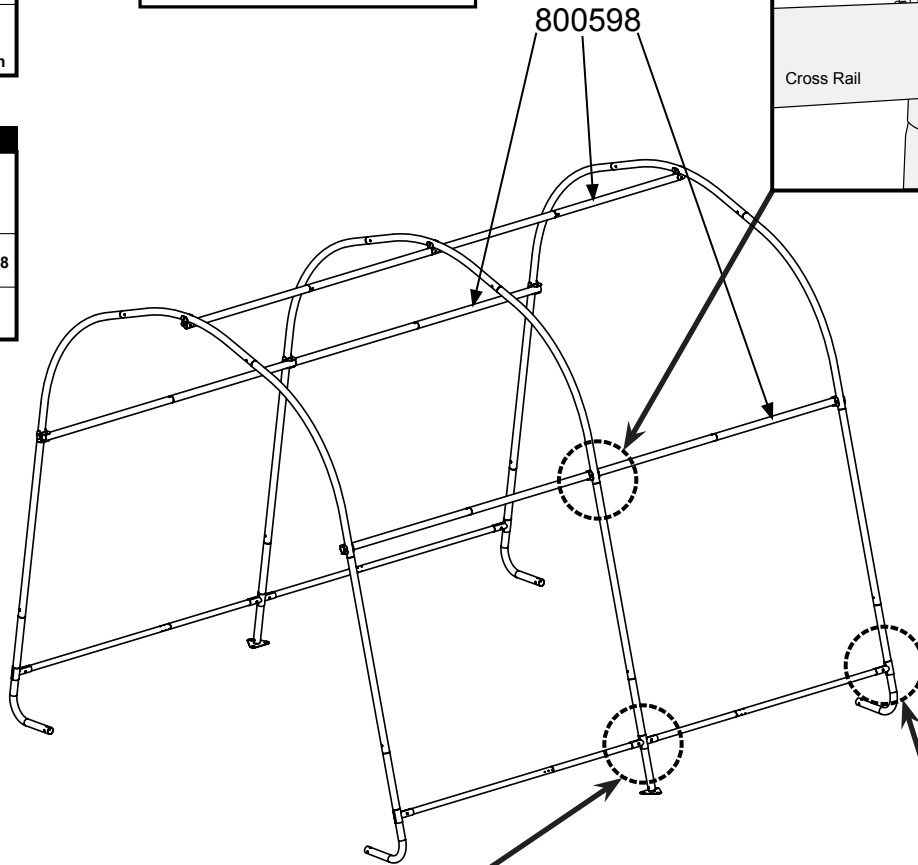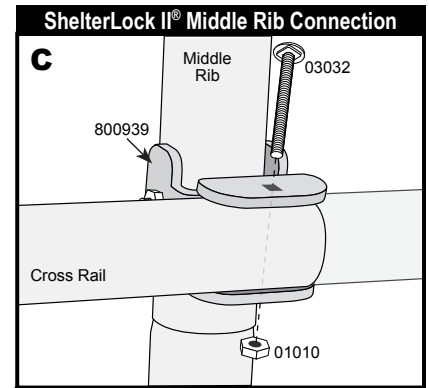

NOTE: All detail views are from the inside.

6. SQUARING UP THE FRAME

- A. Place frame in its final location, which needs to be as flat and level as possible.
- B. Check that the front and rear of the frame measures 10 feet in width.
- C. Measure across opposite corners. **These distances must be equal to within 1 inch.**

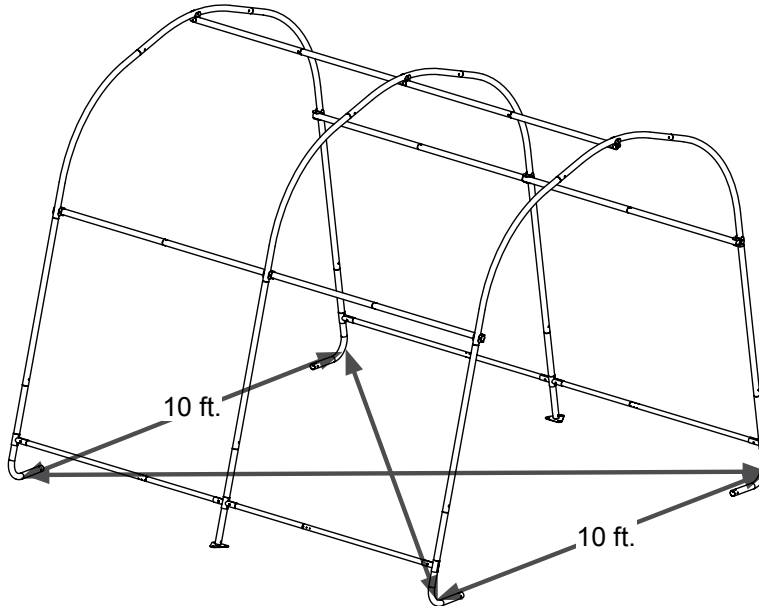

7. PROPERLY ANCHOR FRAME

Your unit comes with 4 temporary Shelter Auger™ Earth Anchors. For best results, ShelterLogic recommends additional anchors, one for each foot of your frame.



- A. Anchors must be placed inside shelter at the corners of the shelter. Insert a 3/4-inch pipe or steel rod, through the eyelet of the auger and screw the anchor into the ground until the eyelet is sticking out of the ground by 1 to 2 inches so it can be anchored to the legs.

If ground is too hard, dig a hole with a shovel or post hole tool. Optional: Place auger in hole and fill with cement.

- B. Thread cable provided through the eyelets of the Anchor as indicated in figure. Secure the cable with the clamps provided.

NOTE:

15" Augers are for temporary use only!
For best results ShelterLogic recommends using our Easy Hooks™ (#10036 4-pack, #10035 6-pack, or #10038 8-pack) for a stronger, more secure installation.

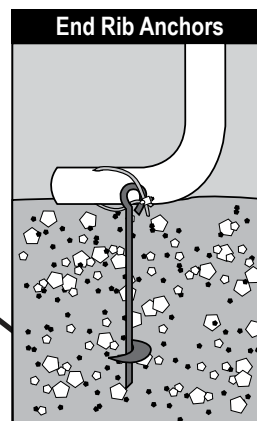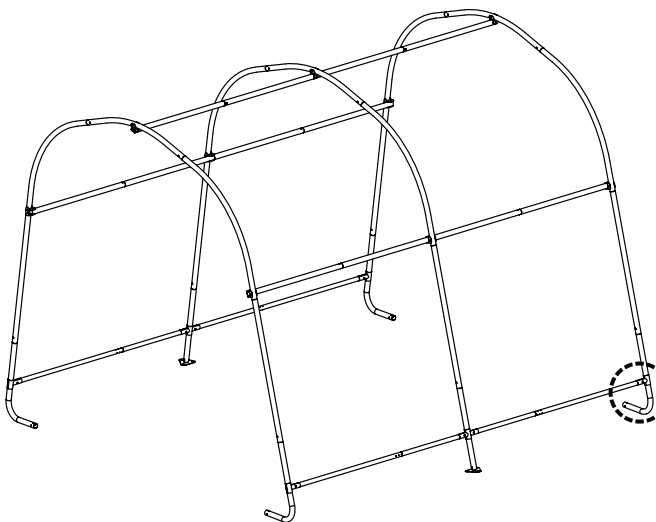


WARNING:

Serious injury to persons or property could result if cover is installed and shelter is not anchored and is left unattended. Shelter must be securely anchored before use.




8. DOOR PANEL AND BACK PANEL INSTALLATION

A. (1) Hold end panel at the top center with white inner surface facing inside of the shelter. (2) Wrap the edges of the fabric panel around the end rib and line up the cross rails with the pre made slits in the fabric.

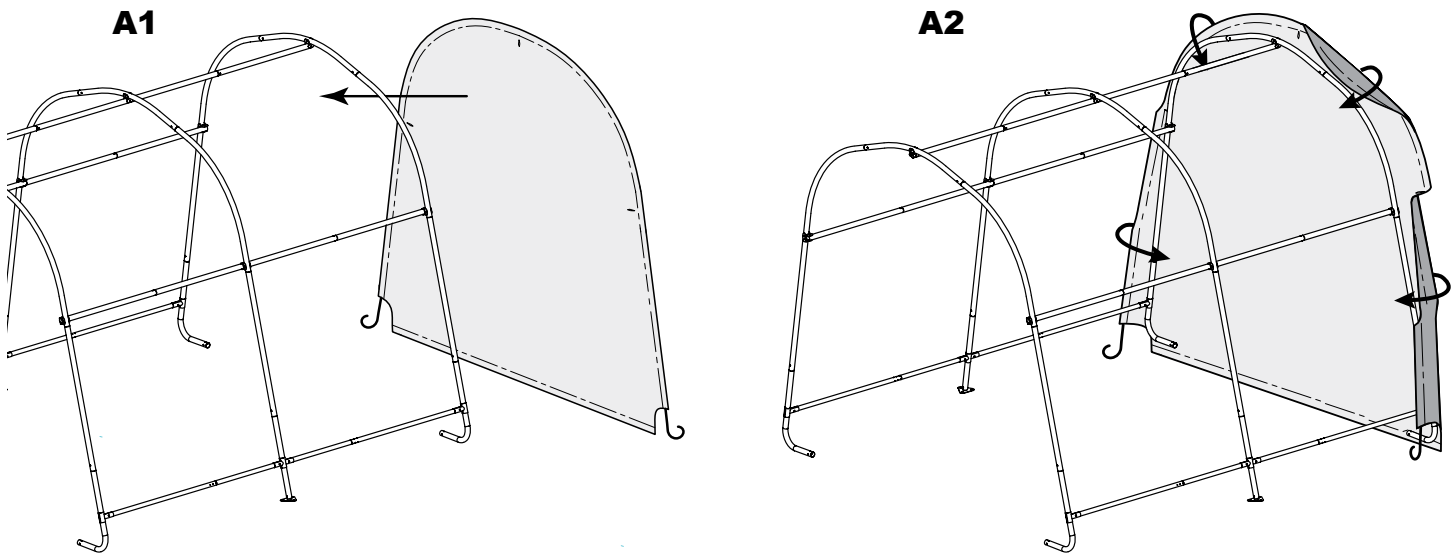




B. (1) Disconnect top cross rail (the horizontal pipe that runs from front to back along the top) from the end rib. Leave the ShelterLock II® attached to the rib with the bolt.

- (2) Pull the end panel over the end rib and bring the end of the cross rail through the cut slit in the panel.
- (3) Reattach the top cross rail to the end rib.

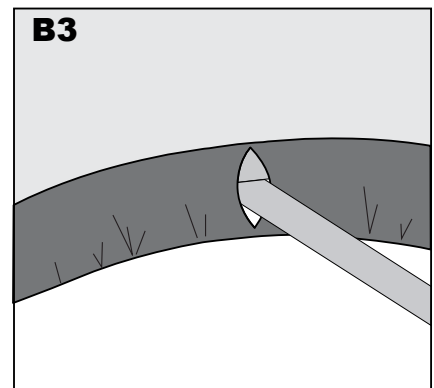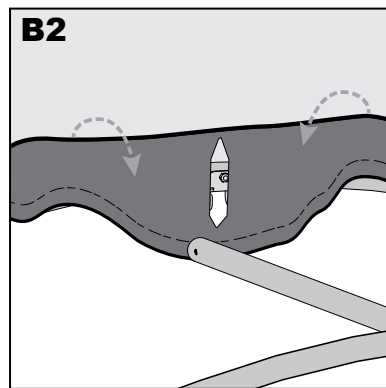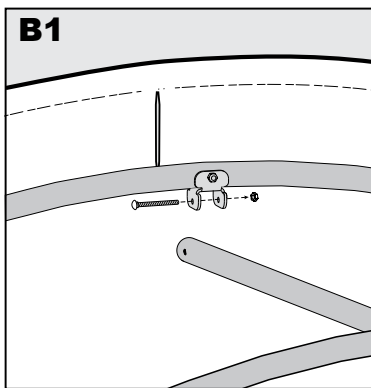


C. (1) Disconnect side cross rail from the end rib.

- (2) Pull the end panel over the end rib and bring the end of the cross rail through the cut slit in the panel.
- (3) Reattach the side cross rail to the end rib.

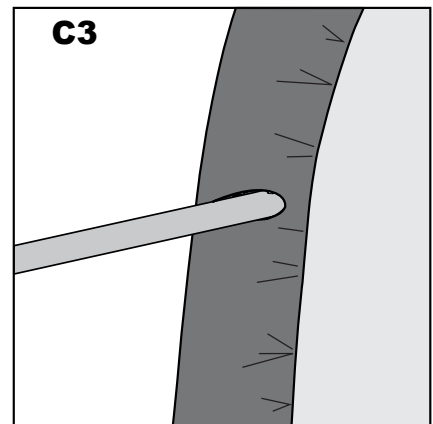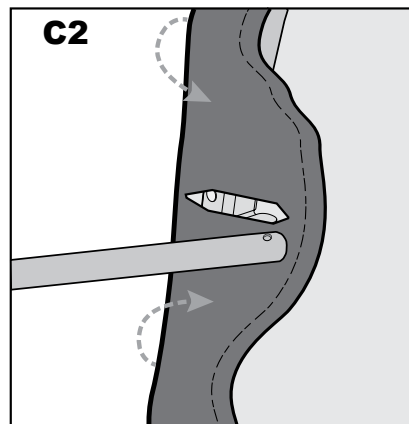
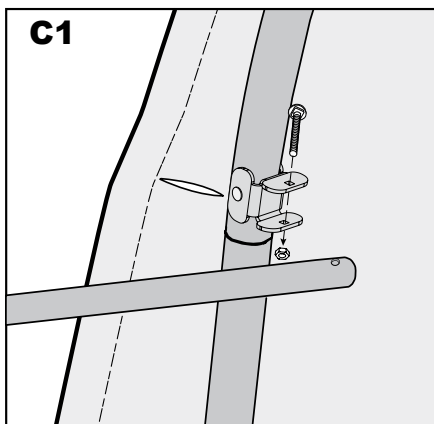


8. END PANEL INSTALLATION - continued

- D. At the bottom, where the webbing exits the pocket on each side of end panel, pull webbing as you would a drawstring to remove the slack. **Be careful not to pull the webbing strap out of the webbing pocket.**

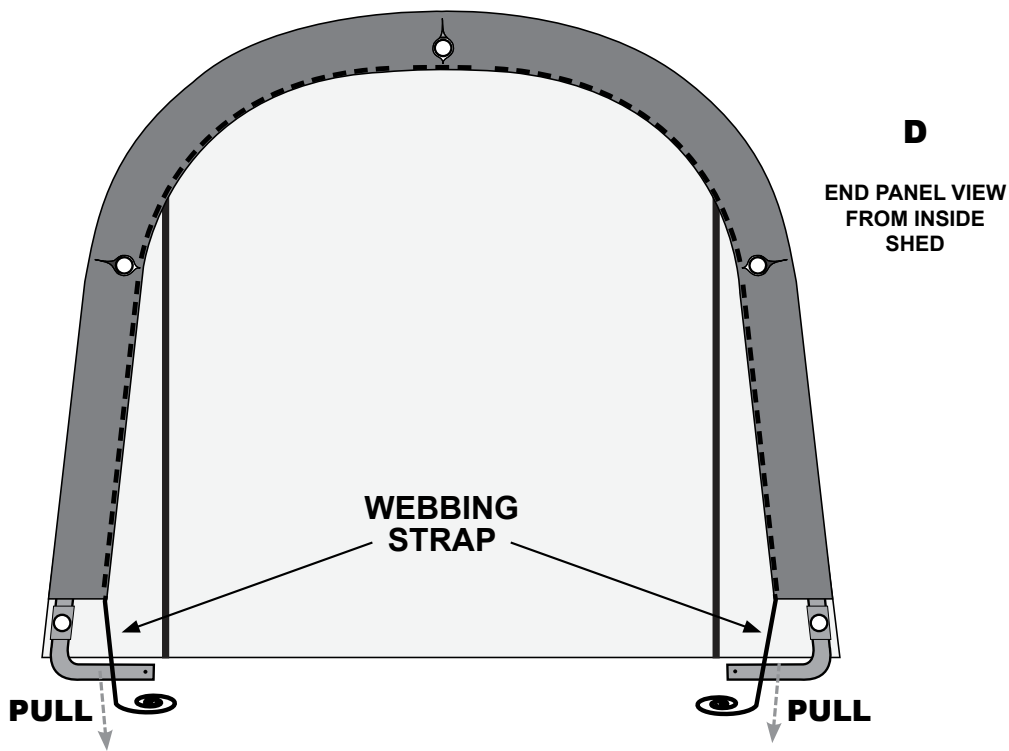


- E. Insert the “S”- Hook on ratchet into hole on the leg bend. Insert the webbing into the spindle of the ratchet and pull tight. Wind the ratchet so that the webbing overlaps itself. *Position the end panel so that it is centered on the building before fully tightening the end panel.*
- F. Tighten ratchets, alternating from one side to the other, until the end panel is tight. **NOTE: Keep zippers closed when tightening door panel.**

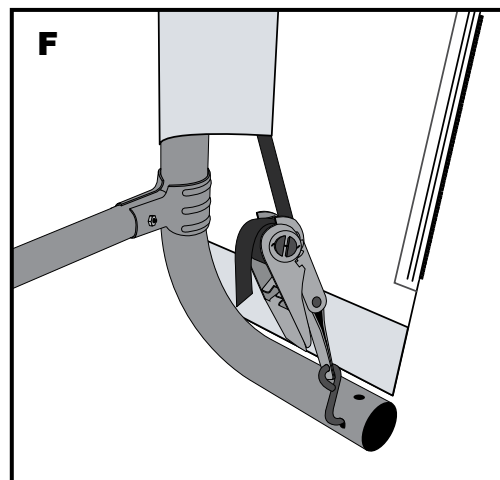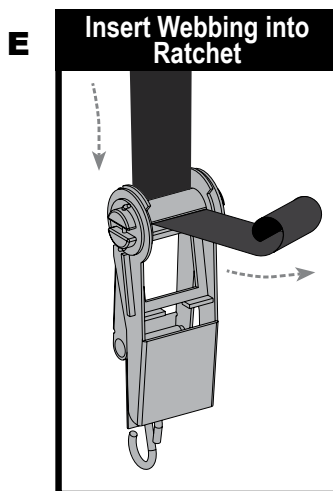

9. INSTALLING COVER WITH COVER RAILS

- A. Lay the cover on the ground next to the frame with inside of the cover (the side with the pipe pockets) facing down and the webbing on the front and rear of the corner of the building. Pull cover over the frame.
- B. Insert the "S"- Hook on ratchet into hole on the leg bend. Insert the webbing into the spindle of the ratchet and pull tight. Wind the ratchet so that the webbing overlaps itself.
- C. Disassemble cover rails and slide through fabric pockets at each leg and reattach with clamps to each leg. Repeat this on other side. Push down on cover rails to tighten cover, before tightening bolts completely.
- D. Check and tighten Ratchets and Cross Rails monthly to ensure the cover is tight.

NOTE: The *ShelterLogic*® logo should be oriented as shown below.

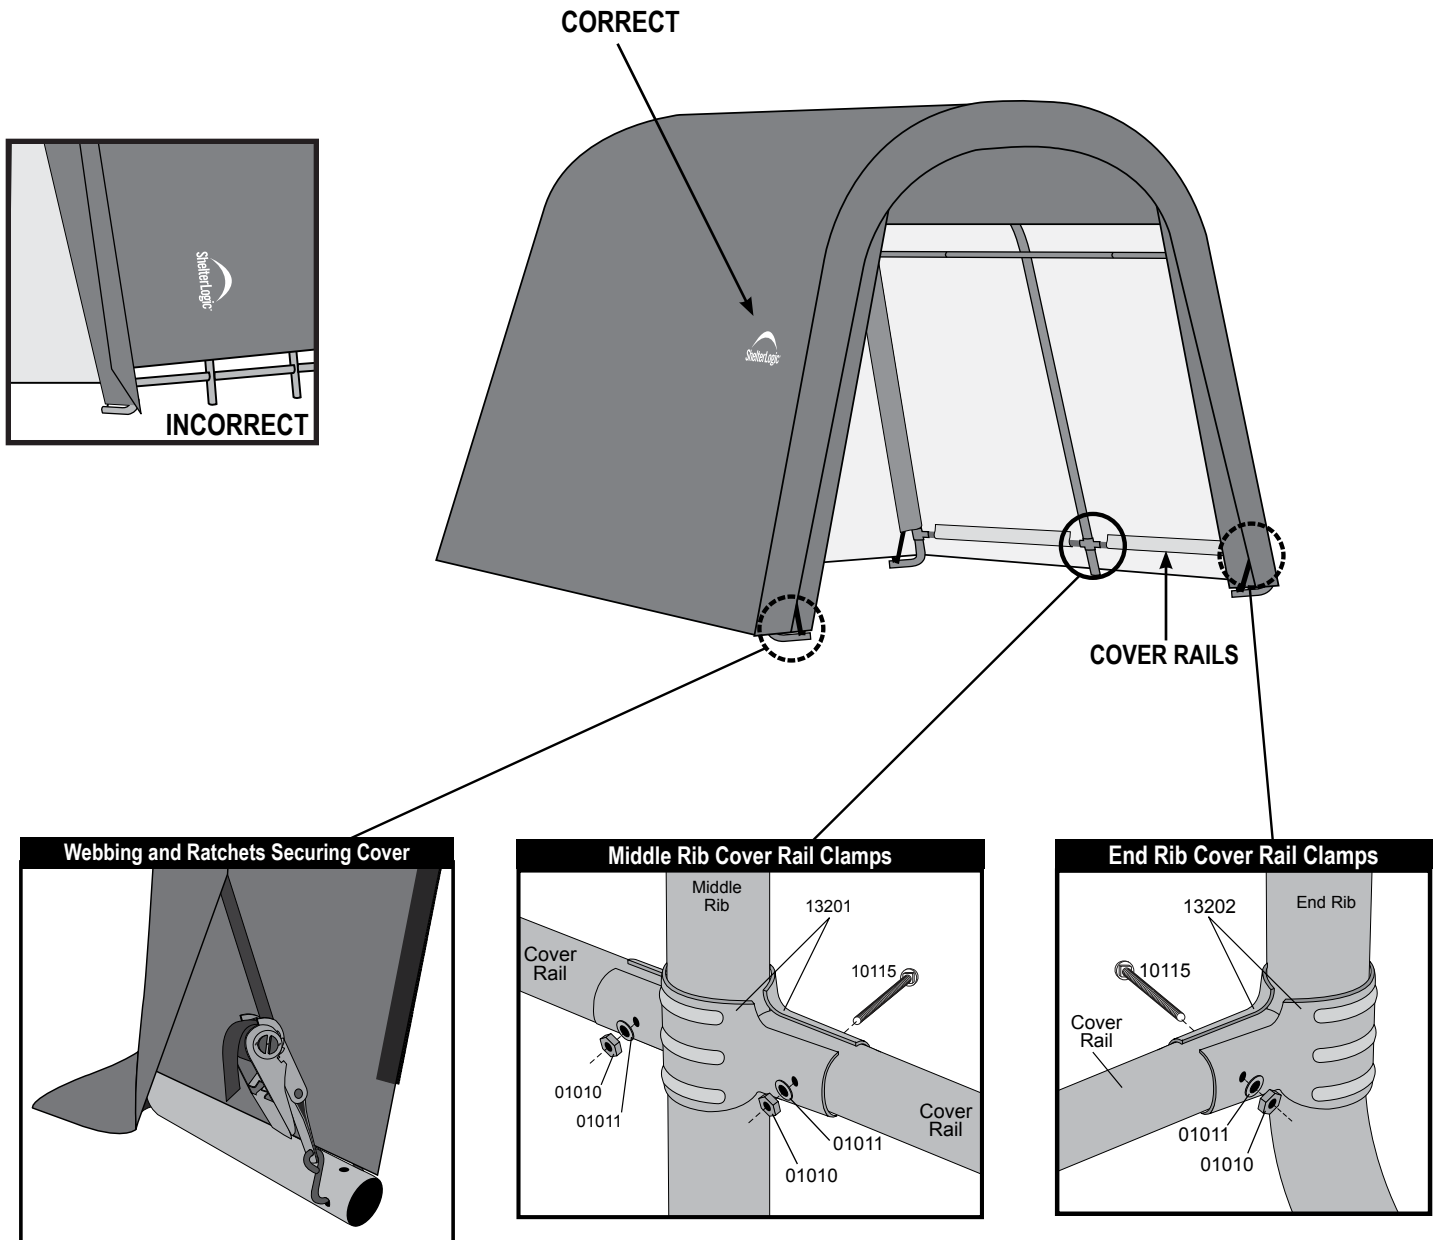

NOTE: All detail views are from the inside.