

INSTALLATION & CARE

2004-2015 NISSAN TITAN SEQUENTIAL PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.


TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	8 mm socket	10 mm socket	Flathead screwdriver
			
Phillips Screwdriver	Needle Nose Plier		
			

PRODUCT NUMBER

2LHP-TIT04-SQ-RS
2LHP-TIT04JM-SQ-RS
2LHP-TIT04BK-SQ-RS
2LHP-TIT04G-SQ-RS


LET'S START THE INSTALLATION

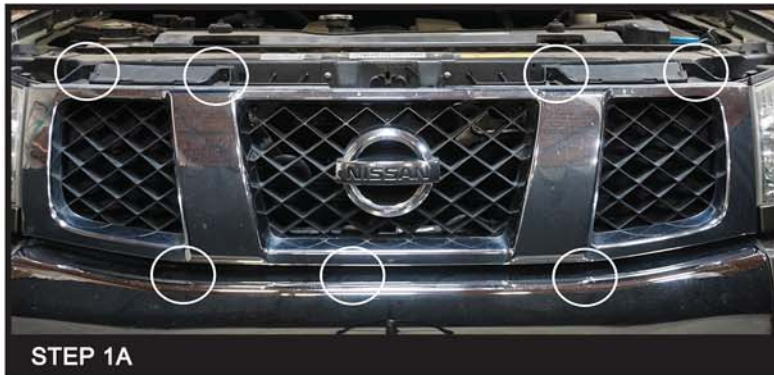


Turn counterclockwise about 45 degree to unclip the seven plastic retainers




Turn counterclockwise about 45 degree to unclip the seven plastic retainers

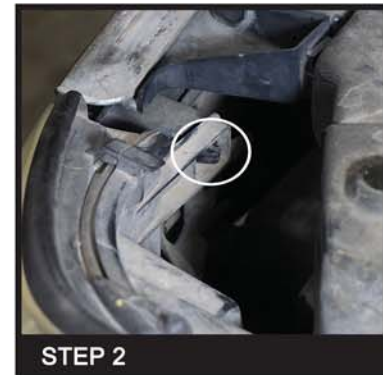

Unclip both side of the front grille

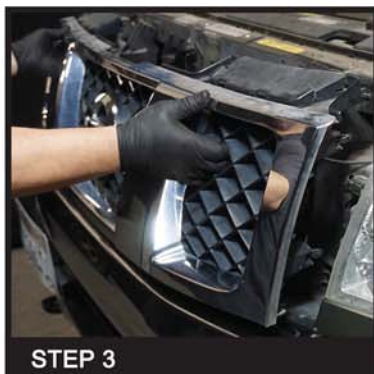

Remove the front grille

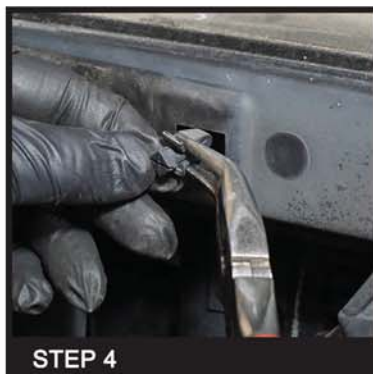

Remove the seven front grille plastic retainers on the frame



Reinstall the seven plastic retainers back on the front grille



Remove the phillips screw on the wheel liner



STEP 7

Remove the 10mm and the 8mm headlight bolts



STEP 8

Remove the 8mm headlight bolt



STEP 9

Disconnect the headlight harness and remove the 8mm headlight bolt



STEP 10

Unseat the factory headlight housing



STEP 11

Remove the factory headlight housing



STEP 12A

Unclip to remove the filler panel



STEP 12B

Unclip to remove the filler panel



STEP 12C

Unclip to remove the filler panel



STEP 13

Remove the Phillips head screw



STEP 14

Remove the parking light bulb and the signal light bulb from the harness



STEP 15

Replace the parking light socket and the signal light socket gaskets




STEP 16

Connect the sockets to the parking light and signal light plug from the new headlight housing



STEP 17

Install the headlight harness to the new headlight housing

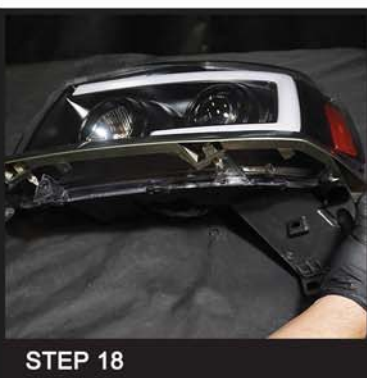


STEP 18

Install the filler panel on the new headlight housing



STEP 19

Seat the new headlight assembly in place

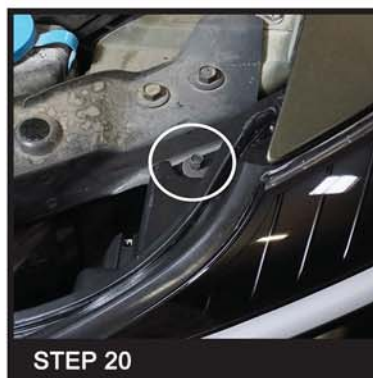

STEP 20

Reinstall the 8mm headlight bolt



STEP 21

Connect the headlight harness and reinstall the 8mm headlight bolt




STEP 22

Reinstall the 10mm and the 8mm headlight bolts



STEP 23

Reinstall the phillips screw on the wheel

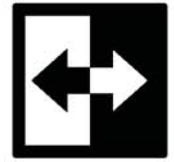

STEP 24

Please repeat the steps from 6 to 23 for the opposite side



STEP 25

Reinstall the front grille

