



## Fog Light Wiring Kit Installation

The set of wiring kit is only applying to the fog light sets which packed together with the wiring kit. To attach different fog lights and different vehicle, the fog light wiring kit will be different. Before starting installation, you are expected to carefully read the instructions.

- Right tools are required to ensure proper execution of the work. Such as wrench, zip ties, flat-tip screwdriver, philips screw driver, clip remover, shop towel, cardboard or blanket and the so on.
  - Bend all harnesses together so that they do not move around loosely, otherwise the harnesses may break or short circuit, and accidents, electric shocks or fire may occur.
  - When connecting the harnesses or plugs, insert the connectors firmly until they lock securely into place.
  - Disconnect the negative (-) terminal of the battery before installation. Make sure that lamps, air conditioner and other devices are switched off.
- NOTE:** The memories of the radio presets, clocks, etc. can be erased by disconnecting the battery cable. Write down these presets before disconnecting the battery cable.
- Then open the hood and remove the front bumper if necessary, then install fog lights to the proper position.
  - Turn the steering wheel clockwise or counterclockwise. Left-hand-drive vehicle turn clockwise, right-hand-drive vehicle turn counter-clockwise. Then remove the front inner fender of the driver side.
  - Route the main wiring harness (A) through the engine room to the lamp and connect with bulb (B). Attach relay to relay connector (C) then attach black wire (Negative (-)) of main wiring harness to frame metal parts to create a ground circuit (D). Attach red wire (Positive (+)) of main wiring harness to Positive (+) of the battery (E).
  - Route the main wiring harness (A-1) through the cut grommet (F) and connect with main switch wiring harness (G).
- NOTE:** Some vehicle models may be pre-wired, then find out the correct circuit and plug it together.
- Find an appropriate location to mount the switch. It's usually on the dashboard but some vehicle's switch position is near the hand brake.
  - Remove the driver's dashboard lower cover if necessary, then find the power line of the parking lamp (Small lamp) (H-1) and connect with the red wire (Positive (+)) of the main switch harness (H). Attach the black wire (Negative (-)) of main switch wiring harness to metal frame to create a ground circuit (I). Then connect the switch (J) with switch connector (K) and put the switch to the right position.
  - Push the fog light switch to the "ON" position. (Indicator (L) in switch light up.)
  - The fog lights operate only in the low-beam position. Adjust the light aiming according to local laws and regulations.
  - If the fog lights don't turn on, check the fuse (Most vehicle's fuse box is located in driver's dashboard lower cover) and all wire connectors, including the ground cable.
  - The fog lights lenses may cloud when the outside temperature is cold. It is normal and would go away in warm weather.
  - Do not touch the bulb with bare hand. The bulb becomes very hot during operation or just after use. Stains or greasy substances will shorten the service life of the bulb.

Illustration of Fog light Wiring Kit Installation on the Vehicle

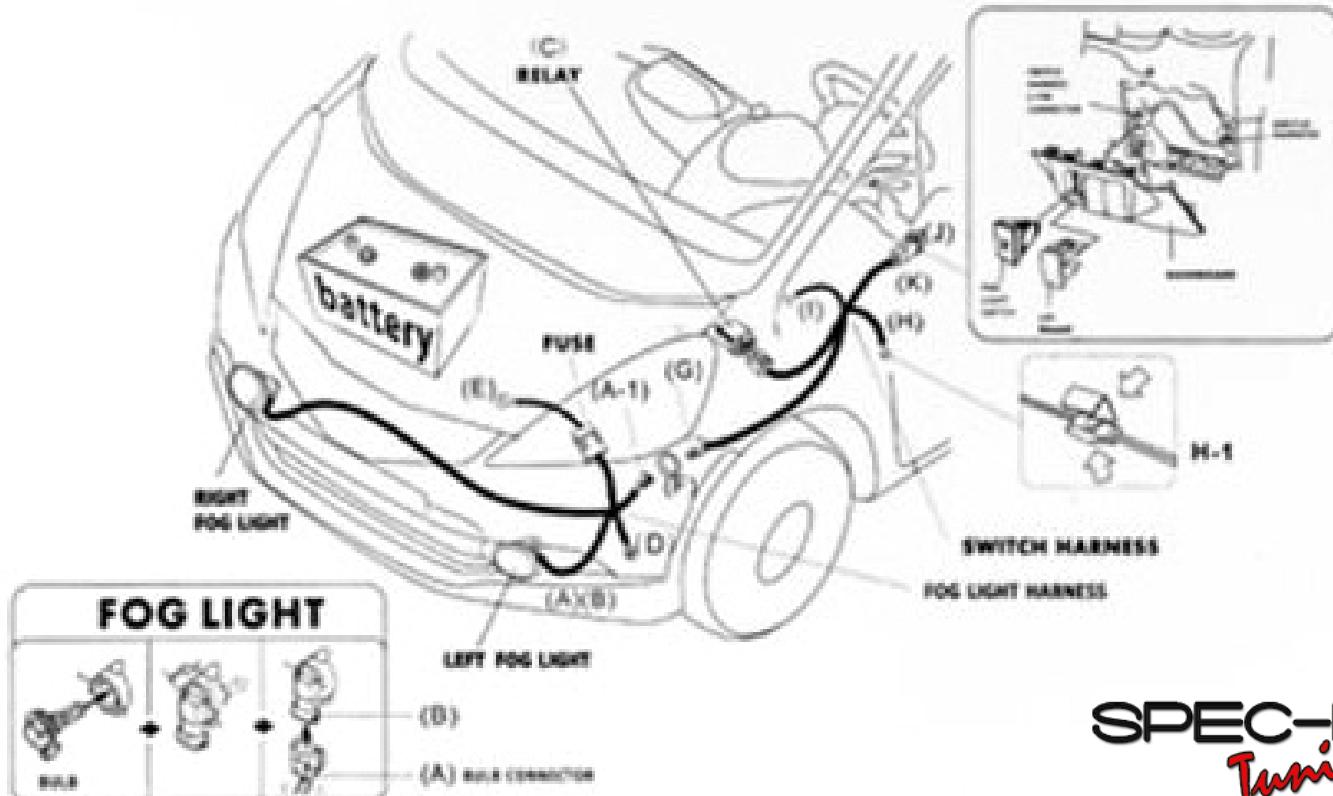

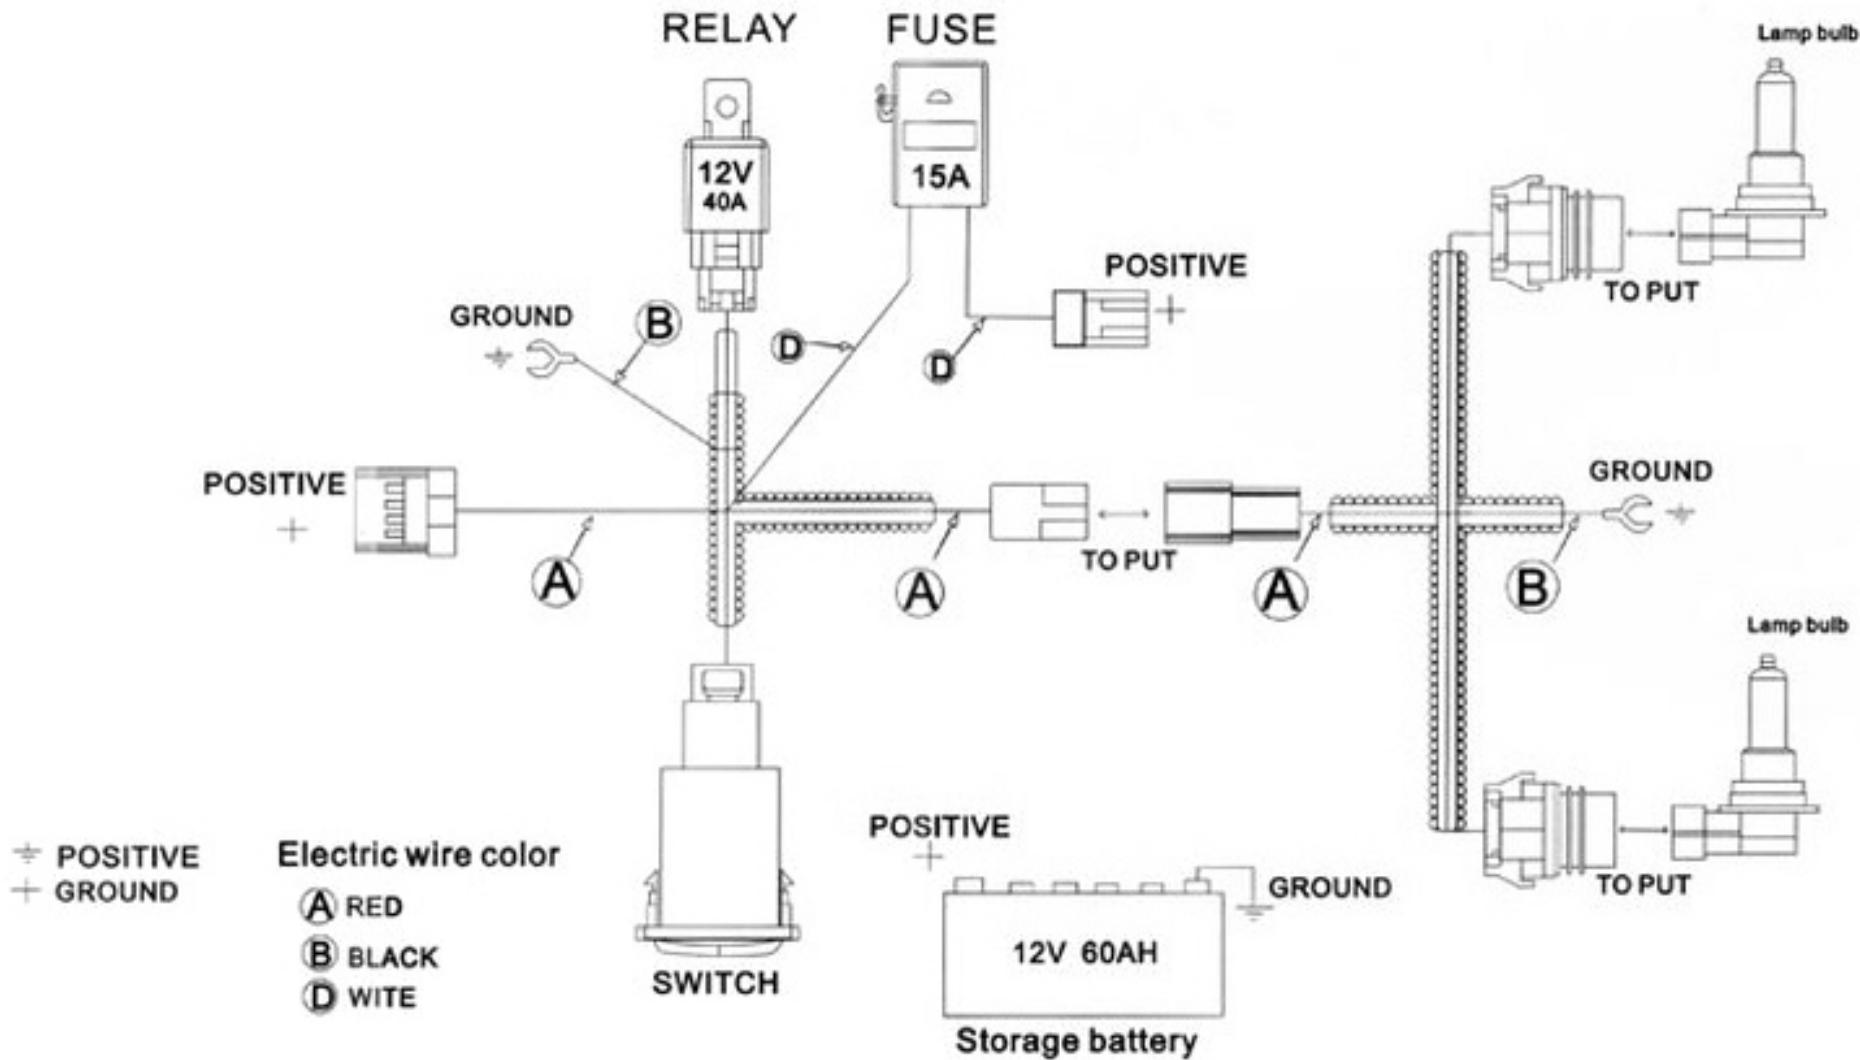

Learn more about off-road lights on our website.