








INSTALLATION & CARE

2016-2020 HONDA CIVIC LED SEQUENTIAL TAIL LIGHT INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	1/4" Socket Extension	8 mm Socket	10 mm Socket
			
Trim Pad Remover	Plastic Pry bar	Blade Cutter	
			

PRODUCT NUMBER


LT-CV164CLED-SQ1-RS
 LT-CV164RLED-SQ1-RS
 LT-CV164BKLED-SQ1-RS
 LT-CV164JMLED-SQ1-RS
 LT-CV164GLED-SQ1-RS

LET'S START THE INSTALLATION




STEP 1

Remove the two 8mm outer tail light mounting bolts

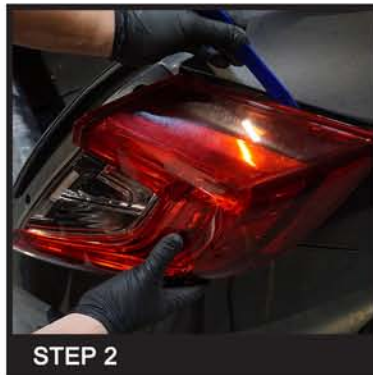

STEP 2

Unseat the factory outer tail light housing

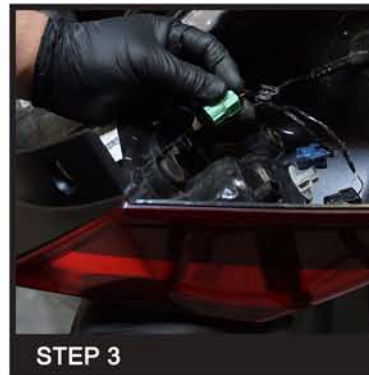

STEP 3

Disconnect the tail light harness



STEP 4

Remove the brake light, signal light, and reverse light sockets from the factory outer tail light



STEP 5

Remove the light bulbs from the brake light, signal light, and reverse light sockets




STEP 6

Install the brake light, signal light, and reverse light plugs from the new tail light housing, (+) to (+) and (-) to (-)



STEP 7A

Use the blade to cut open the electrical tape to run the tail light extension wire

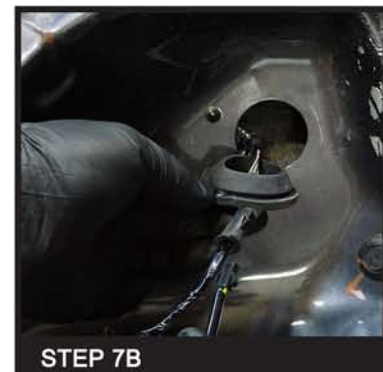

STEP 7B

Use the blade to cut open the electrical tape to run the tail light extension wire



STEP 7C

Use the blade to cut open the electrical tape to run the tail light extension wire



STEP 8

Run the extension wire to the inside of the trunk




STEP 9

Use the electrical tape to rewrap the wire rubber grommet



STEP 10

Reinstall the wire rubber grommet

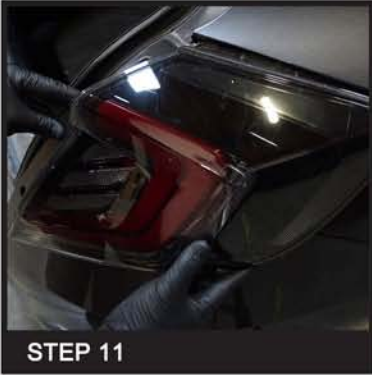

STEP 11

Connect the tail light harness and seat the new outer tail light assembly in place



STEP 12

Reinstall the two 8mm outer tail light mounting bolts



STEP 13

Please repeat the steps from 1 to 12 for the opposite side



STEP 14

Remove the nine plastic retainers on the trunk lid lining



STEP 15

Remove the trunk lid lining




STEP 16

Disconnect the inner tail light harness



STEP 17

Remove the two 10mm mounting bolts and the 10mm mounting nut

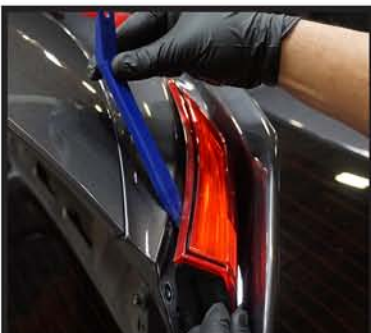

STEP 18

Unseat the factory inner tail light housing



STEP 19

Remove the factory inner tail light housing



STEP 20A

Seat the new inner tail light assembly in place



STEP 20B

Seat the new inner tail light assembly in place



STEP 21

Reinstall the two 10mm mounting bolts and the 10mm mounting nut



STEP 22

Connect the inner tail light harness and the extension wire harness




STEP 23A

Zip tie the extension wire on the trunk hinge, be very careful to make sure to leave enough space to close the trunk



STEP 23B

Zip tie the extension wire on the trunk hinge, be very careful to make sure to leave enough space to close the trunk

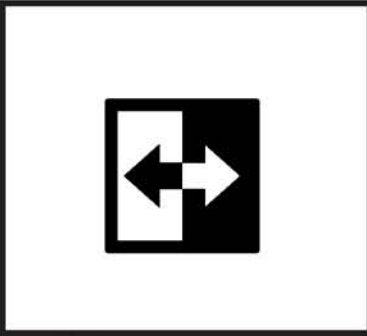

STEP 24

Please repeat the steps from 16 to 23 for the opposite side



STEP 25

Reinstall the trunk lid lining



STEP 26

Reinstall the nine plastic retainers



STEP 27

Close the trunk and complete installation

