INSTALLATION & CARE



INNOVATE

PERFESSIONA

SERVI

2016-2020 HONDA CIVIC LED SEQUENTIAL TAIL LIGHT INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- · Please wear proper protective equipment before you work on any vehicle.
- · An assistant is recommended when removing the front bumper from your vehicle.
- · Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

PRODUCT NUMBER

LT-CV164CLED-SQ2-RS LT-CV164RLED-SQ2-RS LT-CV164BKLED-SQ2-RS LT-CV164JMLED-SQ2-RS LT-CV164GLED-SQ2-RS

LET'S START THE INSTALLATION



Remove the two 8mm outer tail light mounting bolts



Unseat the factory outer tail light housing



Disconnect the tail light harness



Remove the brake light, signal light, and reverse light sockets from the factory outer tail light




Remove the light bulbs from the brake light, signal light, and reverse light sockets



Install the brake light, signal light, and reverse light sockets to the wire plugs from the new tail light housing, (+) to (+) and (-) to (-)



Use the blade to cut open the electrical tape to run the tail light extension wire

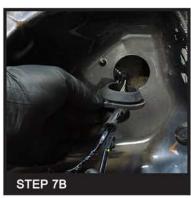


Use the blade to cut open the electrical tape to run the tail light extension wire



Use the blade to cut open the electrical tape to run the tail light extension wire



Run the extension wire to the inside of the trunk

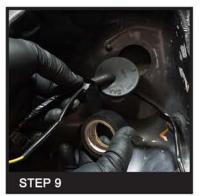

Use the electrical tape to rewrap the wire rubber grommet



Reinstall the wire rubber grommet



Connect the tail light harness and seat the new outer tail light assembly in place



Reinstall the two 8mm outer tail light mounting bolts



Please repeat the steps from 1 to 12 for the opposite side



Remove the nine plastic retainers on the trunk lid lining




Remove the trunk lid lining



Disconnect the inner tail light harness



Remove the two 10mm mounting bolts and the 10mm mounting nut

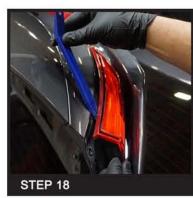

Unseat the factory inner tail light housing



Remove the factory inner tail light housing



Seat the new inner tail light assembly in place



Seat the new inner tail light assembly in place



Reinstall the two 10mm mounting bolts and the 10mm mounting nut



Connect the inner tail light harness and the extension wire harness




Zip tie the extension wire on the trunk hinge, be very careful to make sure to leave enough space to close the trunk



Zip tie the extension wire on the trunk hinge, be very careful to make sure to leave enough space to close the trunk



Please repeat the steps from 16 to 23 for the opposite side

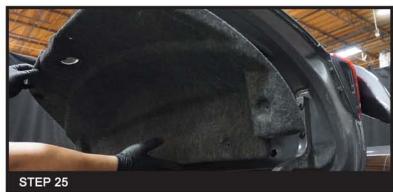

Reinstall the trunk lid lining



Reinstall the nine plastic retainers



Close the trunk and complete installation

