## PART NO. 82385 & 82395

## Instruction Sheet DODGE H/D TRUCK FRONT CASTER/PINION ANGLE KIT

This part should only be installed by personnel who have the necessary skill, training and tools to do the job correctly and safely. Incorrect installation can result in personal injury, vehicle damage and / or loss of vehicle control.

1. Before beginning any alignment always check for loose or worn parts, tire pressure, and odd tire wear patterns.

CAUTION: Always use appropriate safety devices to support the weight of the vehicle while servicing any suspension component.

Note: Remove and replace the front lower control arm to axle bolts one at time.

- Install the cam bolts by placing one cam at the head of each bolt, slide the bolt through the axle bracket and control arm, then place another cam washer on the bolt and then the locknut.
- 3. Repeat for other side.
- 4. To adjust loosen lock nut and rotate cam bolts. Both cam bolts must be in the same relative position.

Note: Cross caster cannot be set on this type of axle. Having the bolts in different positions on each side will load the bushings and possibly cause setback problems, but will not affect cross caster.

- 5. Tighten locknuts to 190 N·m (150 lb-ft).
- Check alignment and/or pinion angle readings and road test vehicle.

Always check for proper clearance between suspension components and other components of the vehicle.

