

Fuel Pump Strainer Installation Instructions

When assembling the strainer assembly to pump, do not apply pressure on the strainer material as shown below.

Apply pressure at location **A** to assemble the strainer to the pump.

Do not apply pressure on area **B** to assemble.

This may cause damage to the strainer assembly.

