


Technical Notice

Float Arm Assembly Instructions

Please take note that the float arm is not installed / attached to the Fuel Module Assembly. It must be properly mounted to the Fuel Level Sender before installing the Fuel Module Assembly into the Fuel Tank.

WARNING: Manipulate the Fuel Module, Fuel Level Sender, and Float Arm very carefully. Any damage or contamination to these components will affect the accuracy of the fuel level reading. Damaged part due to installation will void the warranty.

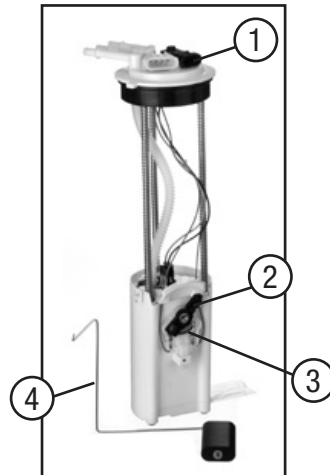

Identify Components

1. Fuel Module
2. Pivot Hole
3. Fuel Level Sender
4. Float Arm

ASSEMBLE FLOAT ARM

1. Insert the float arm into the pivot hole of the fuel level sender (Picture 1)
2. Carefully push on the float arm until it snaps into the fuel level sender (Picture 2).

Picture 1



Picture 2

