
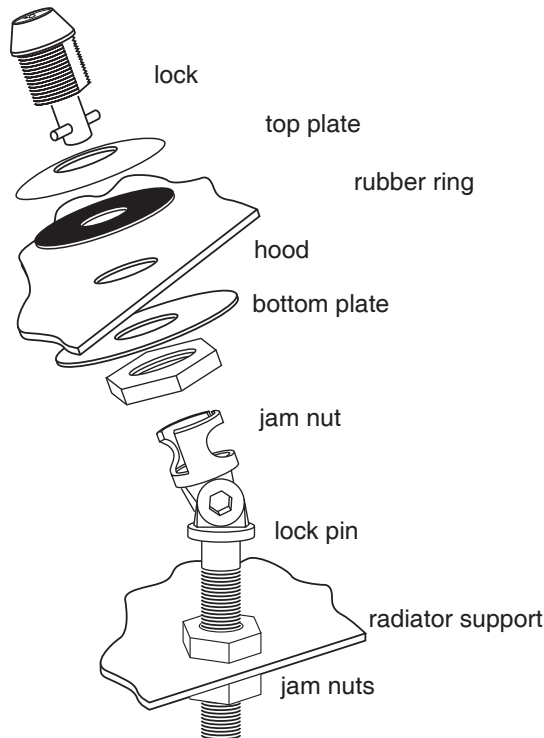
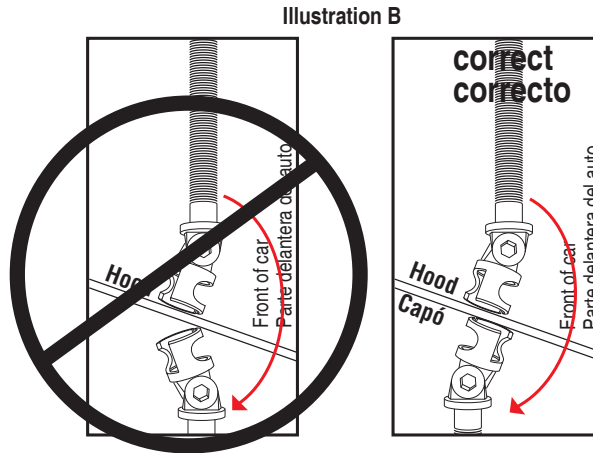


WARNING!
Must be used with OEM
hood latch! Not to be
used alone as hood
closure device!

Installation Instructions

1. Determine a suitable location for the hood lock to be installed (directly above the radiator support in an accessible location)
2. Hold the mounting post upside down, against the outside of the closed hood (at the location where the hood lock will be installed). While keeping the threaded portion vertical, adjust and then tighten the swivel portion to fit the slope of the hood (see Illustration A).
3. With the head tightened at the proper angle the post can be flipped back over and rotated to match the slope of the hood from inside the engine compartment (see Illustration B).
4. Drill clearance holes in the radiator support for the threaded post to pass through.
5. Attach post to the radiator support with a nut above and below the support hole if necessary (if you have limited clearance under your hood post can be installed without top nut), but do not tighten.
6. Adjust the height of the post until the tip just makes contact when the hood is closed. Put a dab of grease on the tip of the post to mark the underside of the hood.
7. Drill a hole in the hood for the lock to fit into.
8. Install hood lock and mounting plates as shown in the diagram
9. Adjust lock pin and hood lock until they fit together

Installation tip: You may drill a hole for the hood lock slightly larger than the lock to allow for adjustment from side to side. Also hole in radiator support can be slotted to allow location of post to be adjusted if necessary.

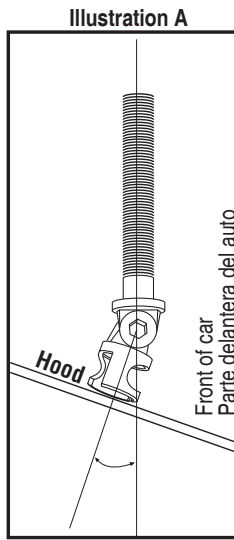

SPECTRE™

©2010 Spectre Performance

Learn more about hoods + components we have.