2008-14 Audi TT LED Taillight





Tools required





1. Before



2. Open trunk



3. Open access hole cover



4. Taillight mounting screw



5. Loosen taillight mounting screw



6. Remove mounting screw





7. Gently pry taillight loose



10. Connect taillight harness to LED taillight



8. Remove factory taillight



11. Place LED taillight into position then press firmly to lock



9. Disconnect taillight harness



12. Secure LED taillight with taillight mounting screw





13. Replace access hole cover

14. Close trunk

15. Done









LED turn signals can be configured to illuminate sequentially or simultaneously (standard).



