




2650-1291-00

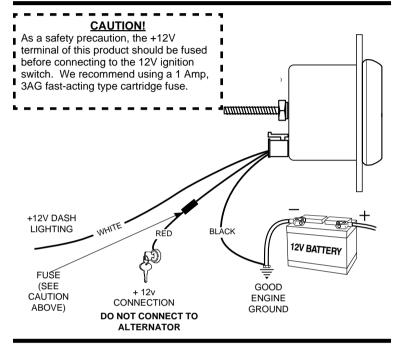

Installation

- 1. Check that you have all parts required for installation.
- 2. Disconnect the negative (-) battery cable.
- Gauge mounts in a 52.4mm hole. Use supplied brackets and nuts to secure to dash.
- 4. Attach black wire from harness to good engine ground.
- Attach red wire from harness to +12V terminal on ignition switch or other +12V power source. Use a switched power source.
- Attach white wire to dash lighting or switchable +12V light source.
- 7. Reconnect negative (-) battery cable.

Power-Up

The pointer will move backward to the stop pin and then display the correct voltage. This procedure is an auto-calibration function and is performed on every power-up. While this test is being performed, the gauge may make a clicking sound. This is normal.