


## HOOD SHIELD INSTALLATION and CLEANING

- Open hood.
- 2. Install (2) brackets on hood shield flange using (2) machine screws and (2) black plastic washers.
- 3. Remove (4) plastic seal retaining fasteners that align with the pre-drilled holes in the hood shield. Next, carefully separate the hood seal / gasket from the areas of the hood that align with the hood shield flange. **NOTE: Exercise extreme caution not to tear or damage the hood seal / gasket when seperating from hood.**
- 4. Reposition the hood shield with the tabs sliding between the hood and rubber seal and align with holes.
- 5. Separate Fastener Assembly in two pieces. Gently pull back hood seal / gasket and place the female portion of fastener through hood shield and into hood. Replace hood seal /gasket. Install male portion of fastener as illustrated. Repeat for remaining (3) fasteners. **DO NOT OVER TIGHTEN**
- 6. Tighten all (4) fasteners until snug to secure hood shield to hood.
- 7. Note the location where the brackets will align with hood edge and mark with a grease pencil.
- 8. Center a piece of protective film over each grease pencil mark, and wrap around the hood edge.
- 9. Slide each end bracket over hood edge, ensuring that each is centered on the protective film previously installed.
- 10. Turn both of the hood bumpers counter clockwise 1 1/2 turns.
- Close Hood.
- 12. Apply (4) bump ons to surface of hood.

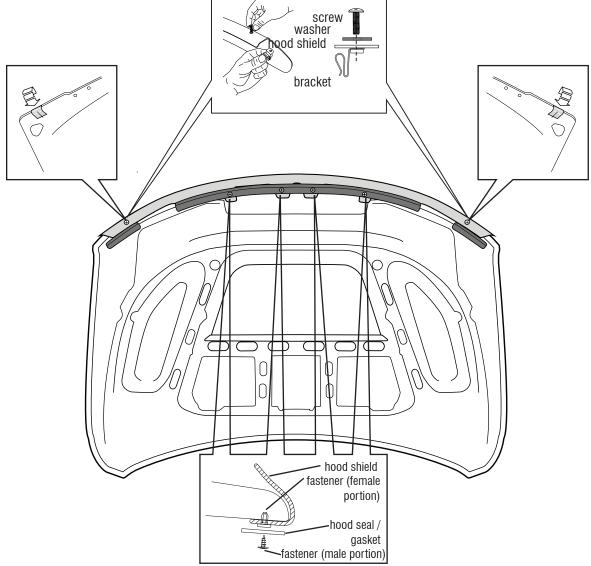

**IMPORTANT:** Before driving, ensure the hood shield is properly secured to vehicle. Clean with a **SOFT** cloth and soap and water ONLY! Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.