


GF10936

Caution: Verify that the battery cable clamp is fully seated on the battery post. Tighten the nut to 5nm (44 in-lbs or 3.6 ft-lbs). If you do not have a torque wrench, carefully tighten the nut until the battery cable clamp cannot be rotated by hand. Over-tightening the nut may result in bolt breakage.

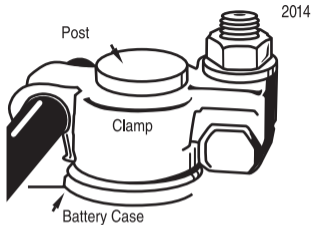

A fully seated battery clamp makes contact with the battery case.

[View other performance starting and charging made by Standard on our website.](#)