

GF11233A

- Clean hole to ensure clean threads.
- Torque to 15 ft/lb (20 n/m)(max 20 ft/lb)
- Do not over torque. Over torque will result in check engine light.
- Always use new connector harness when changing knock sensors.
- Do not put RTV directly on part.
- Failure to follow this instruction sheet will result in engine codes being triggered.

Standard provides the best in replacement ignition parts equipment.