

GF5728B

(T.F.I.) Module Thick Film Integrated Ignition System Removal

1. Disconnect harness connector from TFI module.
2. Remove two screws retaining TFI/heatsink assembly to radiator support bracket.
3. Remove two screws retaining TFI module to heatsink and remove TFI module.
4. Clean heatsink surface thoroughly before installing new module.

Installation

1. Coat metal baseplate of the TFI ignition module uniformly with silicone compound, approximately 0.79mm (1/32-inch). Use silicon Dielectric Compound.
2. Position module onto heatsink and tighten two retaining screws to 1.7-4.0 N.m (15-35 lb-in.).
3. Install TFI module/heatsink assembly to radiator support bracket using two retaining screws.
4. Connect wire harness to the TFI module.

NOTE: No distributor calibration is required and initial timing adjustment is not normally required unless the distributor has been removed.